


2. Electrical Components Location








A: ENGINE


2. SENSOR

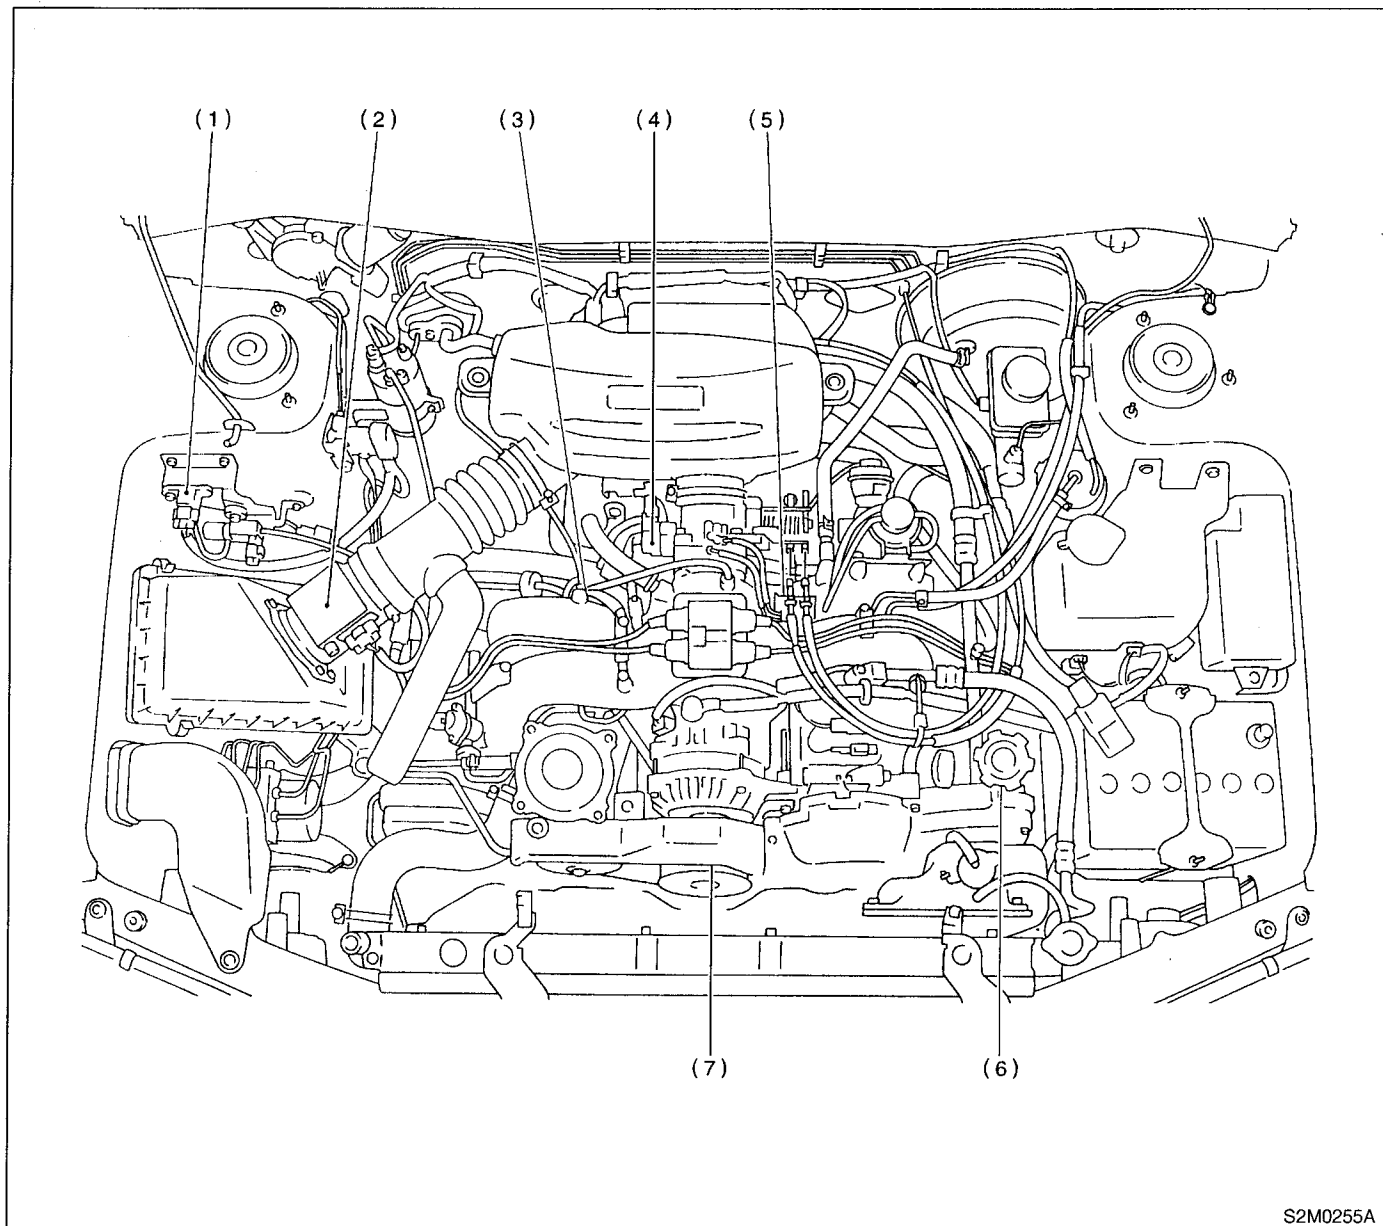

S2M0255A

- | | |
|---------------------------------------|--------------------------------|
| (1) Pressure sensor | (4) Throttle position sensor |
| (2) Mass air flow sensor | (5) Knock sensor |
| (3) Engine coolant temperature sensor | (6) Camshaft position sensor |
| | (7) Crankshaft position sensor |

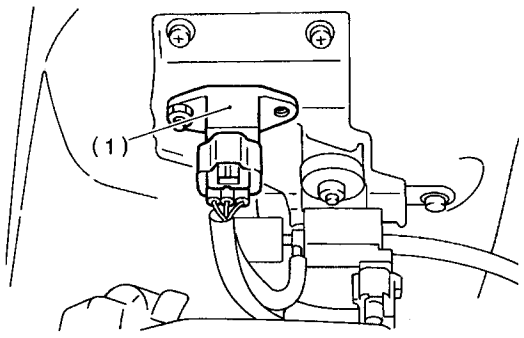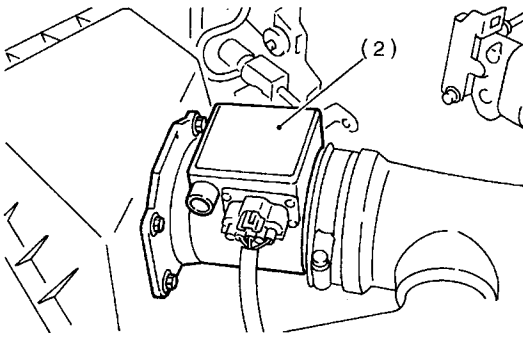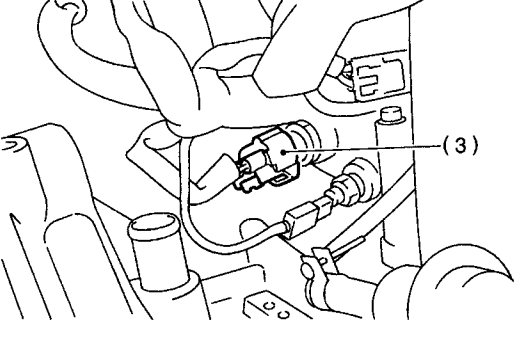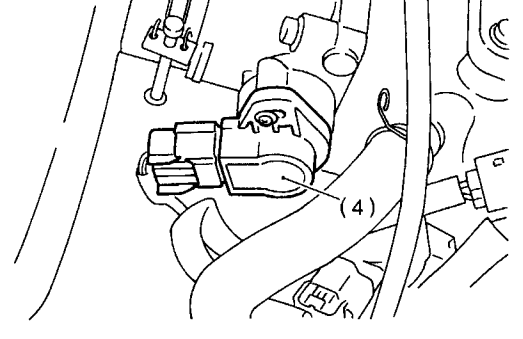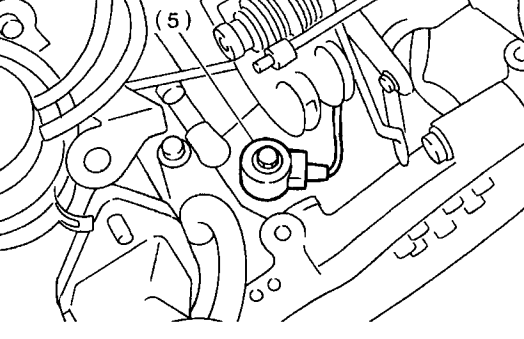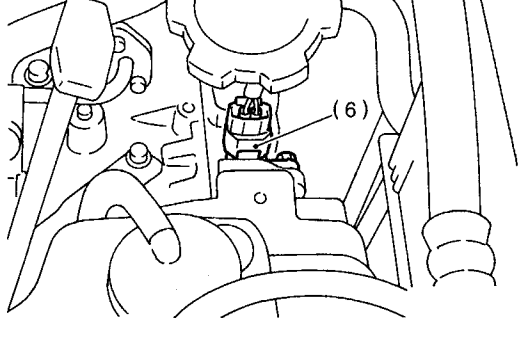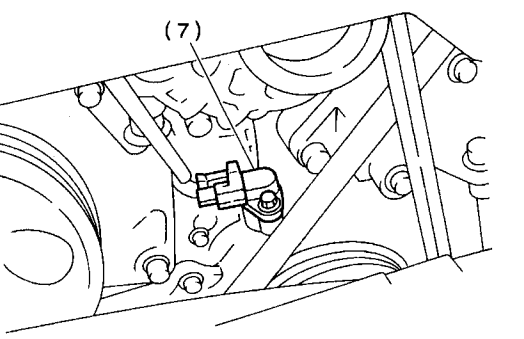 S2M0260A	 S2M0261A
 B2M1690E	 S2M0262A
 B2M1691C	 S2M0263A
 B2M0213I	SUBARU

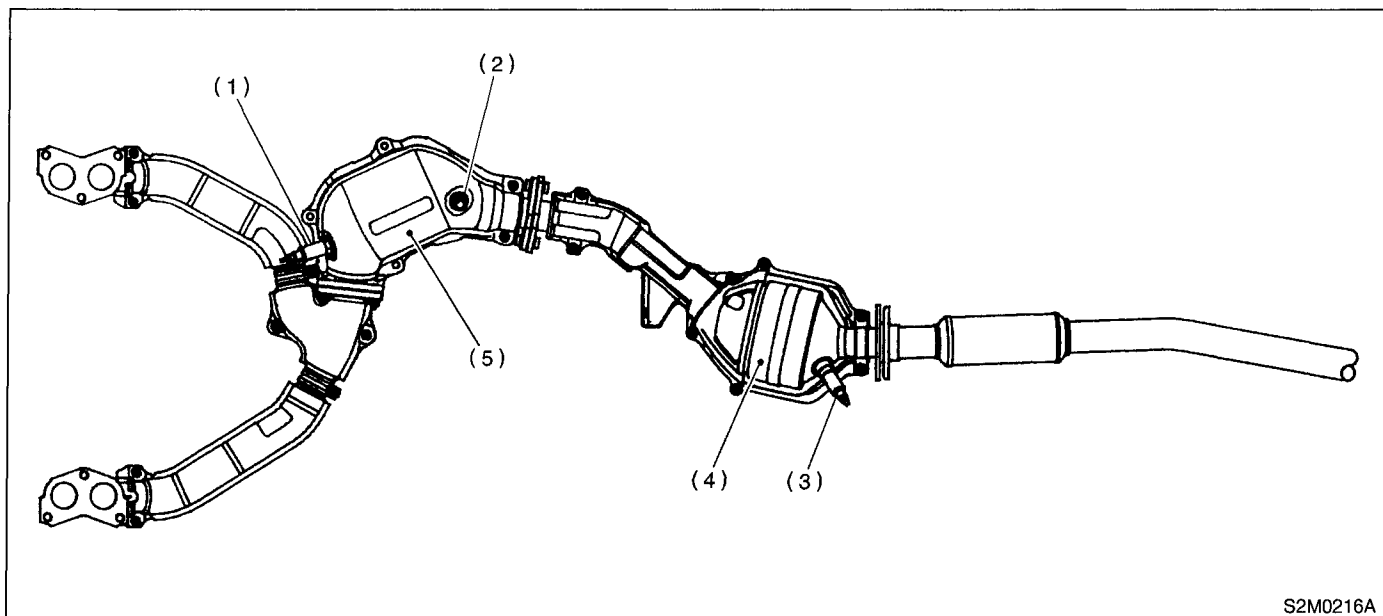

S2M0216A


(1) Front oxygen sensor

(2) Rear oxygen sensor (California spec. vehicles)


(3) Rear oxygen sensor (Federal spec. vehicles)

(4) Rear catalytic converter


(5) Front catalytic converter

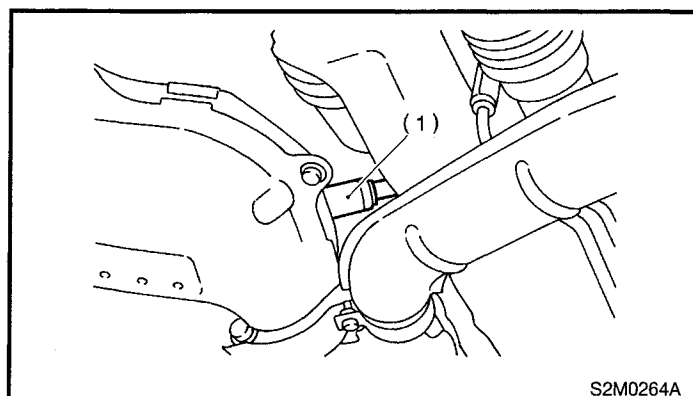


S2M0264A

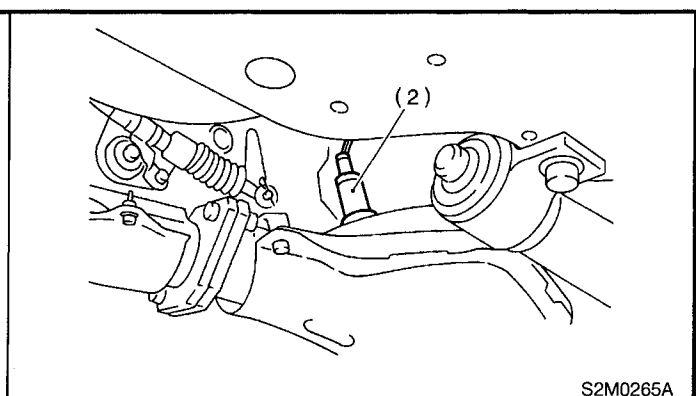


S2M0265A

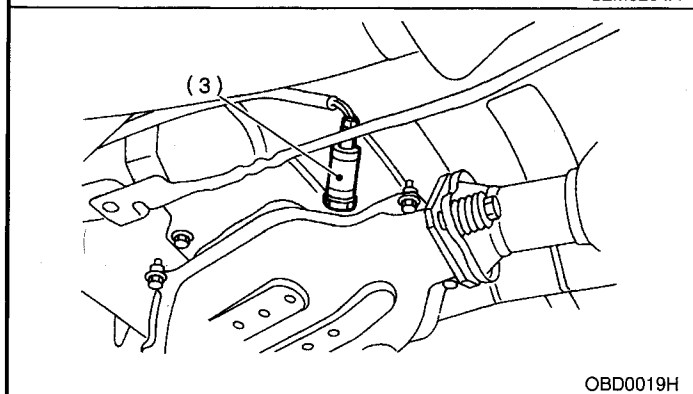


OBD0019H

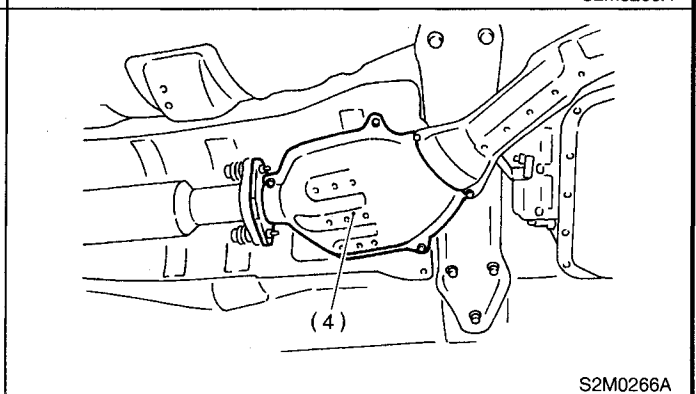

S2M0266A

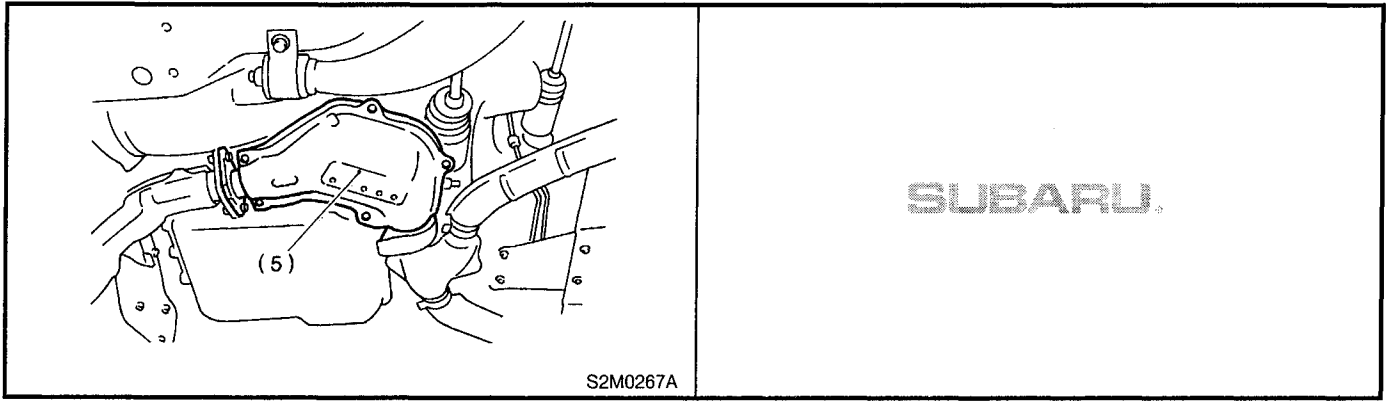

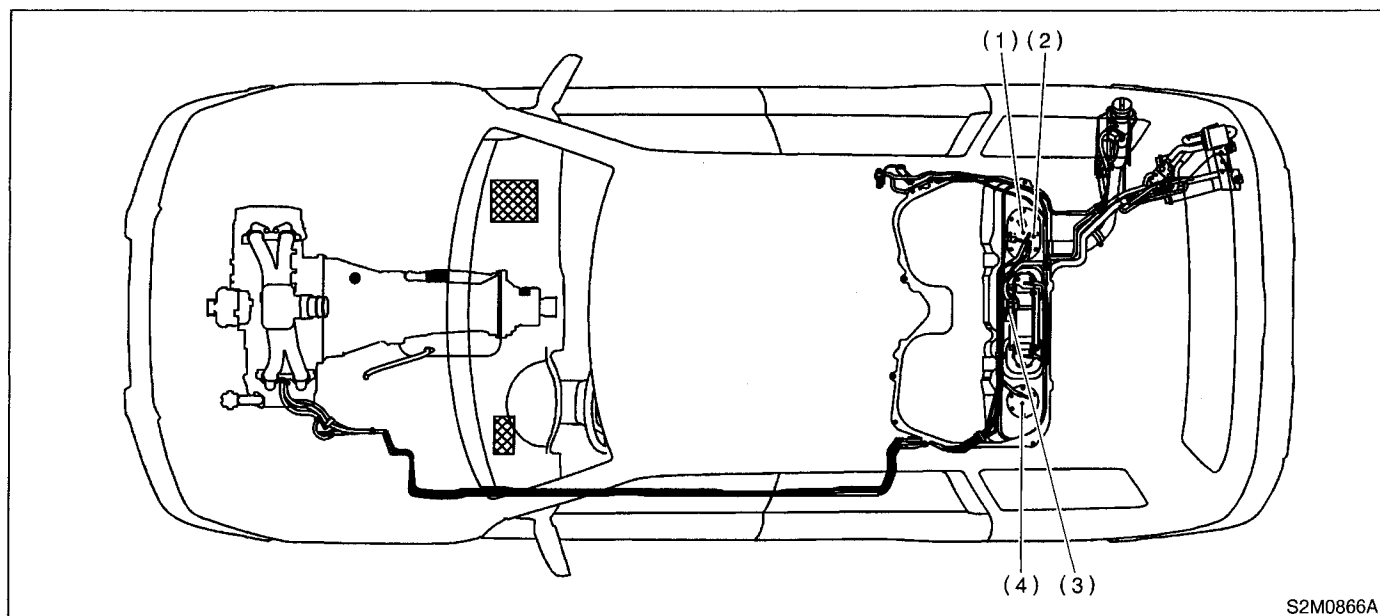


S2M0866A

(1) Fuel level sensor (Main)


(3) Fuel tank pressure sensor

(2) Fuel temperature sensor


(4) Fuel level sensor (Sub)

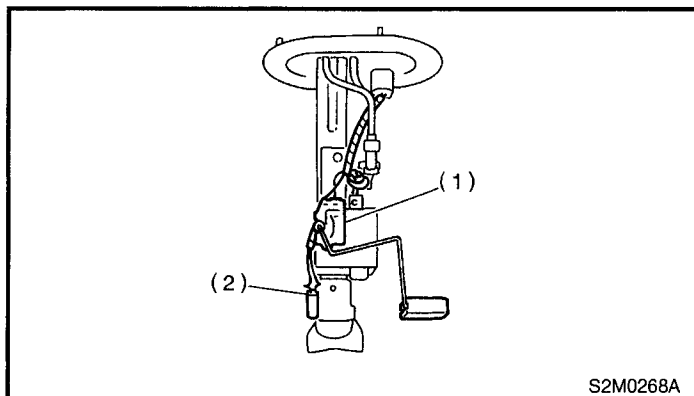

S2M0268A

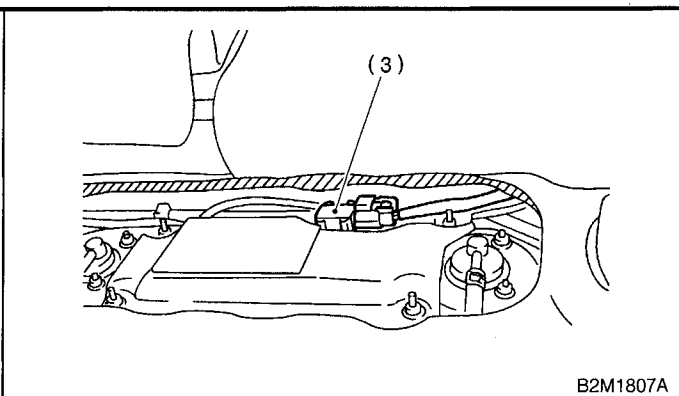


B2M1807A

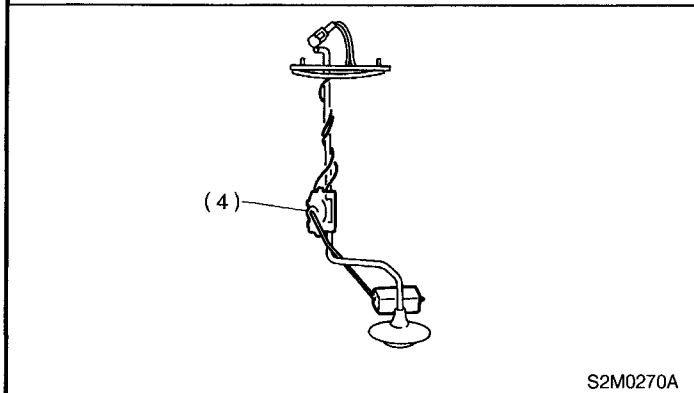

S2M0270A

SUBARU







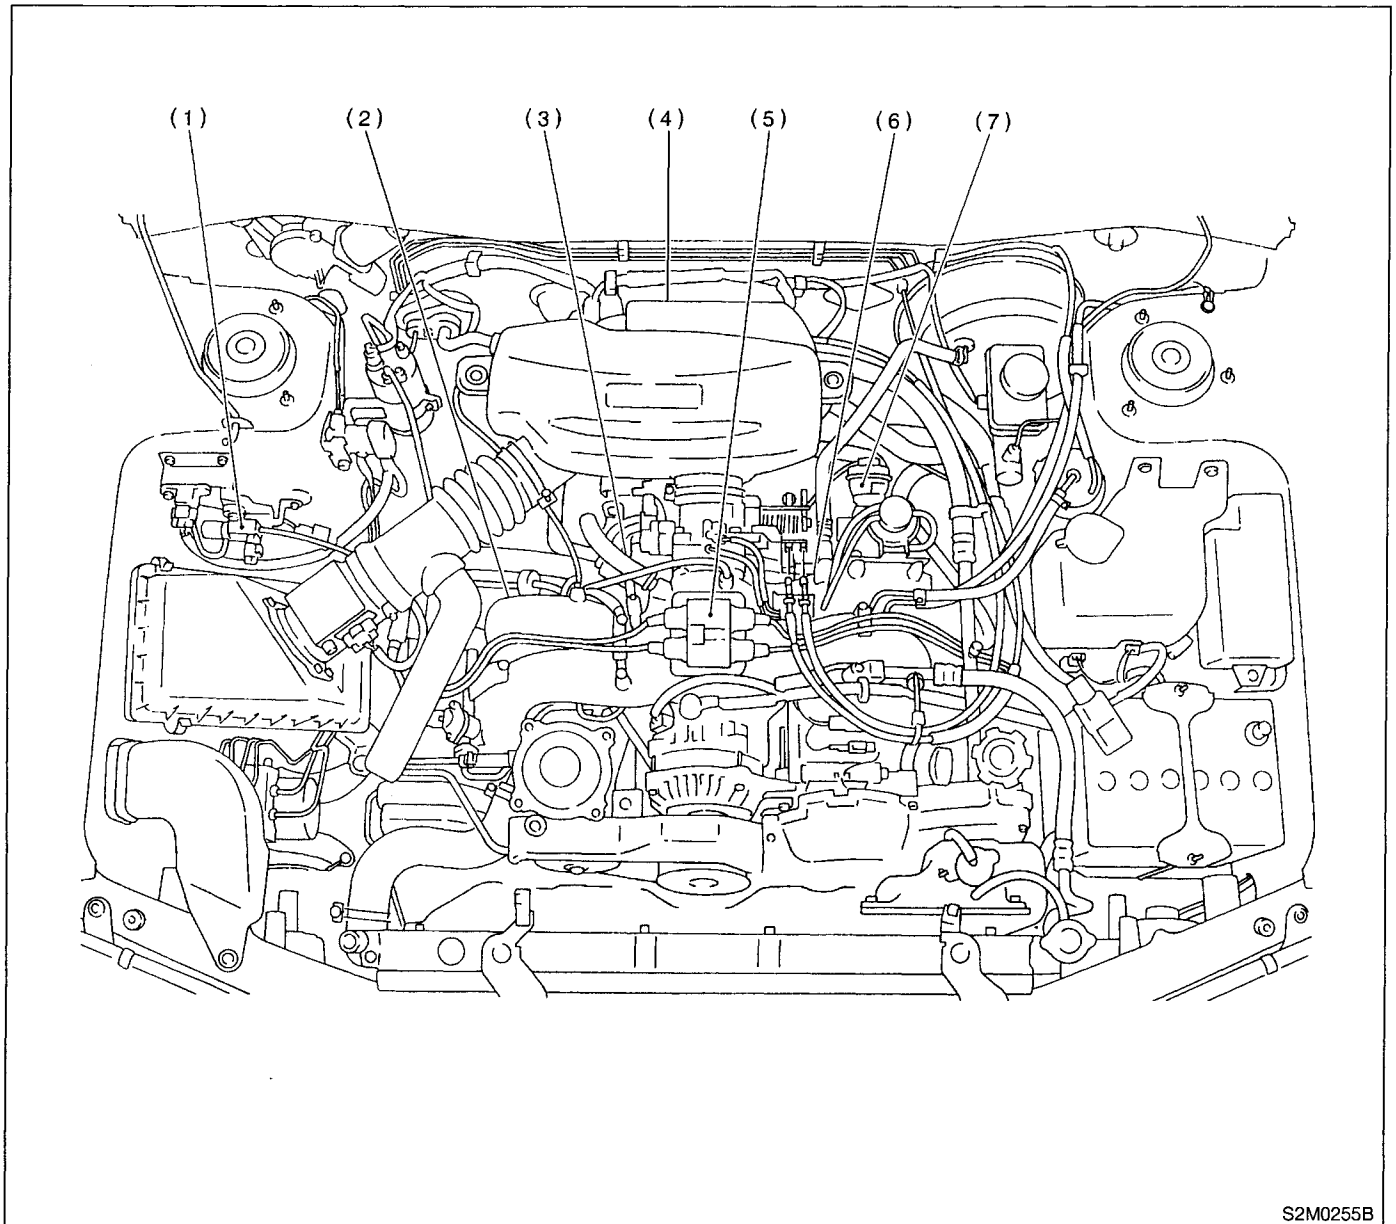
3. SOLENOID VALVE, EMISSION CONTROL SYSTEM PARTS AND IGNITION SYSTEM PARTS

S2M0255B


- (1) Pressure sources switching solenoid valve
- (2) Purge control solenoid valve

- (3) Idle air control solenoid valve
- (4) Ignitor
- (5) Ignition coil

- (6) EGR control solenoid valve
- (7) EGR valve

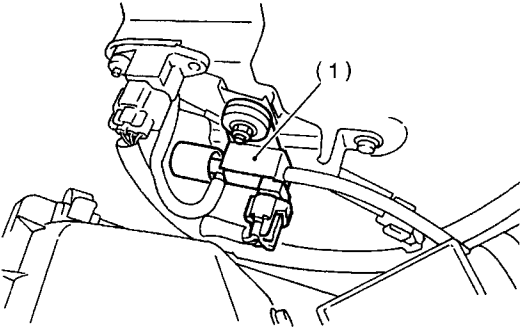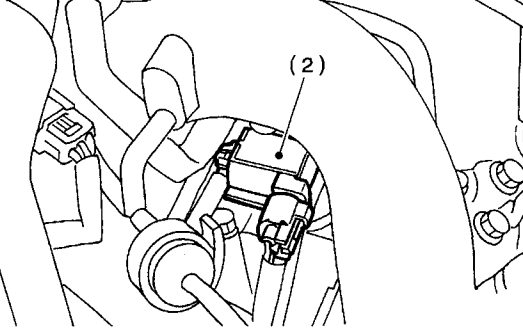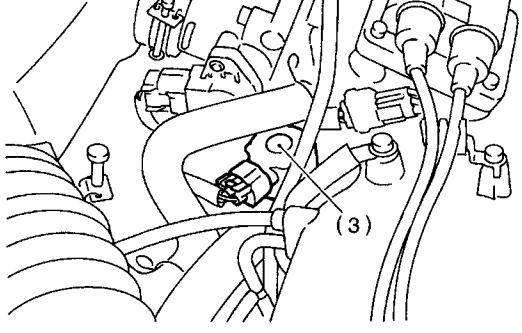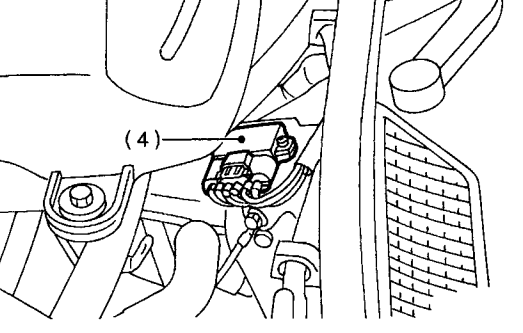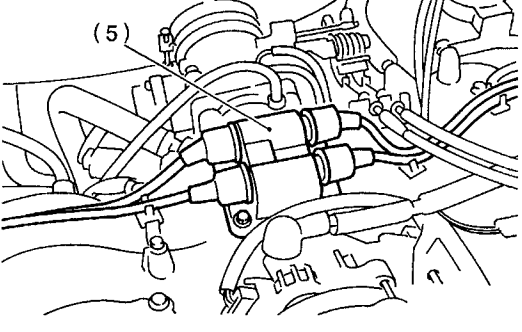
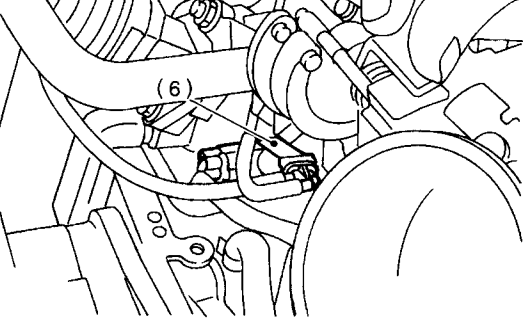
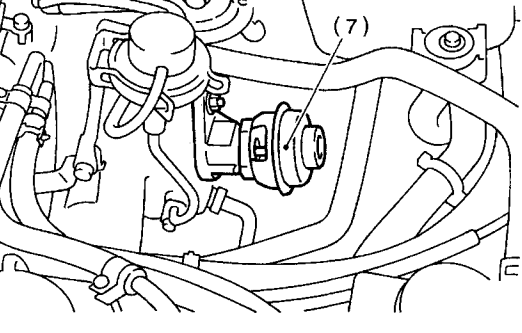
 (1) S2M0271A	 (2) B2M1039J
 (3) S2M0272A	 (4) B2M1040F
 (5) S2M0273A	 (6) OBD0024E
 (7) S2M0274A	SUBARU

2. Electrical Components Location

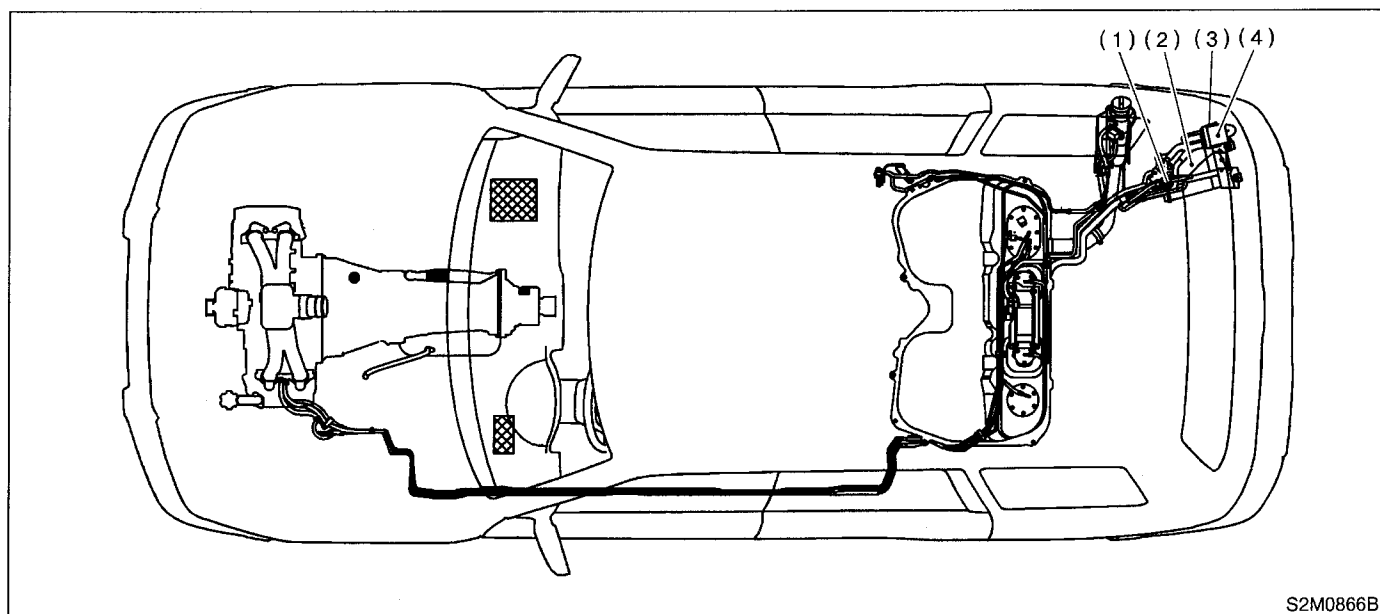


- (1) Pressure control solenoid valve
(2) Canister

- (3) Drain valve
(4) Air filter

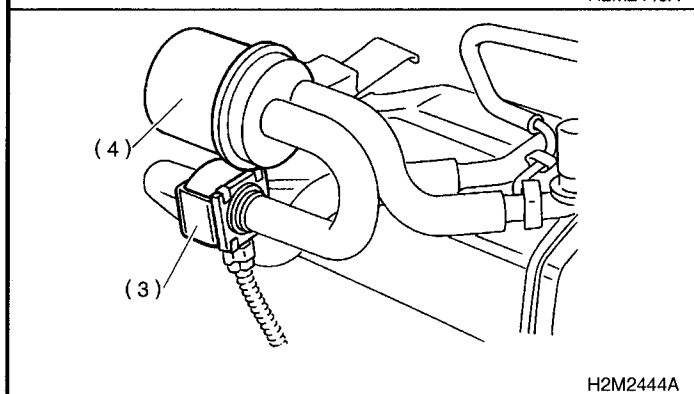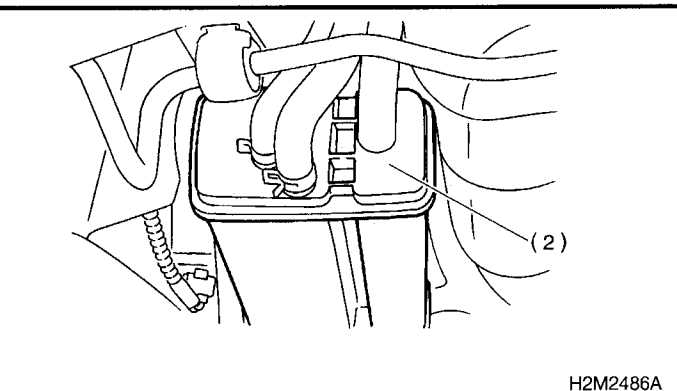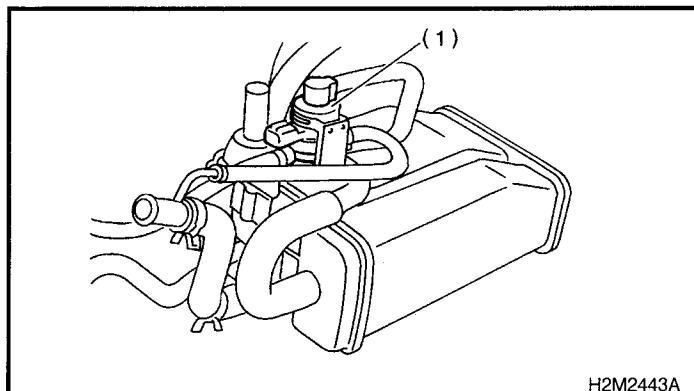

SUBARU

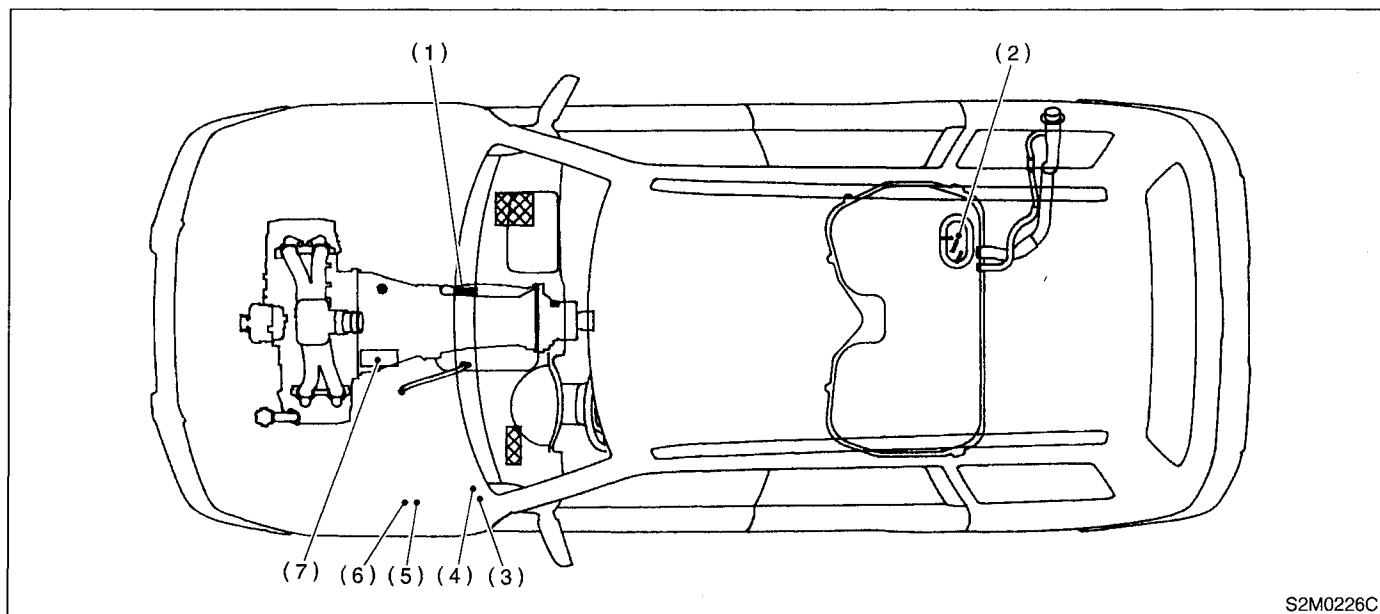

(1) Inhibitor switch

(2) Fuel pump





(3) Main relay


(4) Fuel pump relay

(5) Radiator cooling main fan relay

(6) Radiator cooling sub fan relay

(7) Starter

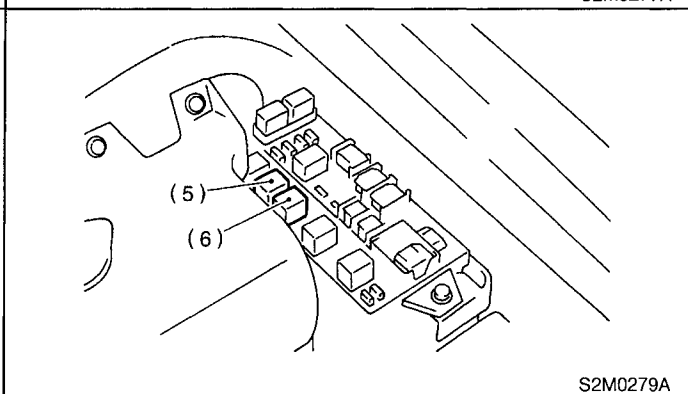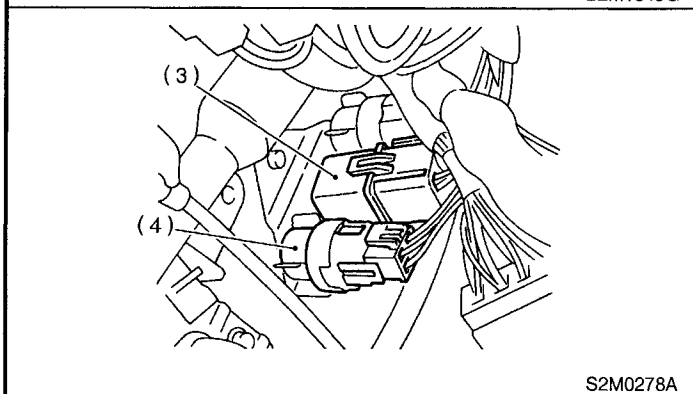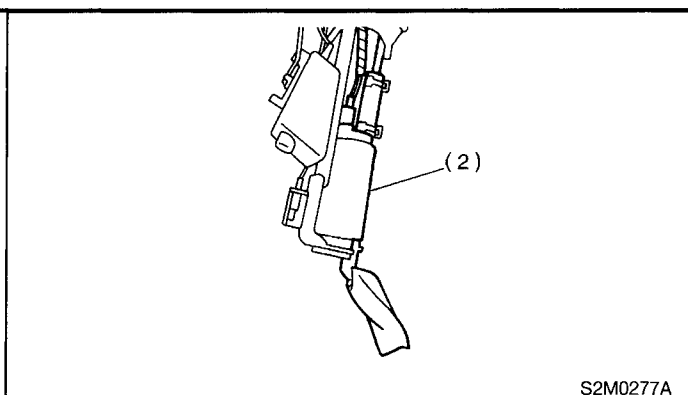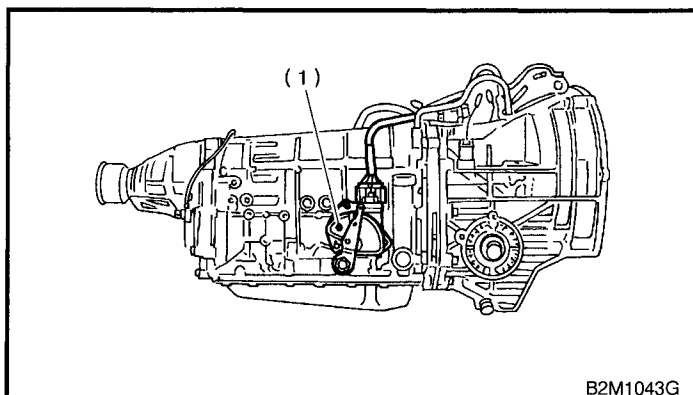

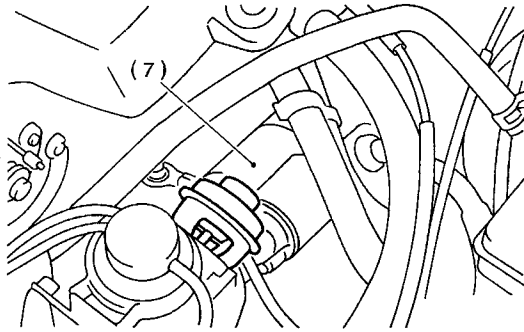

S2M0280A

SUBARU