

### 3. Diagnosis System

#### C: SUBARU SELECT MONITOR

#### 4. READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE. (NORMAL MODE)

- 1) On the 「Main Menu」 display screen, select the {2. Each System Check} and press the [YES] key.
  - 2) On the 「System Selection Menu」 display screen, select the {EGI/EMPI} and press the [YES] key.
  - 3) Press the [YES] key after displayed the information of engine type.
  - 4) On the 「EGI/EMPI Diagnosis」 display screen, select the {1. Current Data Display & Save} and press the [YES] key.
  - 5) On the 「Data Display Menu」 display screen, select the {1. 12 Data Display} and press the [YES] key.
  - 6) Using the scroll key, move the display screen up or down until the desired data is shown.
- A list of the support data is shown in the following table.

Contents	Display	Unit of measure
Battery voltage	Battery Voltage	V
Vehicle speed signal	Vehicle Speed	km/h or MPH
Engine speed signal	Engine Speed	rpm
Engine coolant temperature signal	Coolant Temp.	°C or °F
Ignition timing signal	Ignition Timing	deg
Mass air flow signal	Mass Air Flow	g/s or lb/m
Mass air flow signal	Air Flow Sensor Voltage	V
Throttle position signal	Throttle Opening Angle	%
Throttle position signal	Throttle Sensor Voltage	V
Injection pulse width	Fuel Injection #1 Pulse	ms
Idle air control signal	ISC Valve Duty Ratio	%
Engine load data	Engine Load	%
Front oxygen sensor output signal	Front O2 Sensor	V
Rear oxygen sensor output signal	Rear O2 Sensor	V
Short term fuel trim	A/F Correction #1	%
Knock sensor signal	Knocking Correction	deg
Atmospheric absolute pressure signal	Atmosphere Pressure	mmHg or kPa or inHg
Intake manifold absolute pressure signal	Mani. Relative Pressure	mmHg or kPa or inHg
A/F correction (short term fuel trim) by rear oxygen sensor	Rear O2 A/F Learning	%
Long term fuel trim	Whole A/F Learning	%
Long term whole fuel trim	Front O2 A/F Learning	%
Front oxygen sensor heater current	Front O2 Heater	A
Rear oxygen sensor heater current	Rear O2 Heater	A
Canister purge control solenoid valve duty ratio	CPC Valve Duty Ratio	%
Fuel tank pressure signal	Fuel Tank Pressure	mmHg or kPa or inHg
Fuel temperature signal	Fuel Temp.	°C or °F
Fuel level signal	Fuel Level	V
Ignition switch signal	Ignition Switch	ON or OFF
Automatic transmission vehicle identification signal	AT Vehicle ID Signal	ON or OFF
Test mode connector signal	Test Mode Signal	ON or OFF
Neutral position switch signal	Neutral Position Switch	ON or OFF
Air conditioning switch signal	A/C Switch	ON or OFF
Air conditioning relay signal	A/C Relay	ON or OFF
Radiator main fan relay signal	Radiator Fan Relay #1	ON or OFF
Fuel pump relay signal	Fuel Pump Relay	ON or OFF
Knocking signal	Knocking Signal	ON or OFF
Radiator sub fan relay signal	Radiator Fan Relay #2	ON or OFF
Engine torque control signal	Torque Control Signal	ON or OFF
Pressure sources switching solenoid valve	Pressure Sources Change	ON or OFF

Contents	Display	Unit of measure
Front oxygen sensor rich signal	Front O2 Rich Signal	ON or OFF
Rear oxygen sensor rich signal	Rear O2 Rich Signal	ON or OFF
Federal specification vehicle identification signal	FED Spec. Vehicle Signal	ON or OFF
Exhaust gas recirculation system diagnosis signal	EGR System Diagnosis	ON or OFF
Catalyst diagnosis signal	Catalyst Diagnosis	ON or OFF
Pressure control solenoid valve	PCV Solenoid Valve	ON or OFF
Exhaust gas recirculation solenoid valve	EGR Solenoid Valve	ON or OFF
Drain valve	Vent. Solenoid Valve	ON or OFF

## NOTE:

For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

**8. LED OPERATION MODE FOR ENGINE**

- 1) On the 「Main Menu」 display screen, select the {2. Each System Check} and press the [YES] key.
- 2) On the 「System Selection Menu」 display screen, select the {EGI/EMPI} and press the [YES] key.
- 3) Press the [YES] key after displayed the information of engine type.
- 4) On the 「EGI/EMPI Diagnosis」 display screen, select the {1. Current Data Display & Save} and press the [YES] key.
- 5) On the 「Data Display Menu」 display screen, select the {2. 6 Data & LED Display} and press the [YES] key.
- 6) Using the scroll key, move the display screen up or down until the desired data is shown.
  - A list of the support data is shown in the following table.

Contents	Display	Message	LED "ON" requirements
Ignition switch signal	Ignition Switch	ON or OFF	When ignition switch is turned ON.
Automatic transmission vehicle identification signal	AT Vehicle ID Signal	ON or OFF	When AT identification signal is entered.
Test mode connector signal	Test Mode Signal	ON or OFF	When test mode connector is connected.
Neutral position switch signal	Neutral Position Switch	ON or OFF	When neutral position signal is entered.
Air conditioning switch signal	A/C Switch	ON or OFF	When air conditioning switch is turned ON.
Air conditioning relay signal	A/C Relay	ON or OFF	When air conditioning relay is in function.
Radiator main fan relay signal	Radiator Fan Relay #1	ON or OFF	When radiator main fan relay is in function.
Fuel pump relay signal	Fuel Pump Relay	ON or OFF	When fuel pump relay is in function.
Knocking signal	Knocking Signal	ON or OFF	When knocking signal is entered.
Radiator sub fan relay signal	Radiator Fan Relay #2	ON or OFF	When radiator sub fan relay is in function.
Engine torque control signal	Torque Control Signal #1	ON or OFF	When engine torque control signal is entered.
Pressure sources switching solenoid valve	Pressure Sources Change	ON or OFF	When pressure sources switching solenoid valve is in function.
Front oxygen sensor rich signal	Front O2 Rich Signal	ON or OFF	When front oxygen sensor mixture ratio is rich.
Rear oxygen sensor rich signal	Rear O2 Rich Signal	ON or OFF	When rear oxygen sensor mixture ratio is rich.
Federal specification vehicle identification signal	FED Spec. Vehicle Signal	ON or OFF	Federal specification vehicle identification signal is entered.
Exhaust gas recirculation system diagnosis signal	EGR System Diagnosis	ON or OFF	When diagnosis of EGR system is finished.
Catalyst diagnosis signal	Catalyst Diagnosis	ON or OFF	When diagnosis of catalyzer is finished.
Pressure control solenoid valve	PCV Solenoid Valve	ON or OFF	When pressure control solenoid valve is in function.
Exhaust gas recirculation solenoid valve	EGR Solenoid Valve	ON or OFF	When EGR Solenoid Valve is in function.
Drain valve	Drain Valve	ON or OFF	When drain valve is in function.


**NOTE:**

For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

## F: COMPULSORY VALVE OPERATION CHECK MODE


### 1. SUBARU SELECT MONITOR

1) Prepare Subaru select monitor kit.

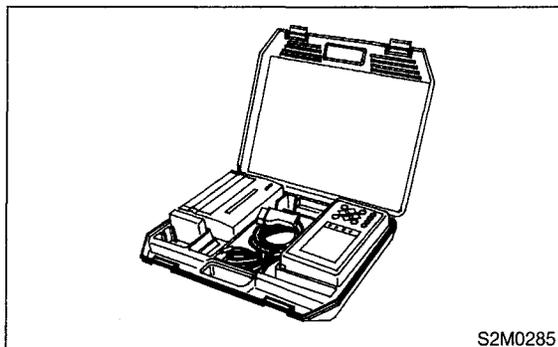


2) Connect diagnosis cable to Subaru select monitor.

3) Insert cartridge into Subaru select monitor.  
ST 24082AA010 CARTRIDGE

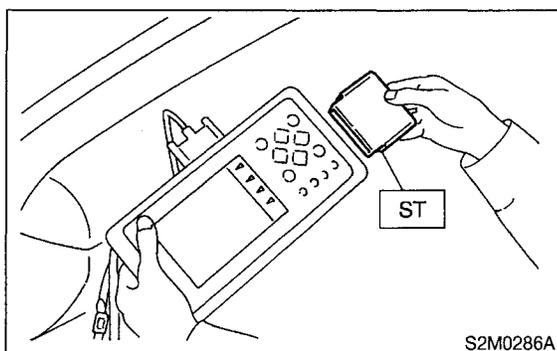


4) Connect test mode connector at the lower portion of instrument panel (on the driver's side), to the side of the center console box.

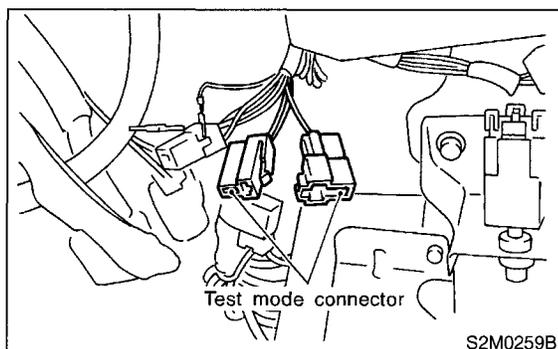


5) Connect Subaru select monitor to data link connector.

(1) Open the cover and connect Subaru select monitor to data link connector located in the lower portion of the instrument panel (on the driver's side), to the lower cover.

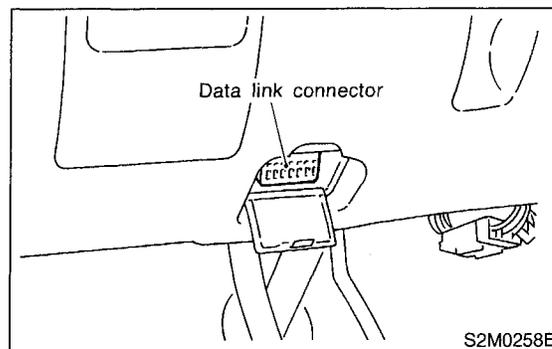


(2) Connect diagnosis cable to data link connector.

**CAUTION:**  
Do not connect scan tools except for Subaru select monitor and OBD-II general scan tool.

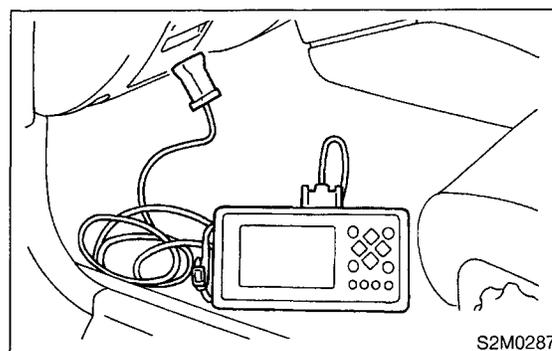

6) Turn ignition switch to ON (engine OFF) and Subaru select monitor switch to ON.

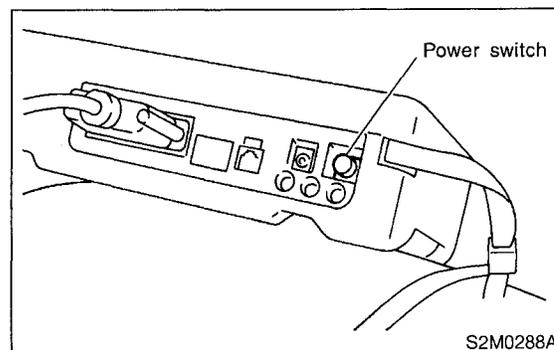

7) On the 「Main Menu」 display screen, select the {2. Each System Check} and press the [YES] key.

8) On the 「System Selection Menu」 display screen, select the {EGI/EMPi} and press the [YES] key.

9) Press the [YES] key after displayed the information of engine type.

## 3. Diagnosis System

10) On the 「EGI/EMPI Diagnosis」 display screen, select the {4. System Operation Check Mode} and press the [YES] key.

11) On the 「System Operation Check Mode」 display screen, select the {Actuator ON/OFF Operation} and press the [YES] key.

12) Select the desired compulsory actuator on the 「Actuator ON/OFF Operation」 display screen and press the [YES] key.

13) Pressing the [NO] key completes the compulsory operation check mode. The display will then return to the 「Actuator ON/OFF Operation」 screen.

- A list of the support data is shown in the following table.

Contents	Display
Compulsory fuel pump relay operation check	Fuel Pump Relay
Compulsory purge control solenoid valve operation check	CPC Solenoid Valve
Compulsory radiator fan relay operation check	Radiator Fan Relay
Compulsory air conditioning relay operation check	A/C Relay
Compulsory exhaust gas recirculation control solenoid valve operation check	EGR Solenoid Valve
Compulsory pressure control solenoid valve operation check	PCV Solenoid Valve
Compulsory drain valve operation check	Vent Control Solenoid Valve
Compulsory pressure sources switching solenoid valve operation check	Pressure Switching Sol.1

## NOTE:

- Because ASV solenoid valve, FICD solenoid valve and air injection system diagnosis solenoid valve are not installed, ASV Solenoid Valve, FICD Solenoid Valve and Pressure Switching Sol.2 will be displayed but non-functional.
- For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.