



9. Pressure Control Solenoid Valve

A: REMOVAL AND INSTALLATION


- 1) Disconnect battery ground cable.

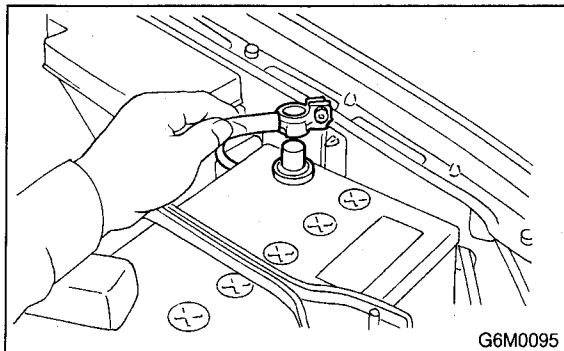


- 2) Remove canister. <Ref. to 2-1 [W3A0].☆1>

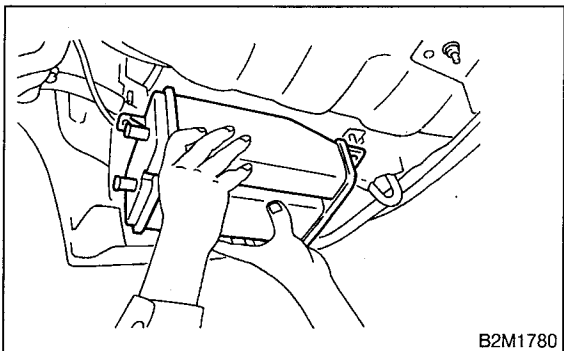


- 3) Disconnect evaporation hoses (A) from joint pipes.

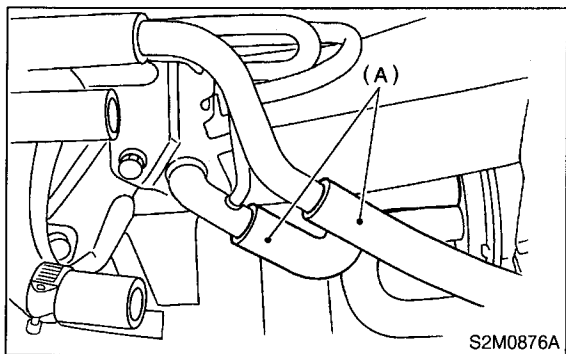

- 4) Remove bolt which installs pressure control solenoid valve holding bracket on body.

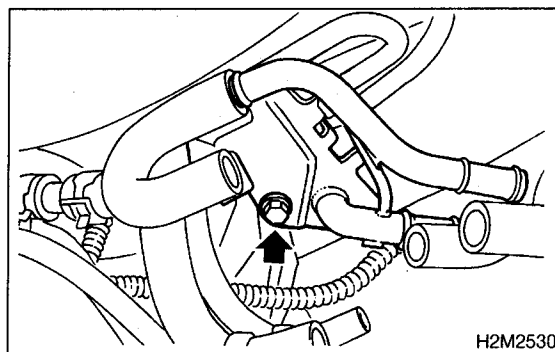


- 5) Disconnect connector from pressure control solenoid valve.

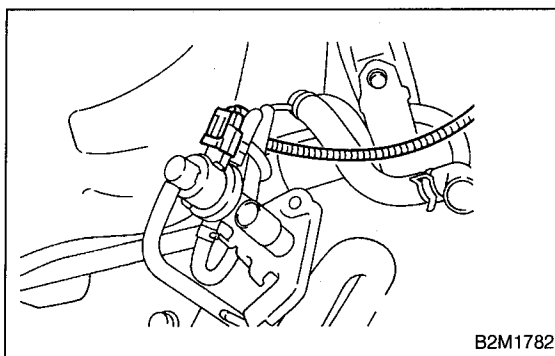

- 6) Disconnect two evaporation hoses from pressure control solenoid valve.

- 7) Remove pressure control solenoid valve with bracket.

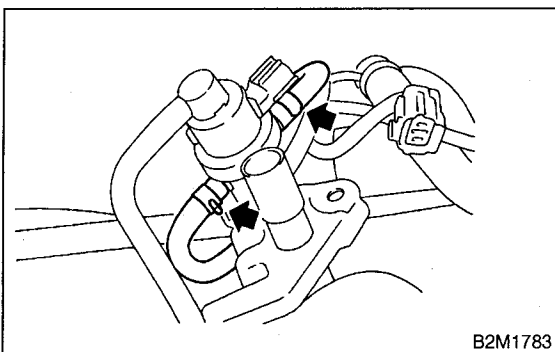

- 8) Remove pressure control solenoid valve from bracket.

