



14. Vent Valve

A: REMOVAL AND INSTALLATION


- 1) Release fuel pressure. <Ref. to 2-2 [W9B0].☆1>
- 2) Open fuel flap lid, and remove fuel filler cap.

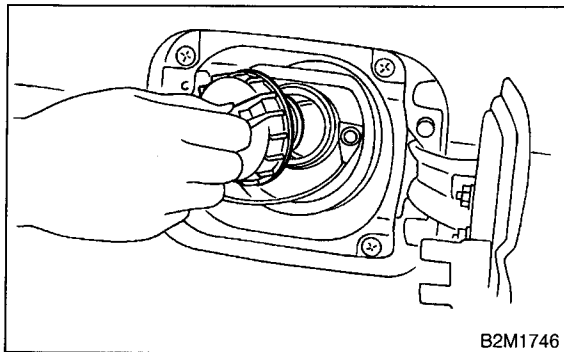


- 3) Disconnect battery ground cable.

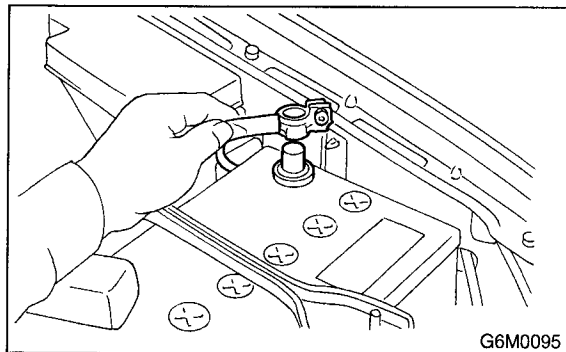


- 4) Drain fuel from fuel tank. <Ref. to 2-2 [W9C0].☆1>

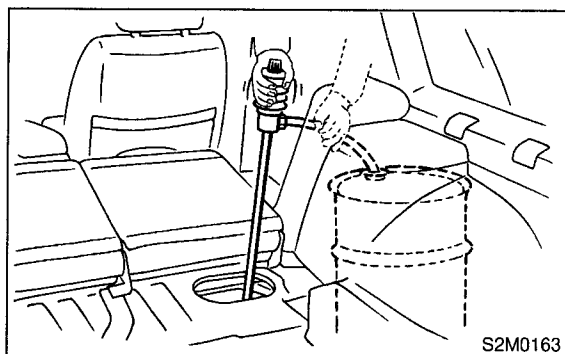


- 5) Remove fuel tank. <Ref. to 2-8 [W1A0].☆1>

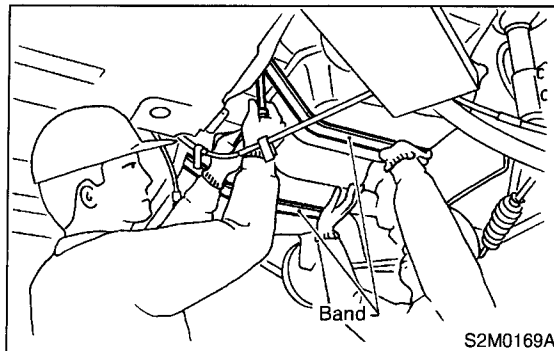

- 6) Remove protector cover.

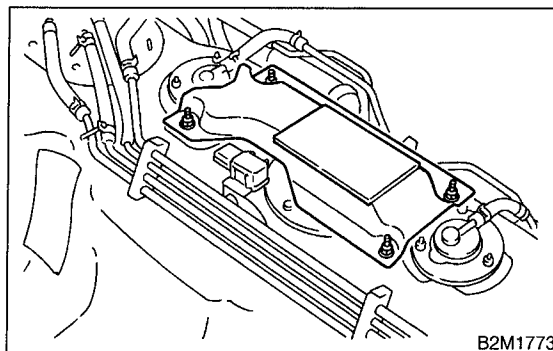

- 7) Move clips, and disconnect hoses from vent valve.

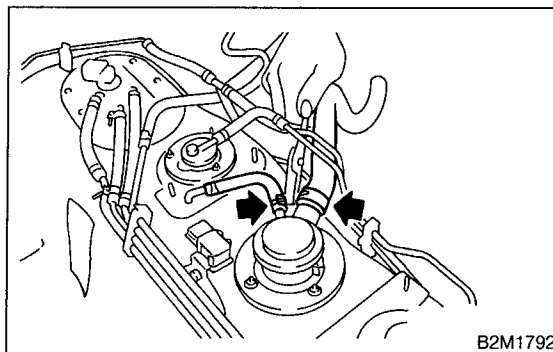

- 8) Remove nuts which install vent valve on fuel tank.

