




- 17) Lower the vehicle.
- 18) Connect connectors to fuel tank harness, and plug access hole with grommet.

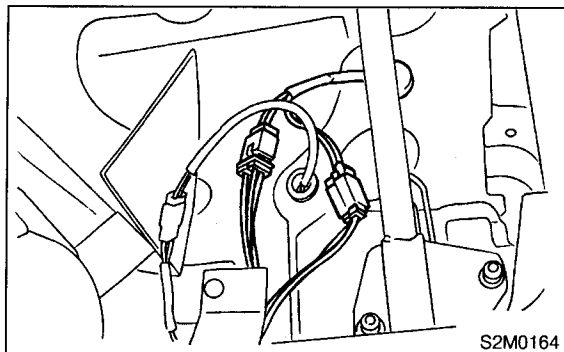


- 19) Install rear seat cushion. <Ref. to 5-3 [W2B0].☆1>

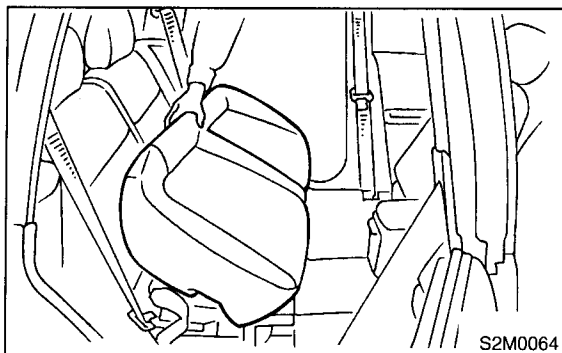

- 20) Install fuel filler cap.
- 21) Connect connector to fuel pump relay.

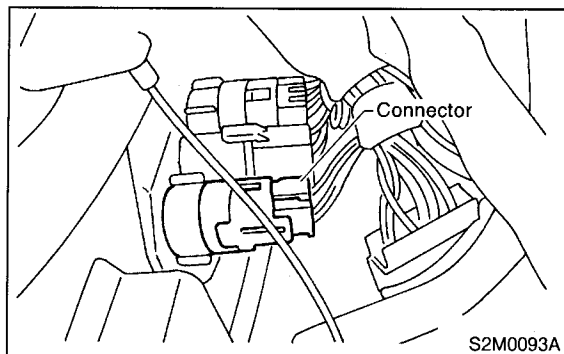


- 22) Connect battery ground cable.

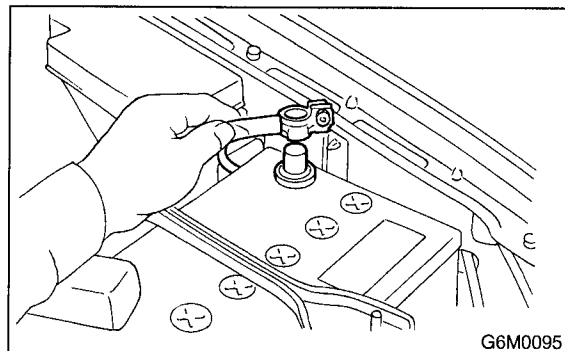


## 2. Fuel Filler Pipe

### A: REMOVAL


- 1) Release fuel pressure. <Ref. to 2-2 [W9B0].☆1>
- 2) Open fuel flap lid, and remove fuel filler cap.

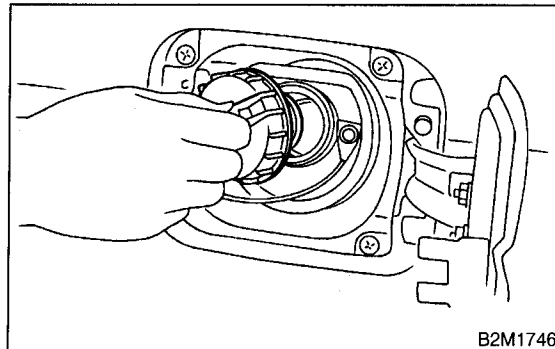

- 3) Disconnect battery ground cable.

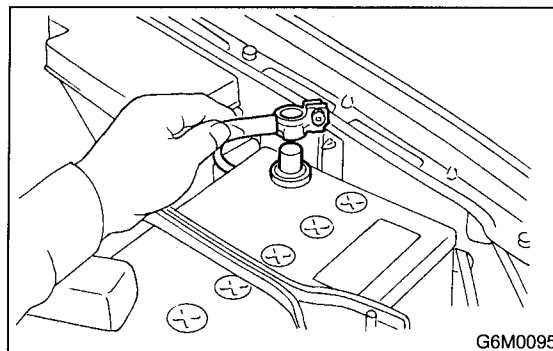


- 4) Drain fuel from fuel tank. <Ref. to 2-2 [W9C0].☆1>

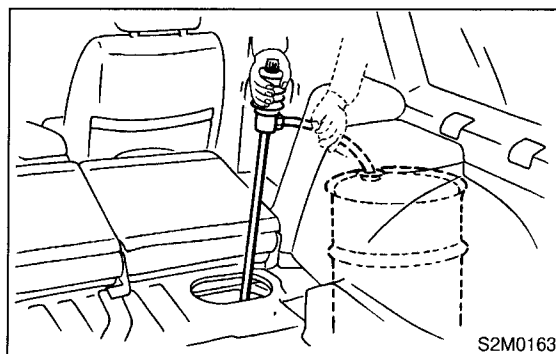


- 5) Remove right rear wheel.
- 6) Open fuel filler flap and remove filler cap.


- 7) Remove screws holding packing in place.

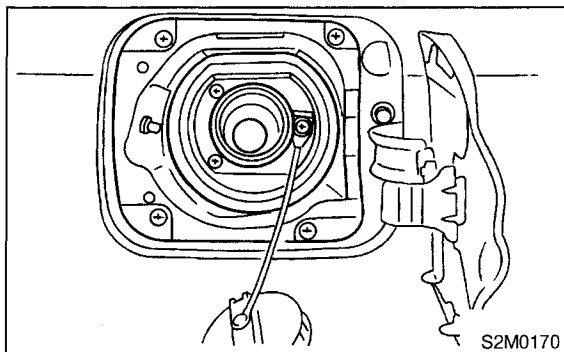


- 8) Remove wheel nuts of rear right side.  
9) Lift-up the vehicle.  
10) Remove rear right side wheel.

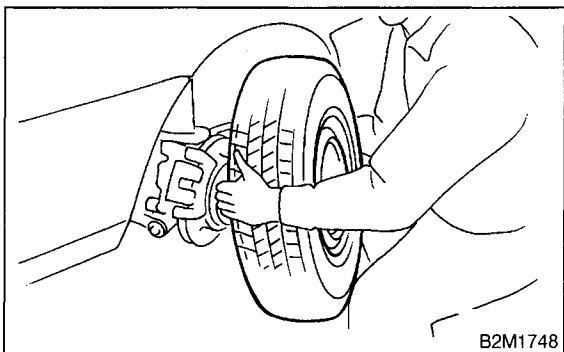


- 11) Remove bolts which install protector cover on body.

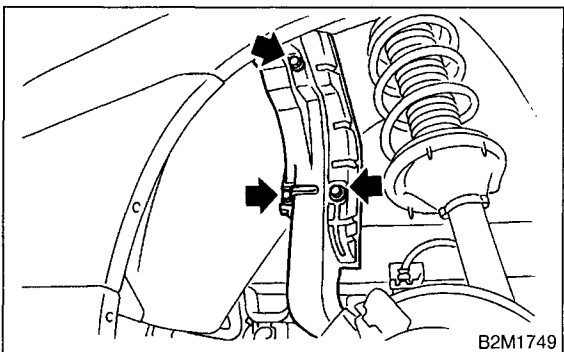


- 12) While releasing the under side of protector cover from hook, remove it.

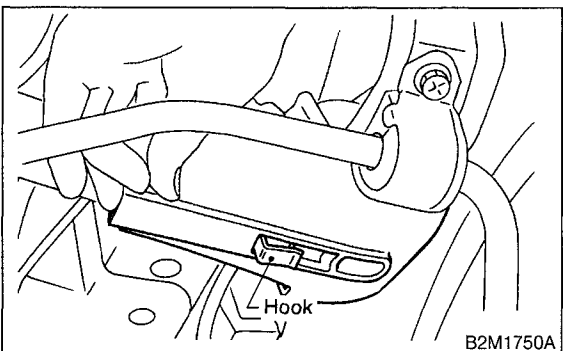


- 13) Disconnect evaporation hoses from pipes.

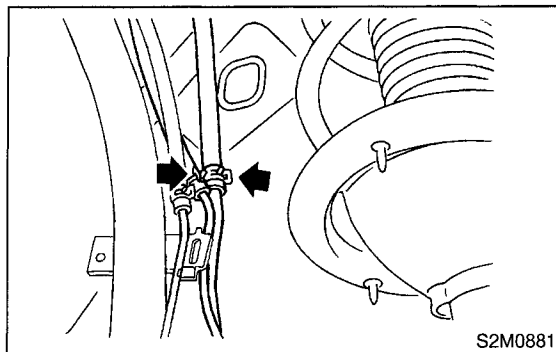


- 14) Lift-up the vehicle more.  
15) Remove two evaporation hoses from clip.

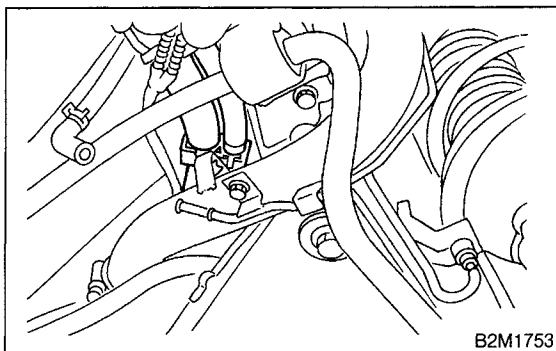


- 16) Disconnect evaporation hose from joint pipe.

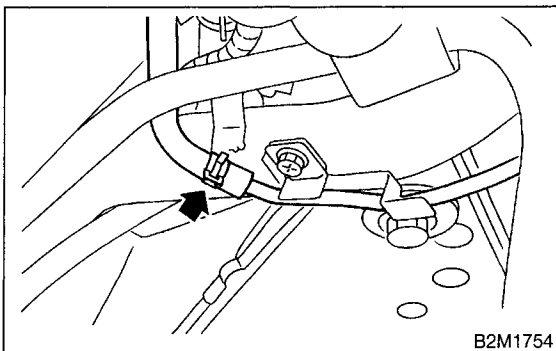

- 17) Loosen clamp, and disconnect fuel filler hose from fuel filler pipe.

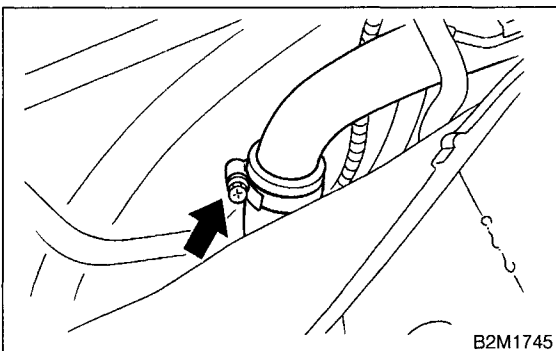


- 18) Remove fuel filler pipe to under side of vehicle.

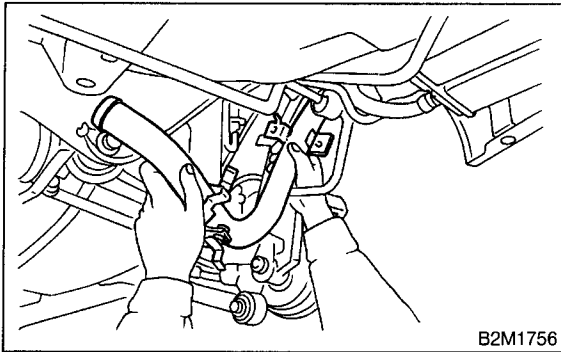

B2M1756


## B: INSTALLATION

- 1) Set fuel filler pipe from under side of vehicle, and hold it on fuel filler flap open.

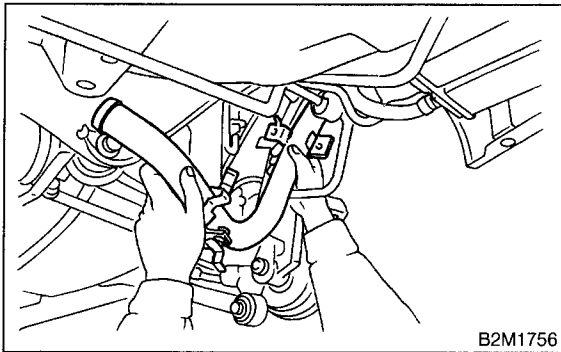


B2M1756

- 2) Connect fuel filler pipe into fuel filler hose.

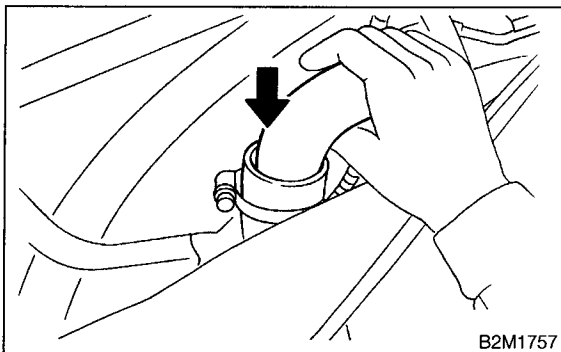


B2M1757

- 3) Lower the vehicle.  
4) Temporarily tighten screws which install fuel filler pipe on filler lid open.

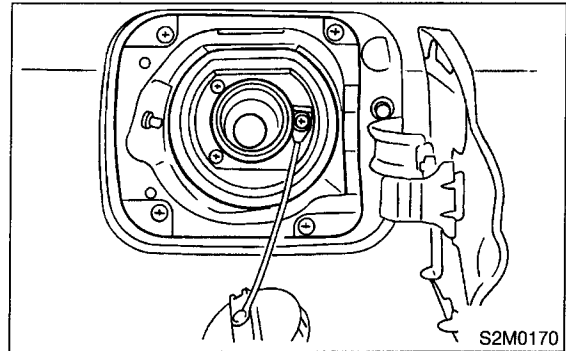


S2M0170

- 5) Connect evaporation hoses to pipes.

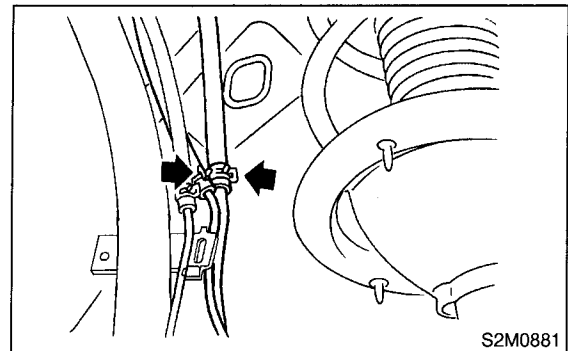


S2M0881

- 6) Lift-up the vehicle.  
7) Tighten clamp bolt which holds fuel filler hose.

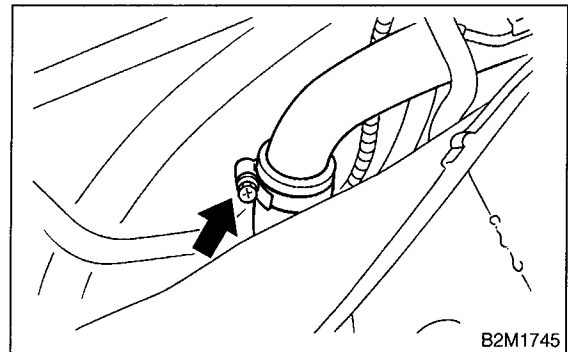


B2M1745

- 8) Install two evaporation hoses to clip.

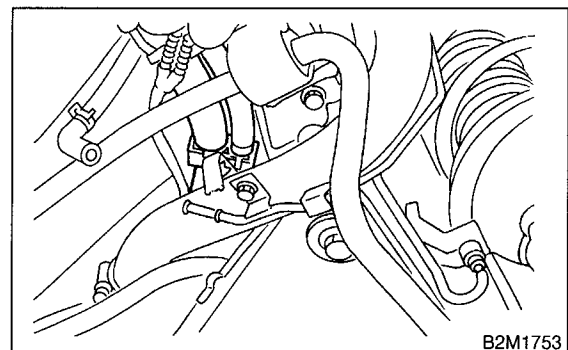


B2M1753

- 9) Connect evaporation hose to joint pipe.

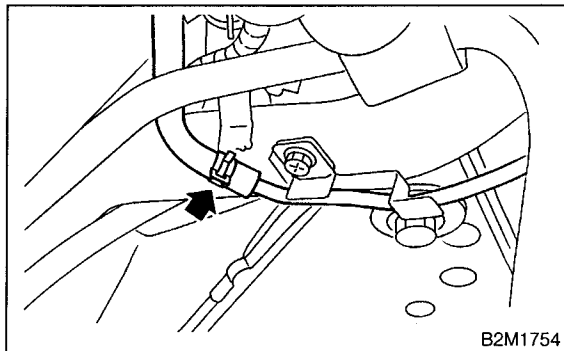


- 10) Lower the vehicle.


- 11) While holding the under side of protector cover on bracket, install it.

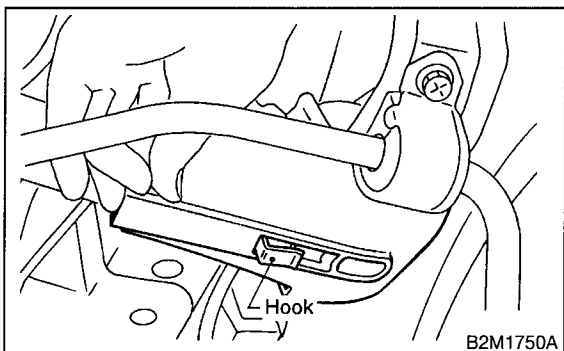

- 12) Tighten bolts which install protector cover on body.

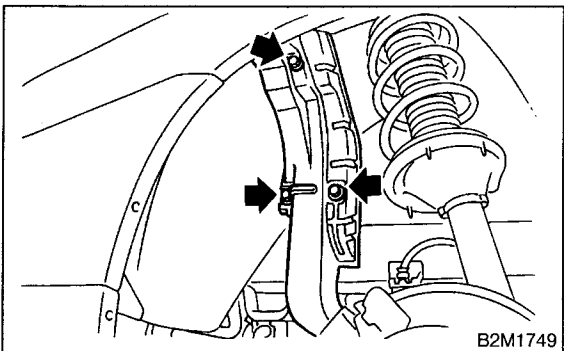


- 13) Tighten screws which install fuel filler pipe on filler lid open.

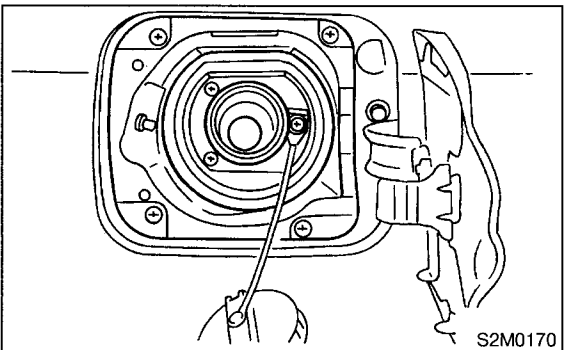


- 14) Install rear right wheel.


- 15) Install fuel filler cap.

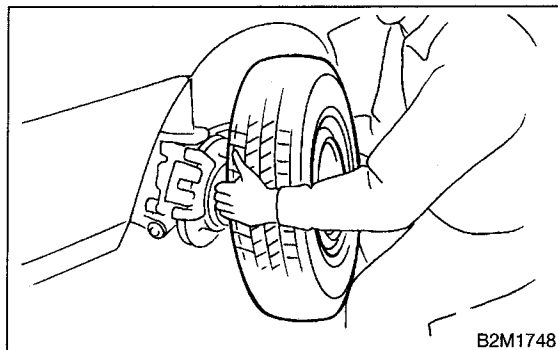


- 16) Install fuel pump, and connect connector and fuel hoses. <Ref. to 2-8 [W6B0].☆1>

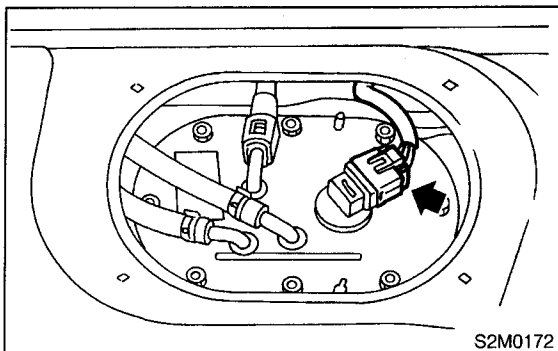


- 17) Install fuel sub meter unit, and connect connector and jet pump hose. <Ref. to 2-8 [W8A0].☆1>

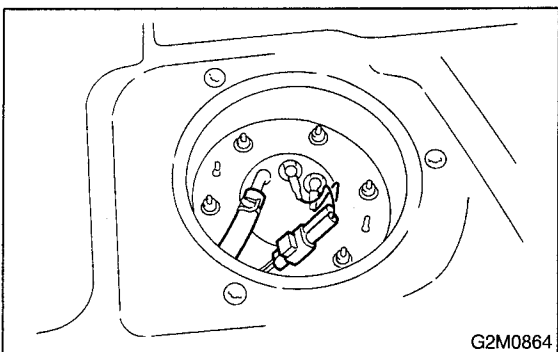

- 18) Connect connector to fuel pump relay.

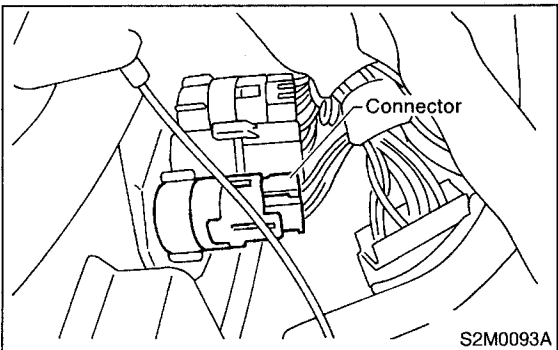


- 19) Connect battery ground cable.

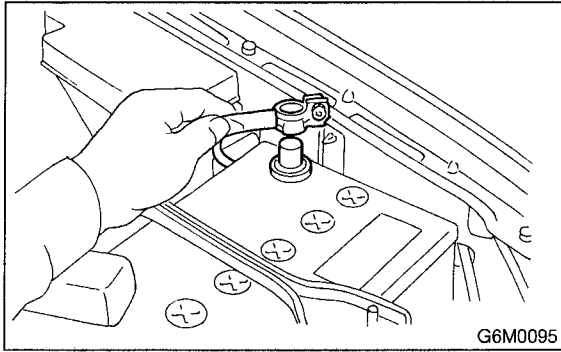


## C: DISASSEMBLY


- 1) Move clip, and disconnect evaporation hose from joint pipe.

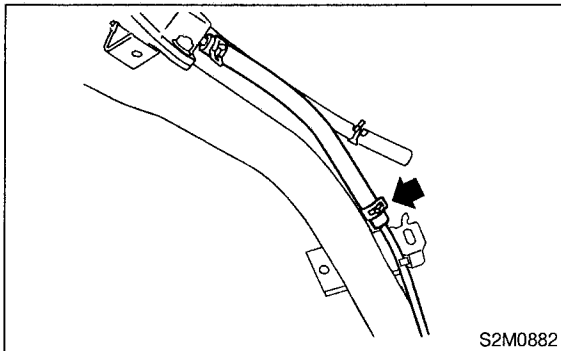


- 2) Remove bolt which installs joint pipe on fuel filler pipe.

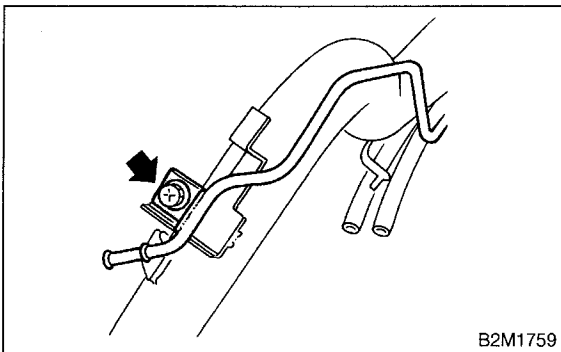


- 3) Disconnect evaporation hose from fuel filler pipe.

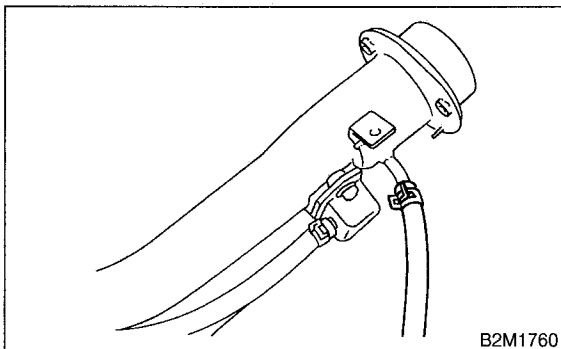

- 4) Disconnect evaporation hoses from shut valve.

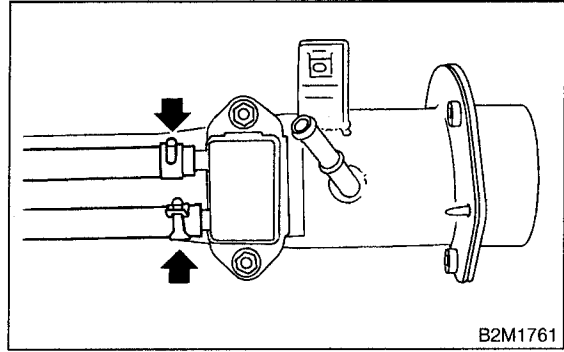

- 5) Remove shut valve from fuel filler pipe.

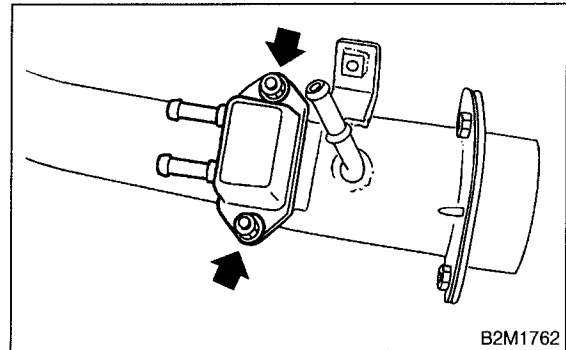


## D: ASSEMBLY

- 1) Install shut valve on fuel filler pipe.

**Tightening torque:**

**$4.4 \pm 1.5 \text{ N}\cdot\text{m}$  ( $0.45 \pm 0.15 \text{ kg}\cdot\text{m}$ ,  $3.3 \pm 1.1 \text{ ft}\cdot\text{lb}$ )**

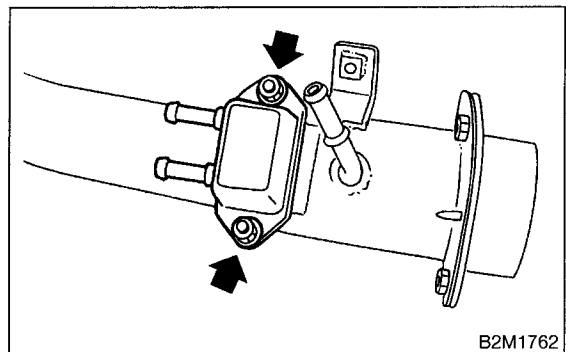

- 2) Connect evaporation hoses to shut valve.

