


2. Rear Seat

A: REMOVAL AND INSTALLATION

1. CUSHION


- 1) Remove bolts securing hinges (located at front of cushion) to body.
- 2) Slightly raise front of cushion while pushing down on cushion in the direction of "A". With cushion held in that position, move it forward until it is unhooked.

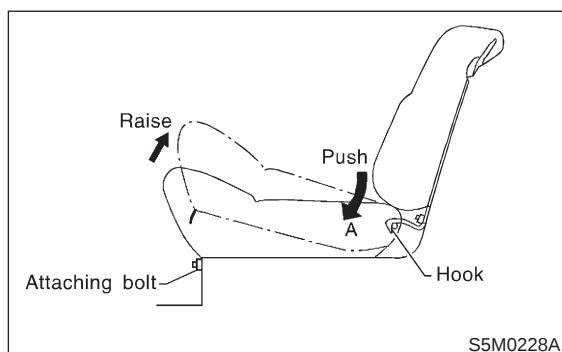

- 3) Installation is in the reverse order of removal.

2. SIDE PAD

- 1) Remove cushion.
- 2) Remove bolt and then release hook.
- 3) Detach side pad.

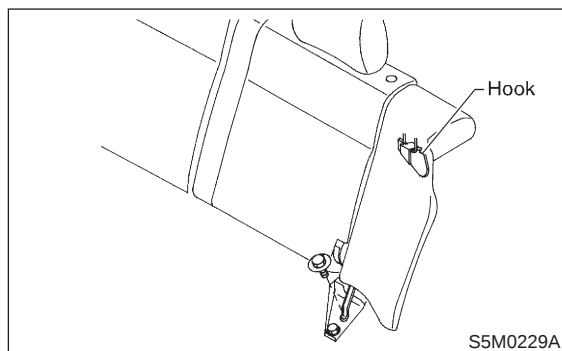


- 4) Installation is in the reverse order of removal.

3. BACKREST

- 1) Remove cushion.
- 2) Remove side pad.
- 3) Remove bolts and nuts.

- 4) Detach backrest.

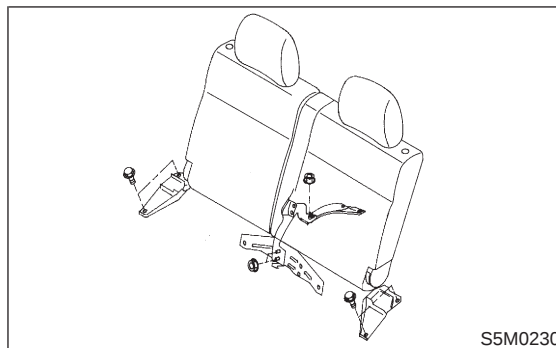

- 5) Installation is in the reverse order of removal.

CAUTION:

- Before installing seat, ensure that seat belt is placed on cushion.
- Confirm that winding of three-point type seat belt can operate regularly.