


3. Front Seat Belt



A: REMOVAL AND INSTALLATION

1. OUTER BELT


- 1) Remove anchor cover.
- 2) Remove shoulder anchor bolt.
- 3) Remove center pillar cover.

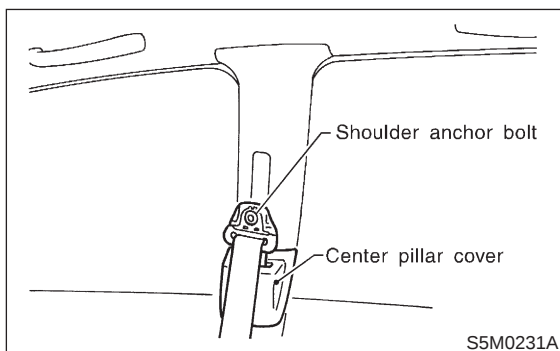

- 4) Remove center lower pillar trim panel.
- 5) Remove webbing guide.

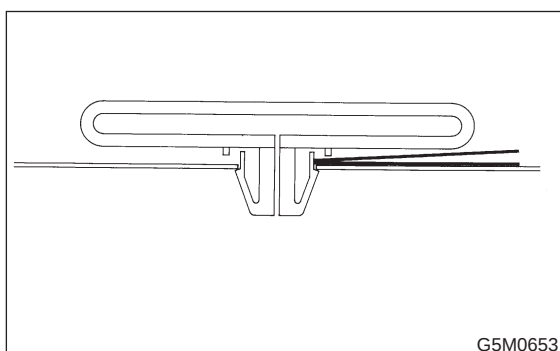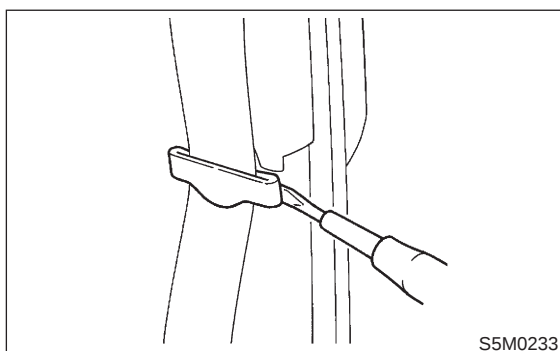

- 6) Remove lap anchor bolt.
- 7) Remove belt retractor and outer belt.

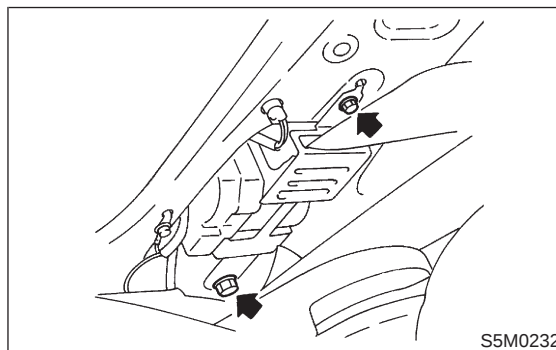


- 8) Installation is in the reverse order of removal.

CAUTION:

- The left and right ELR's are not mutually interchangeable because different sensors are used.
- Be careful not to twist belts during installation.

2. INNER BELT


- 1) Disconnect connector.
- 2) Remove anchor bolt and then detach inner belt.

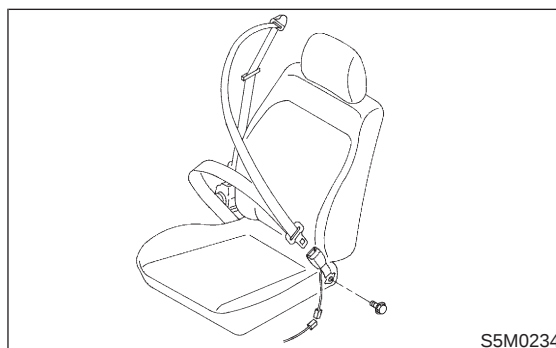

- 3) Installation is in the reverse order of removal.

3. ADJUSTABLE SHOULDER ANCHOR

- 1) Remove shoulder anchor bolt.
- 2) Remove center pillar cover.
- 3) Remove center pillar upper trim.
- 4) Remove adjustable shoulder anchor assembly.

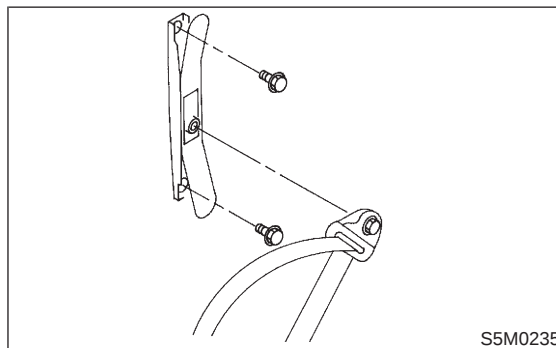

- 5) Installation is in the reverse order of removal.