


4. Rear Seat Belt

A: REMOVAL AND INSTALLATION

1. OUTER BELT

- 1) Remove rear cushion and side pad.
- 2) Remove rear backrest.
- 3) Remove rear quarter upper trim and rear quarter lower trim.
- 4) Remove anchor bolts.
- 5) Remove bolt and nut and then detach outer belt assembly.

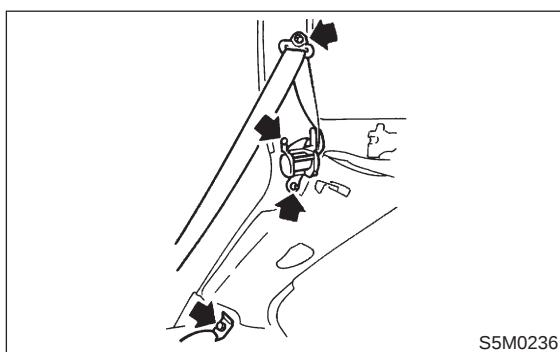

- 6) Installation is in the reverse order of removal.

NOTE:


Ensure that seat belt is properly reeled on and off after installation of ELR.

CAUTION:

- Be extremely careful not to confuse center seat anchor plate with outer seat anchor plate during installation.
- Ensure that seat belts are free from twisting after installation.
- Ensure that tongues, buckles and belts are properly placed on seat.

2. INNER BELT AND CENTER BELT

- 1) Remove rear cushion.
- 2) Remove bolts and then remove inner belt and center belt.

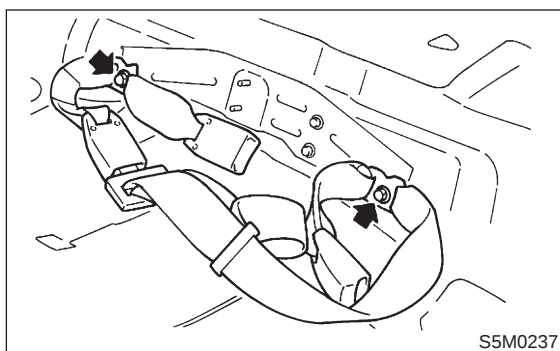


- 3) Installation is in the reverse order of removal.

5. Inner Trim Panel

A: REMOVAL AND INSTALLATION

1. FRONT SECTION

- 1) Removal order of trim panel:
 - (1) Remove front pillar upper trim (A).
 - (2) Remove front pillar lower trim (C).
 - (3) Remove side sill front upper cover (D).
 - (4) Remove rear seat cushion and then remove side sill rear upper cover (G).
 - (5) Remove center pillar cover (F).
 - (6) Remove screws and then remove center pillar upper trim (B).
 - (7) Remove center pillar lower trim (E).

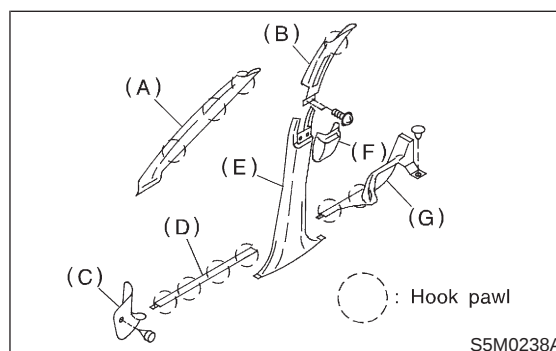

- 2) Installation is in the reverse order of removal.

CAUTION:

Be sure to securely hook pawls of inner trim panel on body flange.