


4. Rear Seat Belt

A: REMOVAL AND INSTALLATION

1. OUTER BELT

- 1) Remove rear cushion and side pad.
- 2) Remove rear backrest.
- 3) Remove rear quarter upper trim and rear quarter lower trim.
- 4) Remove anchor bolts.
- 5) Remove bolt and nut and then detach outer belt assembly.

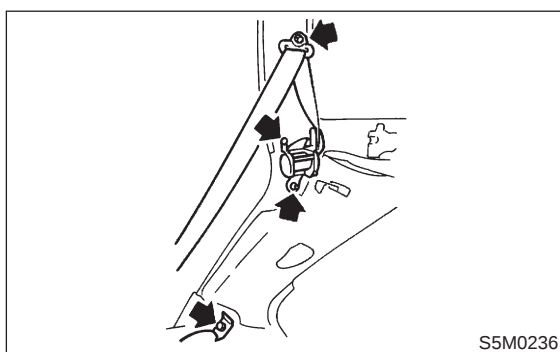

- 6) Installation is in the reverse order of removal.

NOTE:


Ensure that seat belt is properly reeled on and off after installation of ELR.

CAUTION:

- Be extremely careful not to confuse center seat anchor plate with outer seat anchor plate during installation.
- Ensure that seat belts are free from twisting after installation.
- Ensure that tongues, buckles and belts are properly placed on seat.

2. INNER BELT AND CENTER BELT

- 1) Remove rear cushion.
- 2) Remove bolts and then remove inner belt and center belt.

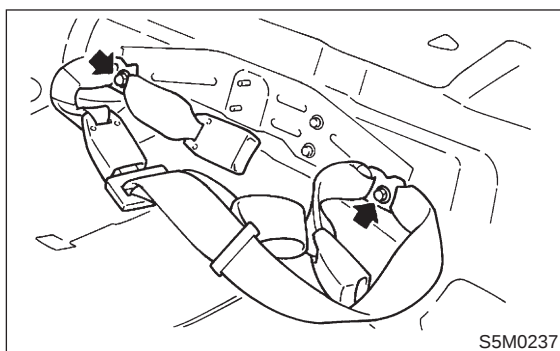


- 3) Installation is in the reverse order of removal.

5. Inner Trim Panel

A: REMOVAL AND INSTALLATION

1. FRONT SECTION

- 1) Removal order of trim panel:
 - (1) Remove front pillar upper trim (A).
 - (2) Remove front pillar lower trim (C).
 - (3) Remove side sill front upper cover (D).
 - (4) Remove rear seat cushion and then remove side sill rear upper cover (G).
 - (5) Remove center pillar cover (F).
 - (6) Remove screws and then remove center pillar upper trim (B).
 - (7) Remove center pillar lower trim (E).

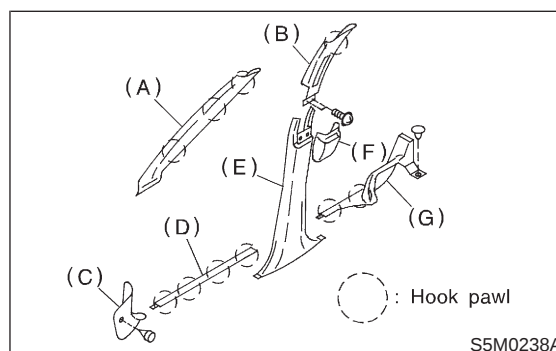


- 2) Installation is in the reverse order of removal.

CAUTION:

Be sure to securely hook pawls of inner trim panel on body flange.

2. REAR SECTION

- 1) Removal order of trim panel:
 - (1) Remove rear rail trim (I).
 - (2) Remove strut cover (J).
 - (3) Remove caps and screws then remove rear quarter upper trim (H).
 - (4) Remove rear skirt trim (L).
 - (5) Remove rear floor box and then remove rear quarter lower trim (K).

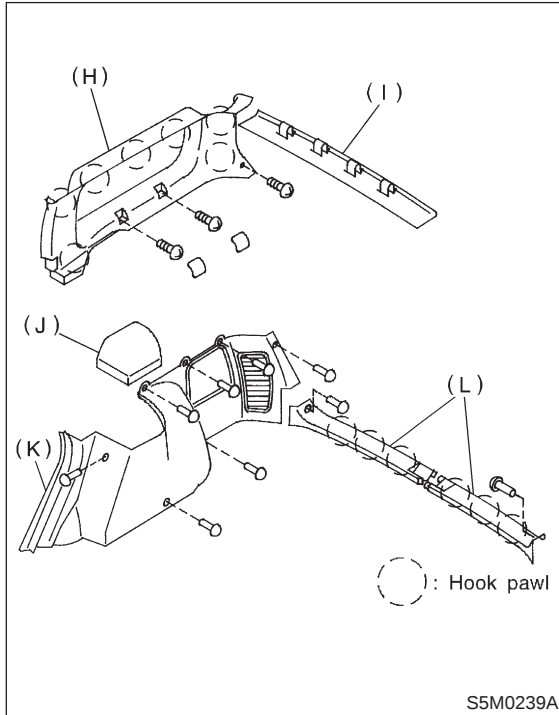

- 2) Installation is in the reverse order of removal.

CAUTION:

Be sure to securely hook pawls of inner trim panel on body flange.

3. FLOOR SECTION


- 1) Removal order of floor mat:
 - (1) Remove front seats.
 - (2) Remove rear seat cushion.
 - (3) Remove console box, depending on the specifications.
 - (4) Remove front pillar lower trim panel.
 - (5) Remove center pillar lower trim panel.
 - (6) Remove side sill cover.
 - (7) Remove clips from floor mat.

NOTE:

When pulling out edge, do not pull mat alone; pull mat together with edge. Pry off two steel clips on side sill front cover and one on side sill rear cover using screwdriver.

- (8) Remove mat hook.
- (9) Remove mat from toe board area.
- (10) Remove mat from rear heater duct.

- (11) Roll mat, and take it out of opened rear door.

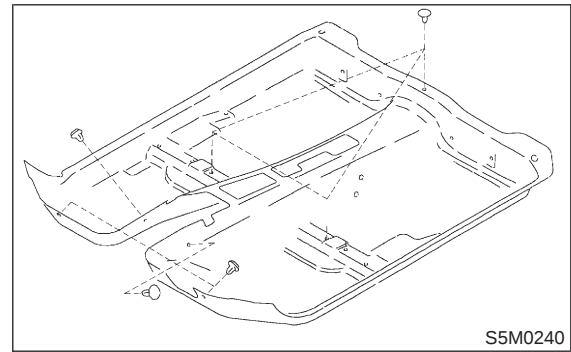


- (12) Installation is in the reverse order of removal.

NOTE:

- Secure mat firmly with hook and velcro tape.
- Insert mat edge firmly into the groove of side sill cover.


- 2) Removal order of rear floor box:
 - (1) Remove clips and then detach rear floor boxes.

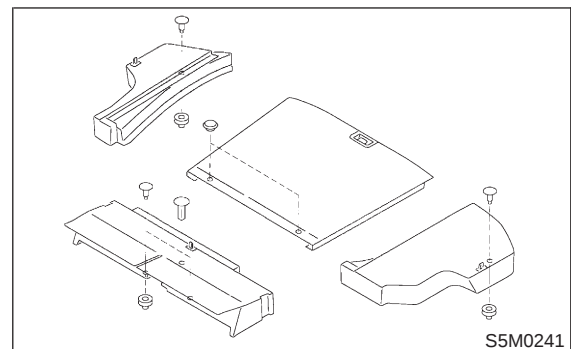

- (2) Installation is in the reverse order of removal.

4. ROOF TRIM


- 1) Remove head console.

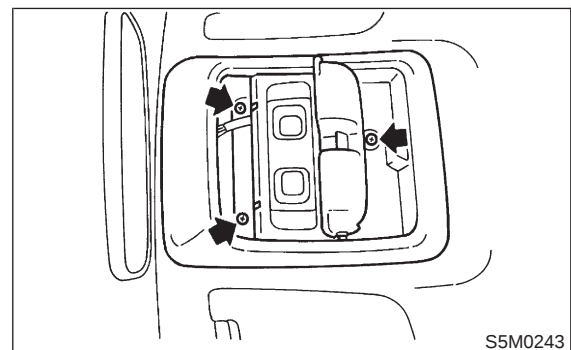

- 2) Remove sunvisor and assist rail.
- 3) Remove front pillar upper trim, center pillar upper trim, rear quarter upper trim and rear rail trim.

4) Using ST, remove clips and then detach roof trim.

ST 925580000 PULLER

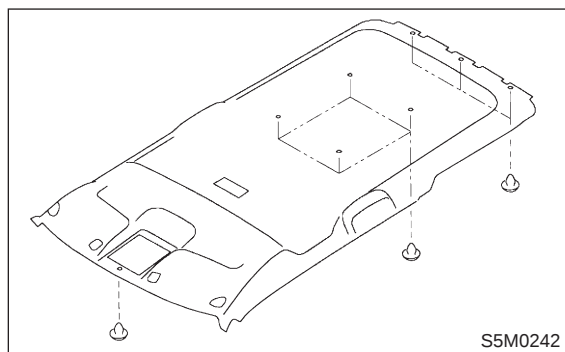

5) Installation is in the reverse order of removal.

CAUTION:

When removing clip, use great care to prevent damaging the roof trim.

MEMO: