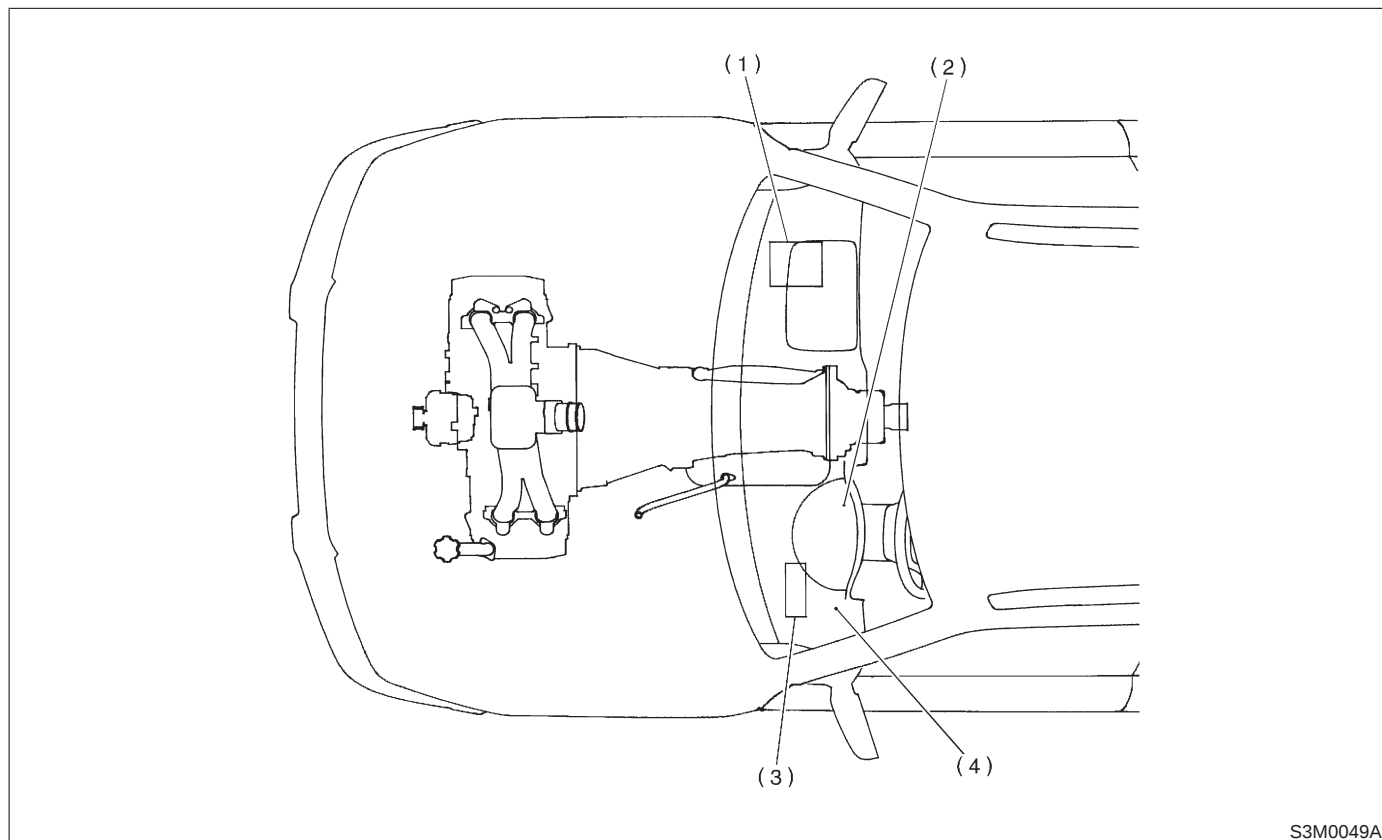


3-2 [T3A0] AUTOMATIC TRANSMISSION AND DIFFERENTIAL

3. Electrical Components Location


3. Electrical Components Location

A: MODULE




S3M0049A

- | | | |
|---|---------|--|
| (1) ECM | (3) TCM | (4) Data link connector (for Subaru select monitor and OBD-II general scan tool) |
| (2) AT OIL TEMP indicator light (AT diagnostic indicator light) | | |

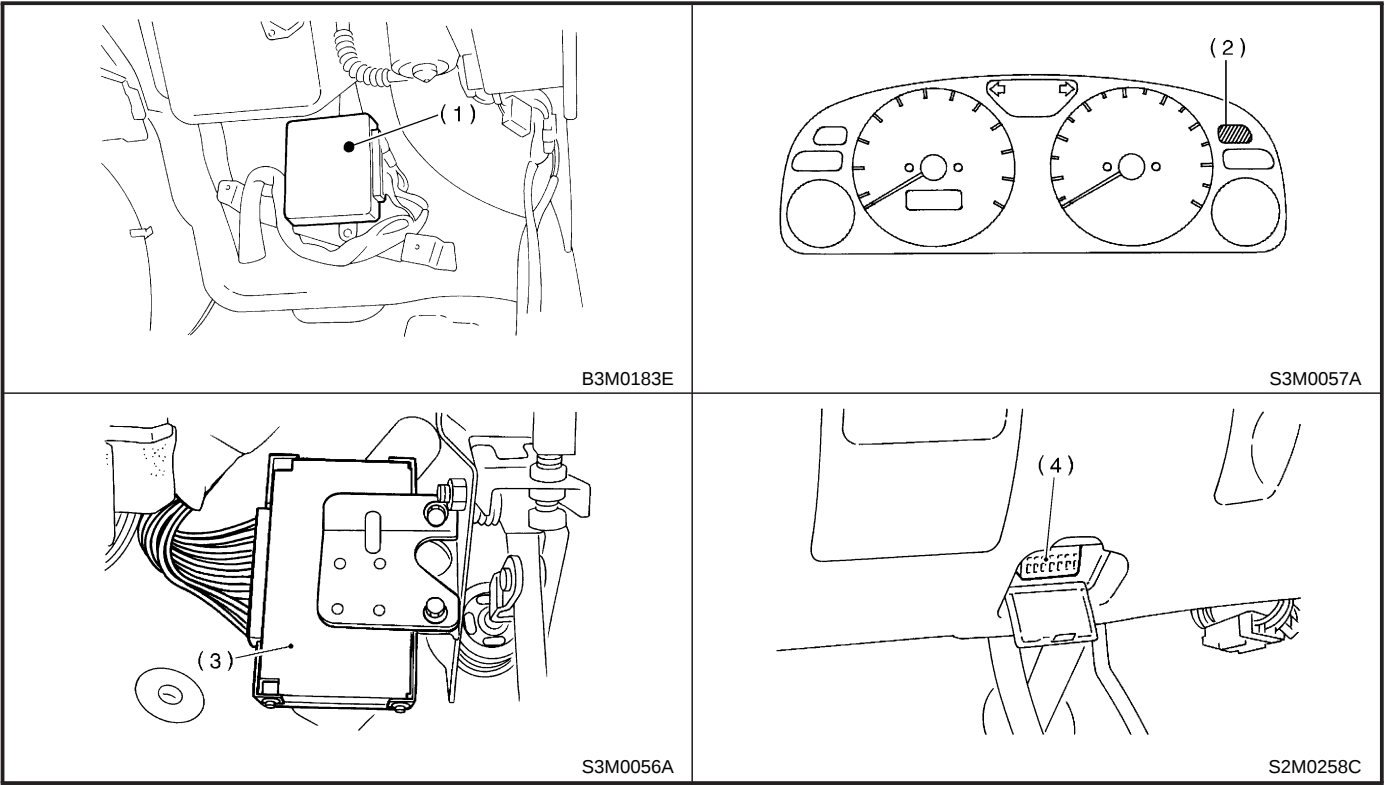

B: SENSOR





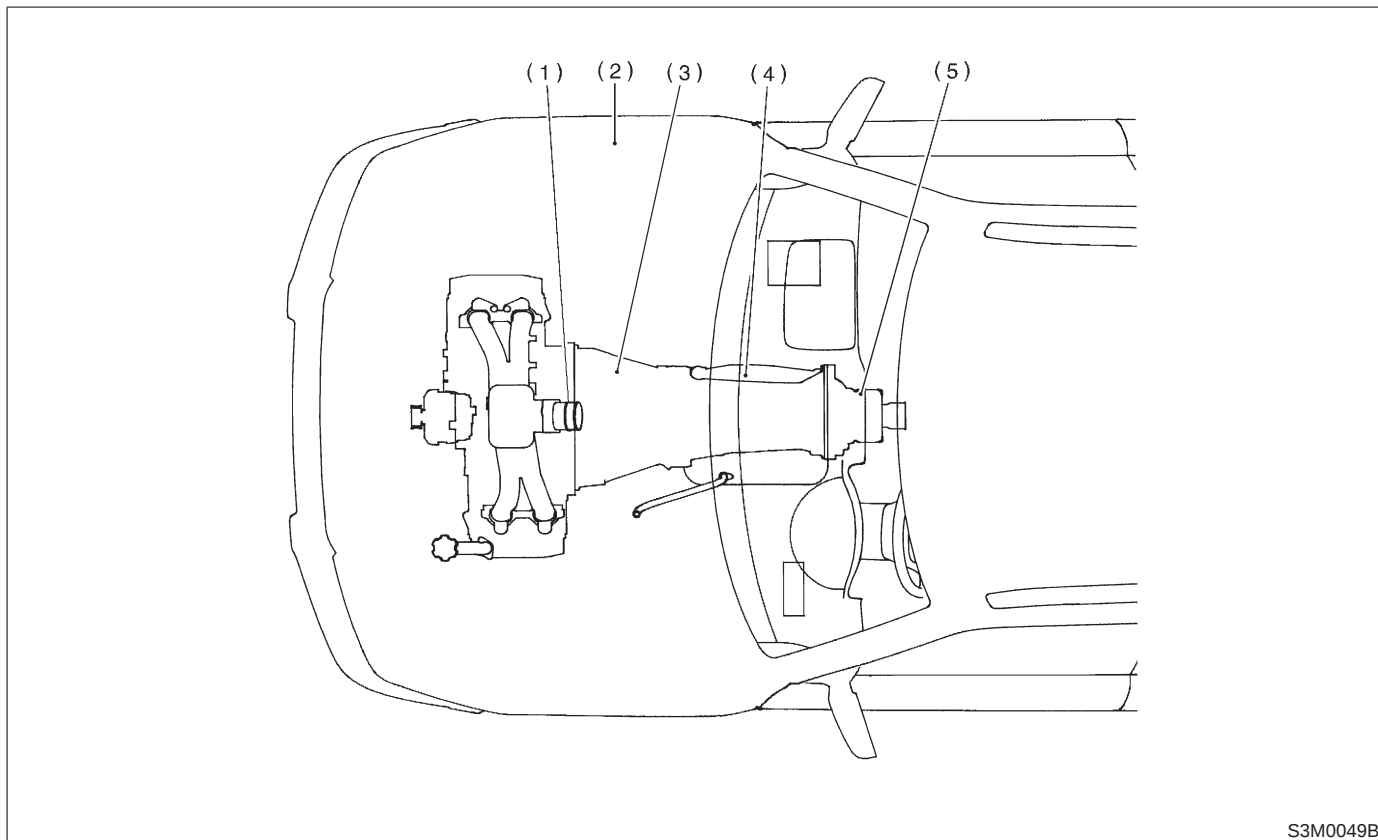


S3M0049B


(1) Throttle position sensor
(2) Dropping resistor

(3) Vehicle speed sensor 2
(4) Inhibitor switch

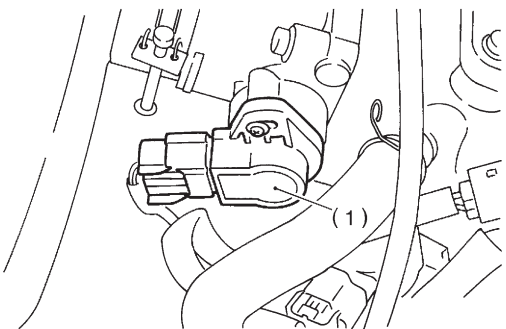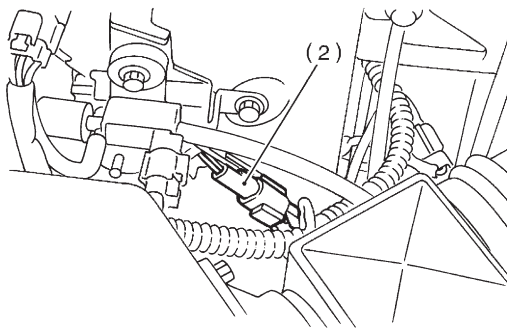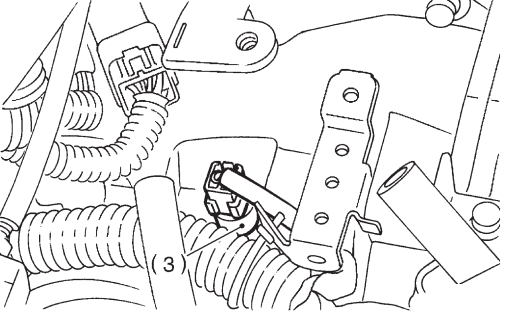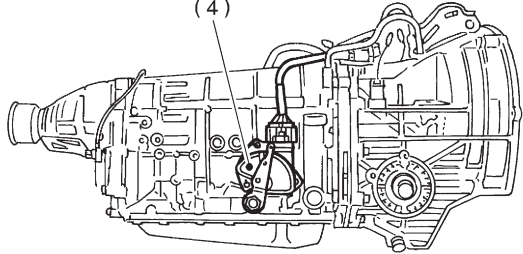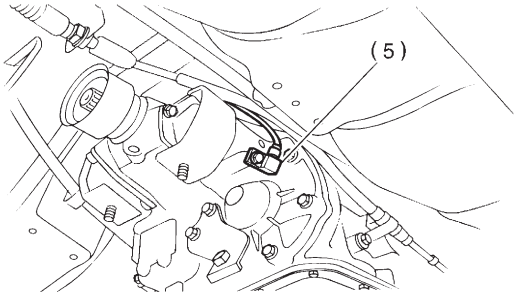(5) Vehicle speed sensor 1

 S2M0262B	 S3M0059A
 S3M0058A	 B2M1043J
 B3M0184G	SUBARU.

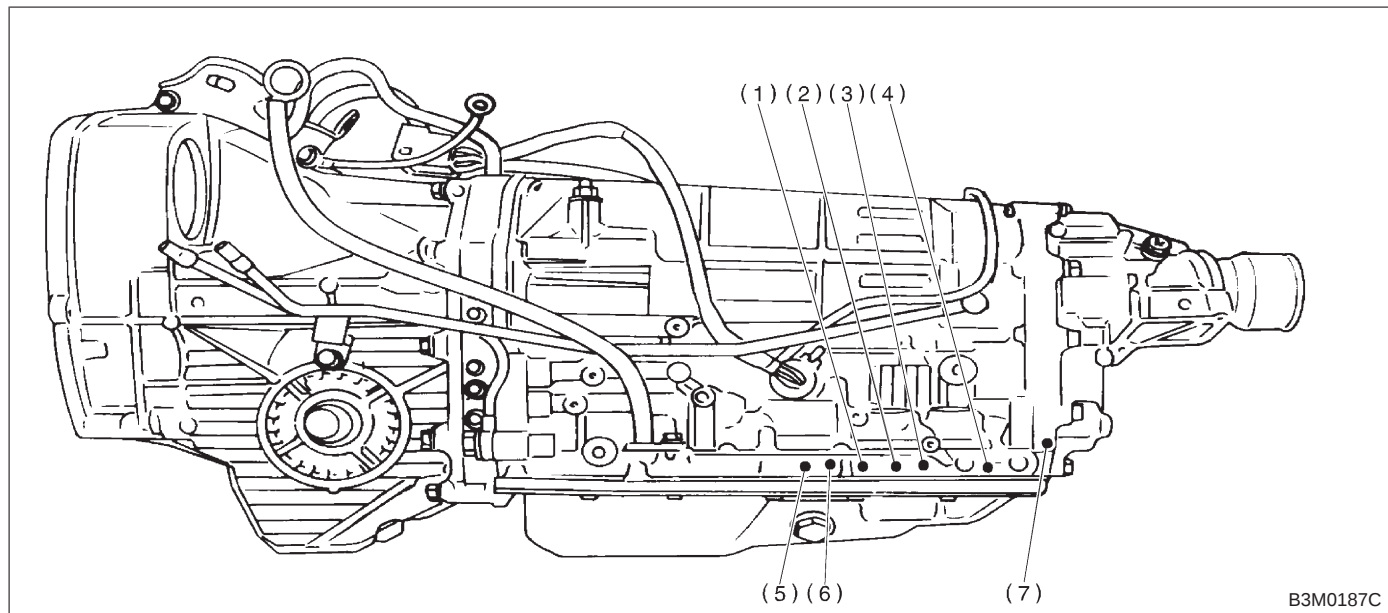C: SOLENOID



- | | | |
|---------------------|----------------------------|---------------------------|
| (1) Duty solenoid A | (4) Solenoid 3 | (7) Duty solenoid C (AWD) |
| (2) Solenoid 2 | (5) Duty solenoid B | |
| (3) Solenoid 1 | (6) ATF temperature sensor | |

