


4. Schematic

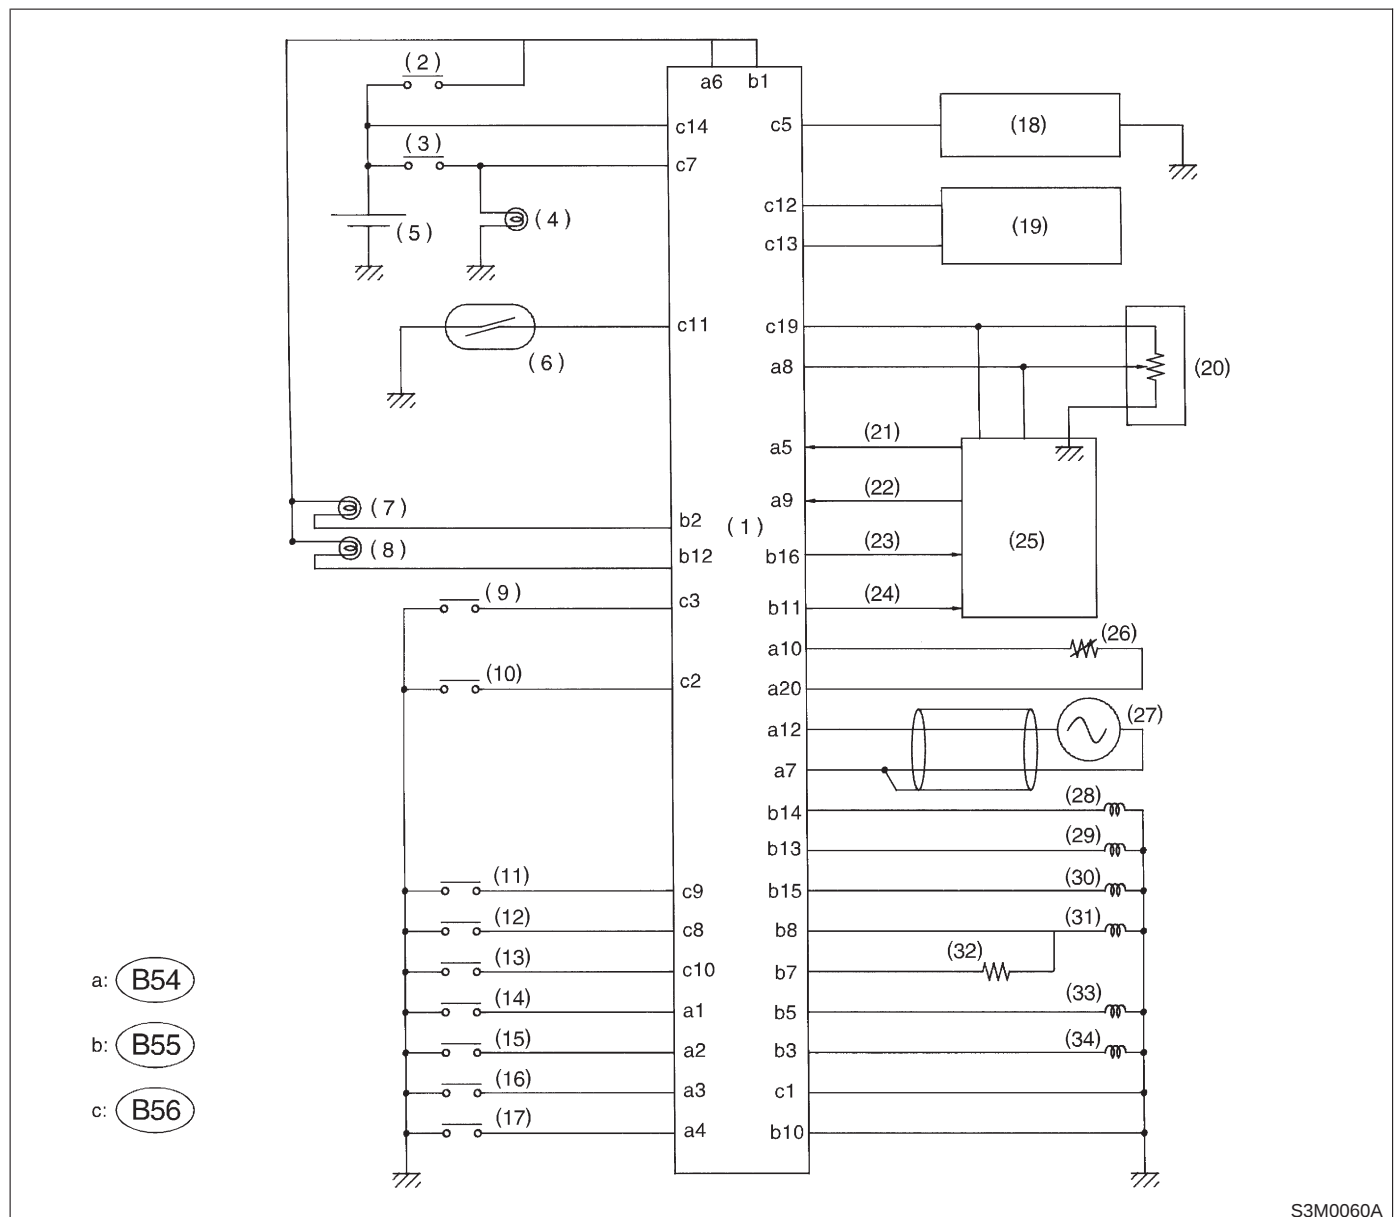

- | | | |
|---------------------------------|-------------------------------|-----------------------------|
| (1) Transmission control module | (13) "N" range switch | (25) Engine control module |
| (2) Ignition switch | (14) "D" range switch | (26) ATF temperature sensor |
| (3) Brake switch | (15) "3" range switch | (27) Vehicle speed sensor 1 |
| (4) Brake light | (16) "2" range switch | (28) Shift solenoid 1 |
| (5) Battery | (17) "1" range switch | (29) Shift solenoid 2 |
| (6) Vehicle speed sensor 2 | (18) ABS control module | (30) Shift solenoid 3 |
| (7) FWD indicator light | (19) Data link connector | (31) Duty solenoid A |
| (8) AT OIL TEMP indicator light | (20) Throttle position sensor | (32) Dropping resistor |
| (9) Cruise set switch | (21) Engine speed signal | (33) Duty solenoid B |
| (10) FWD switch | (22) Mass air flow signal | (34) Duty solenoid C |
| (11) "P" range switch | (23) Torque control signal | |
| (12) "R" range switch | (24) AT diagnostics signal | |