

6-2 [T100] BODY ELECTRICAL SYSTEM (CRUISE CONTROL)

1. Supplemental Restraint System "Airbag"

1. Supplemental Restraint System "Airbag"

Airbag system wiring harness is routed near the cruise control module and cruise control command switch.

CAUTION:

- All Airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuits.
- Be careful not to damage Airbag system wiring harness when servicing the cruise control module and cruise control command switch.

2. Pre-inspection

A: FUNCTION TESTS

Conduct road tests by selecting a smooth, flat road or use free rollers for road test simulation.

1. CRUISE CONTROL MAIN SWITCH

- 1) Turn ignition switch to ON.
- 2) Check that cruise control main switch indicator light comes on when main switch is pressed (ON).
- 3) Check that main switch indicator light goes out when main switch is pressed again (OFF).
- 4) Turn ignition switch to OFF with main switch ON (indicated by illumination). Turn ignition switch ON again to ensure that main switch indicator light remains OFF.

2. CRUISE CONTROL COMMAND SWITCH

- 1) Check that cruise control command switch is properly set in "SET/COAST", "RESUME/ACCEL", or "CANCEL" mode.
- 2) Also check that command switch returns to the original position when released.

3. CONSTANT SPEED TEST

- 1) Turn cruise control main switch to ON.
- 2) Drive the vehicle at a speed greater than 40 km/h (25 MPH).
- 3) Press command switch to set in "SET/COAST" mode.
- 4) Ensure that vehicle is maintained at the speed set when command switch was pressed.

4. ACCELERATION TEST

- 1) Set vehicle speed at a speed greater than 40 km/h (25 MPH).
- 2) Ensure that vehicle continues to accelerate while holding command switch in "RESUME/ACCEL" mode, and that vehicle maintains that optional speed when command switch is released.

5. DECELERATION TEST

- 1) Set vehicle speed at an optional speed greater than 40 km/h (25 MPH).
- 2) Ensure that vehicle continues to decelerate while holding command switch in "SET/COAST" mode, and that it maintains that optional speed when command switch is released.

NOTE:

When vehicle speed reaches the lower speed limit of 30 km/h (19 MPH) during deceleration, cruise control will be released.