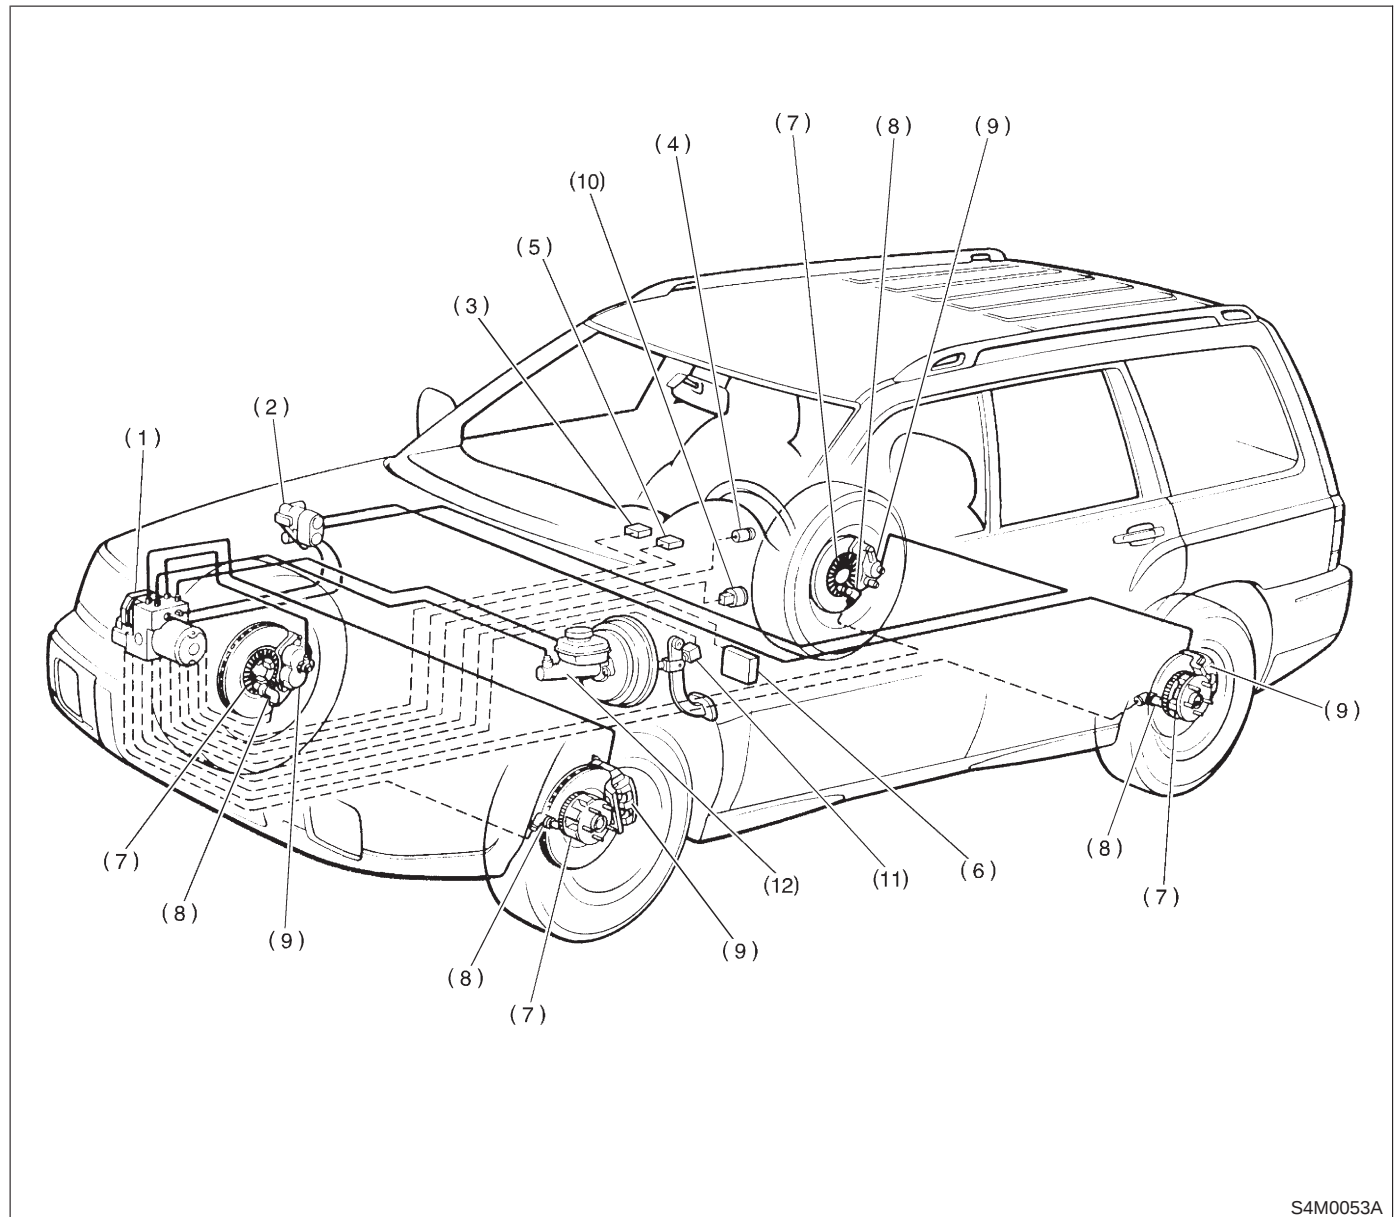


3. Electrical Components Location

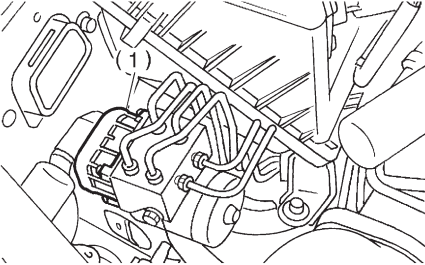
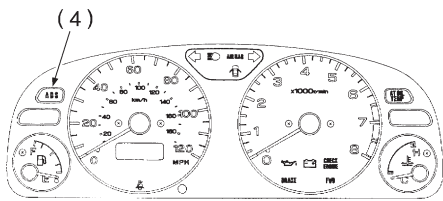
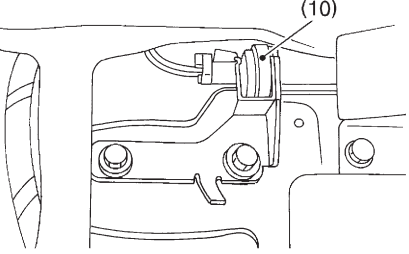
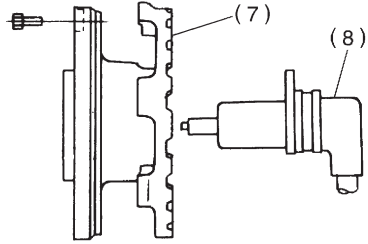
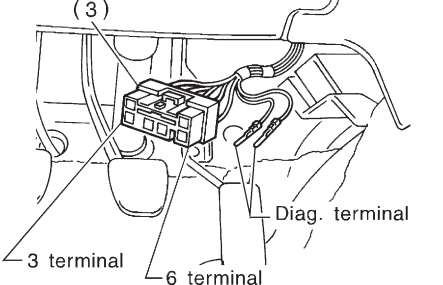
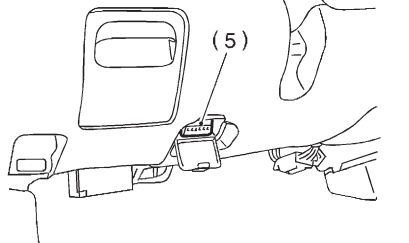


S4M0053A

- (1) ABS control module and hydraulic control unit (ABSCM&H/U)
- (2) Proportioning valve
- (3) Diagnosis connector
- (4) ABS warning light

- (5) Data link connector (for Subaru select monitor)
- (6) Transmission control module (only AT vehicle)
- (7) Tone wheel

- (8) ABS sensor
- (9) Wheel cylinder
- (10) G sensor
- (11) Brake switch
- (12) Master cylinder

 B4M1226B	 S4M0054A	 S4M0055A
 B4M0646E	 B4M0231E	 S4M0056A