


3. Tools for Diagnostics

CAUTION:

Be sure to use specified test harness A, E, F and G when measuring voltage, resistance, etc. of AIRBAG system component parts.

A: TEST HARNESS A


PN 98299PA000

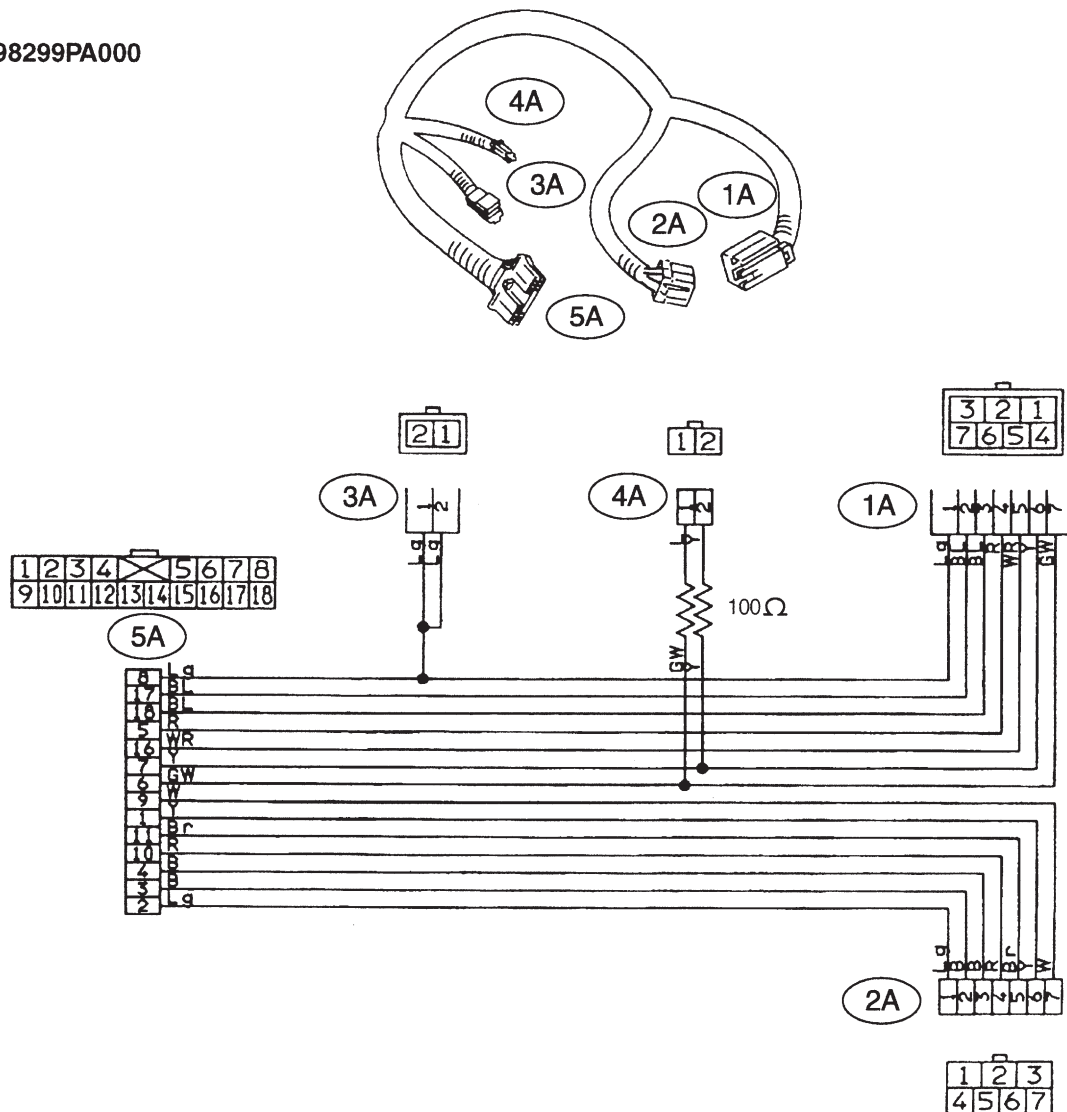

B5M0112A

B: TEST HARNESS E


PN 98299FC000

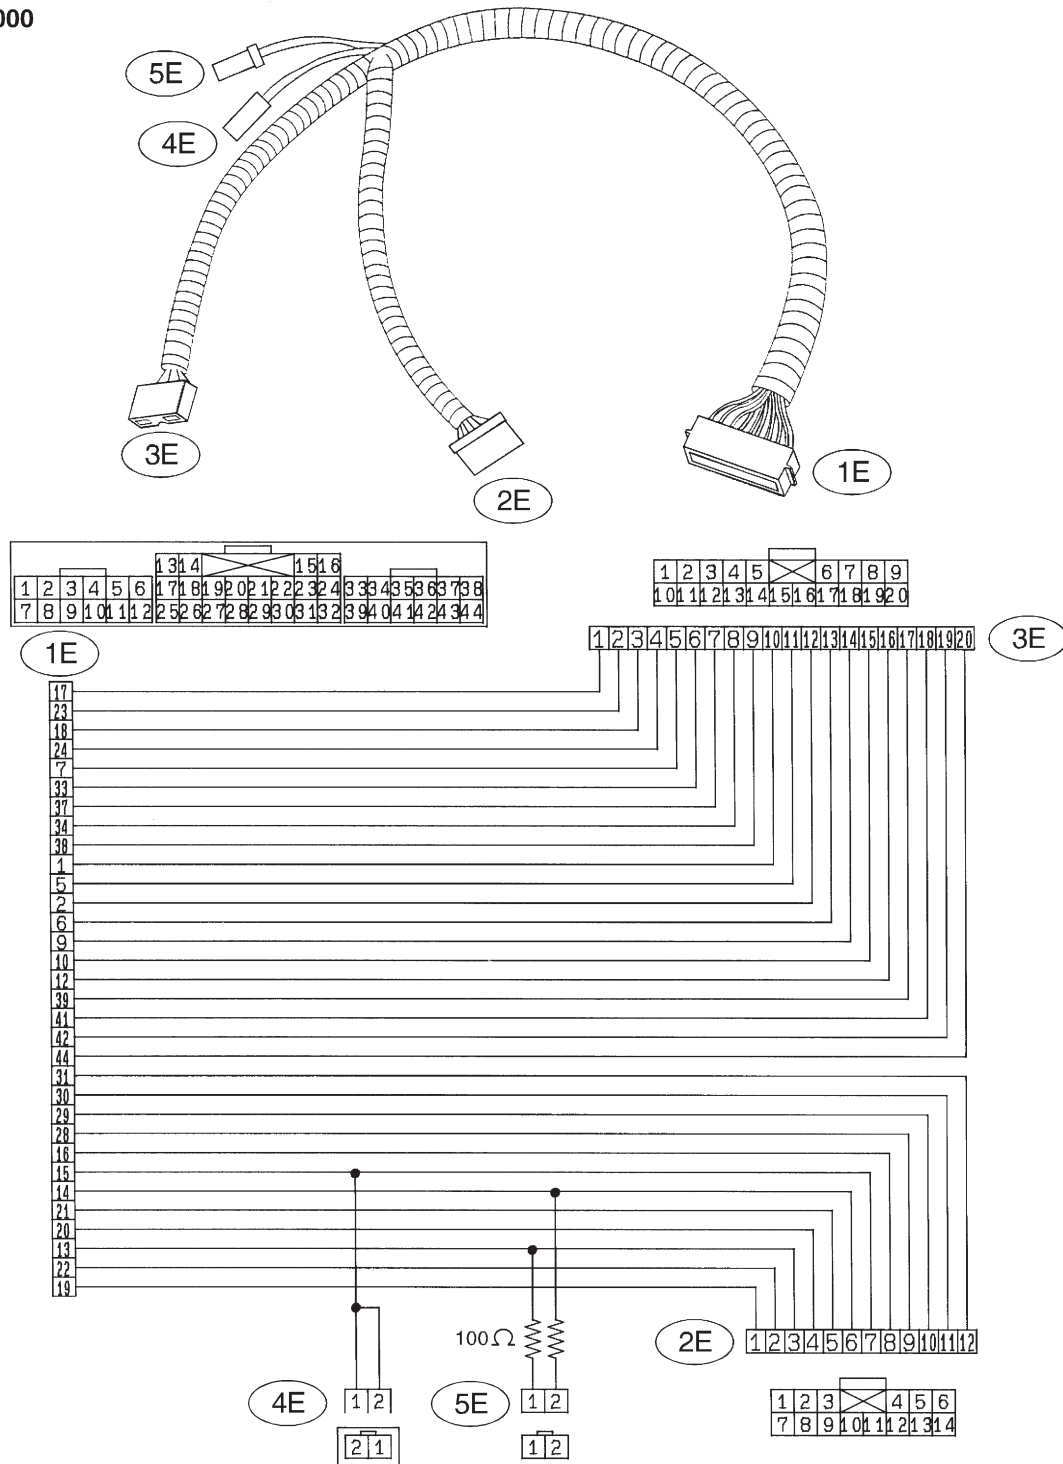

S5M0246A


C: TEST HARNESS F

PN 98299FC010

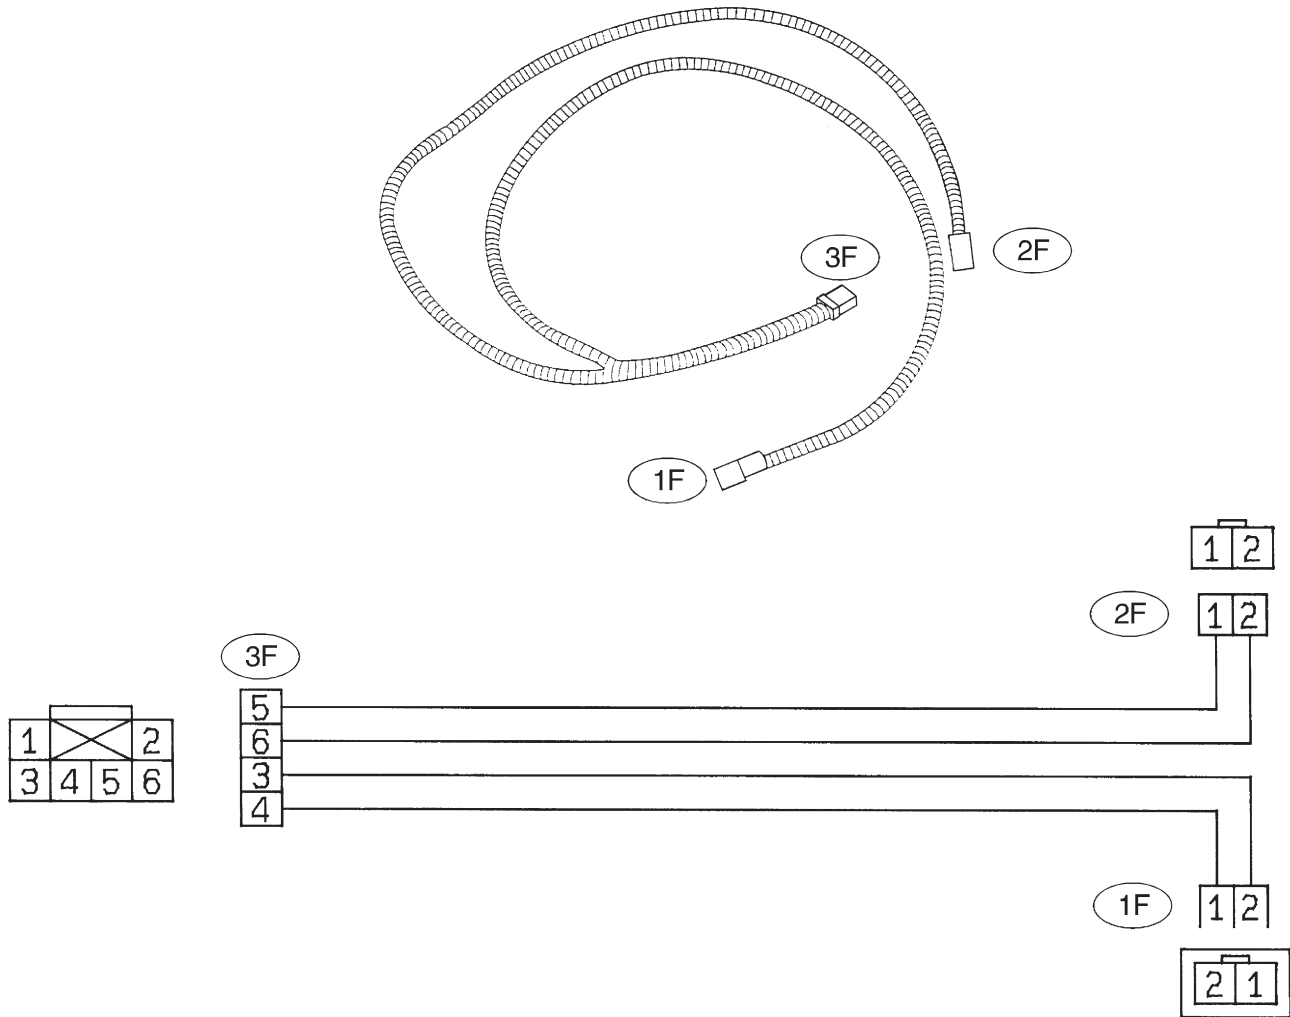

S5M0247A



D: TEST HARNESS G

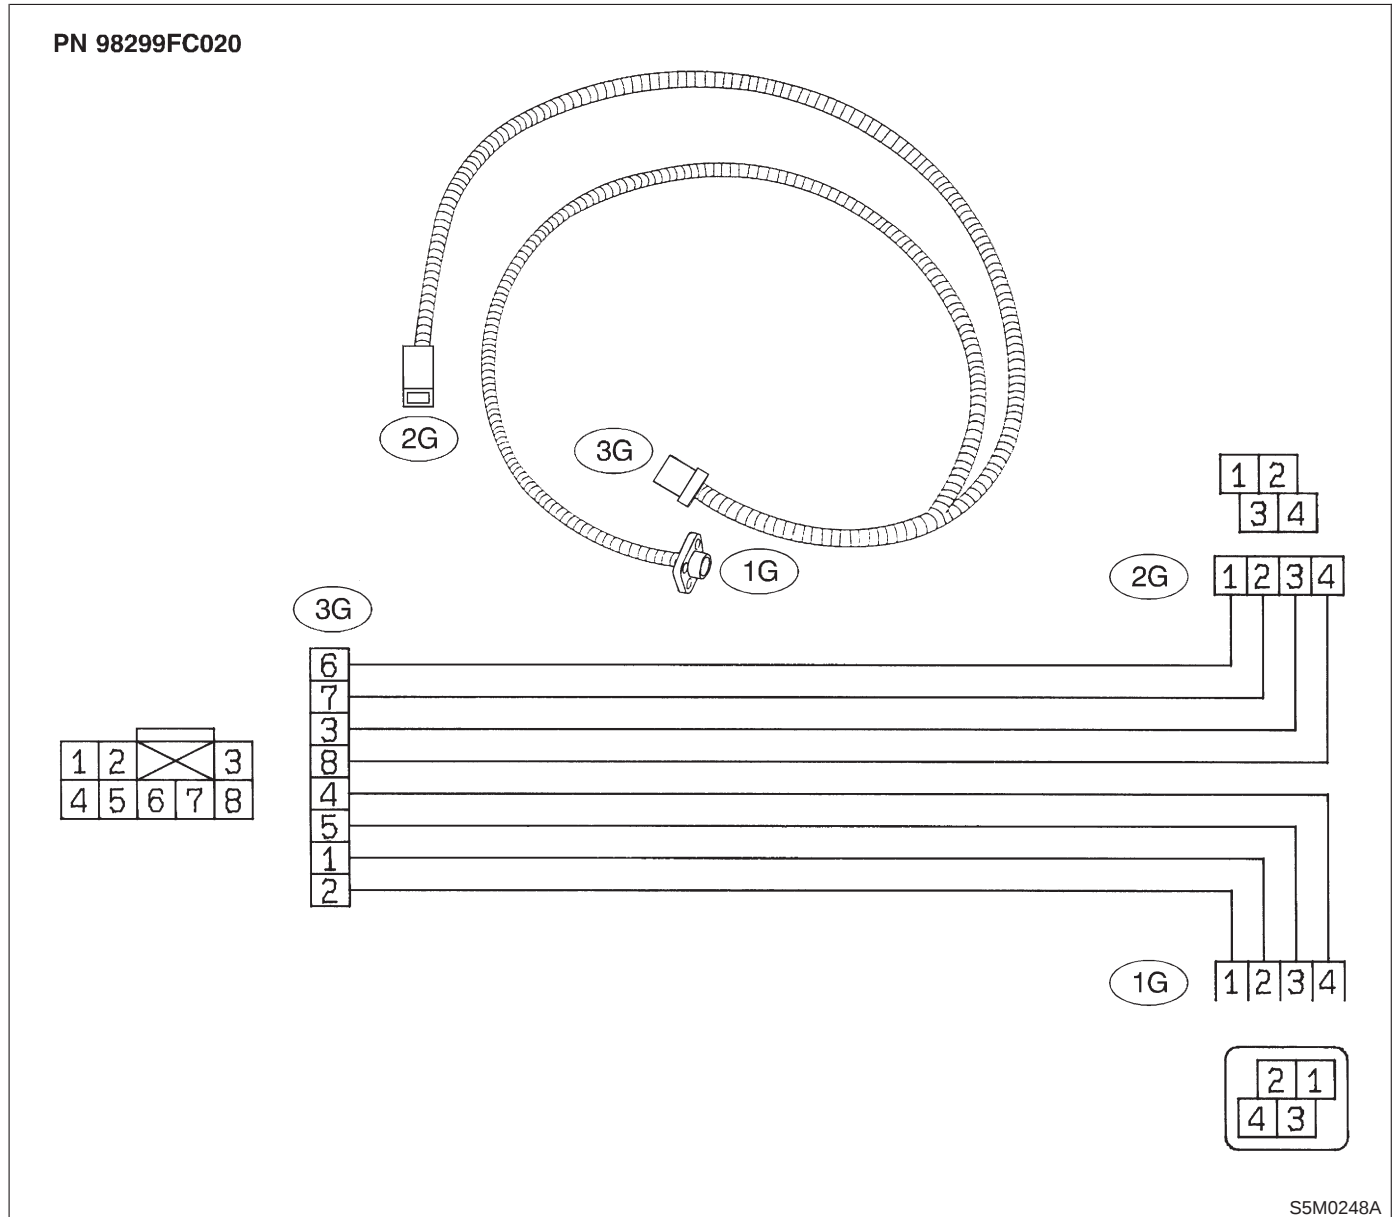

E: AIRBAG RESISTOR

The airbag resistor is used during diagnostics. The airbag resistor has the same resistance as the airbag module and thus provides safety when used instead of the airbag module. It also makes it possible to finish, diagnostics in less time.

PN 98299PA040

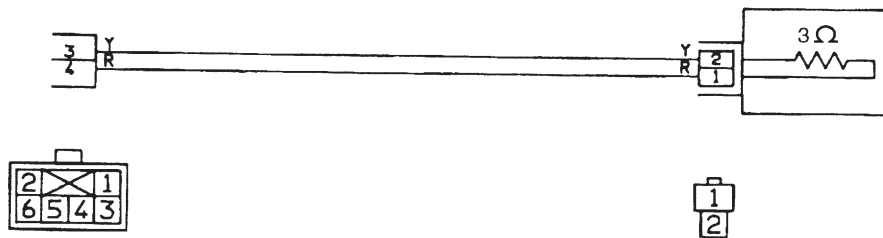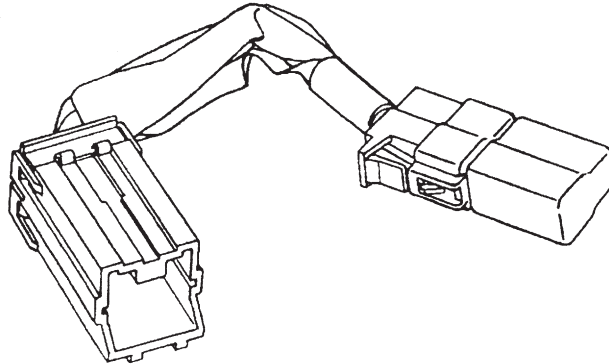

B5M0114A