



8. Combination Meter

A: REMOVAL AND INSTALLATION

- 1) Move steering wheel most down.
- 2) Remove screws which secure visor and remove visor.

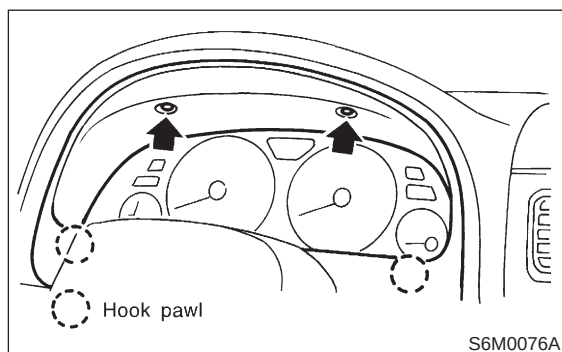

- 3) Remove screws which secure combination meter, and pull combination meter out.

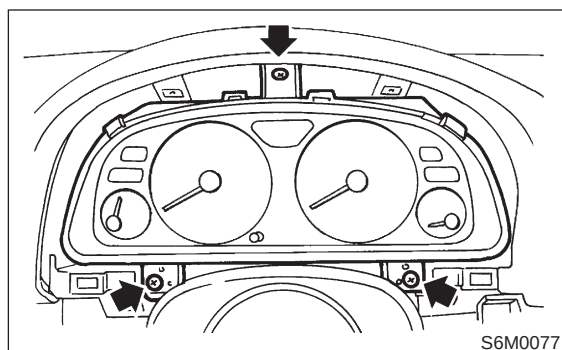


- 4) Disconnect connector from back of combination meter.
- 5) Installation is in the reverse order of removal.

CAUTION:

When installing combination meter, be sure to connect connectors to backside of combination meter.

B: BULB REPLACEMENT

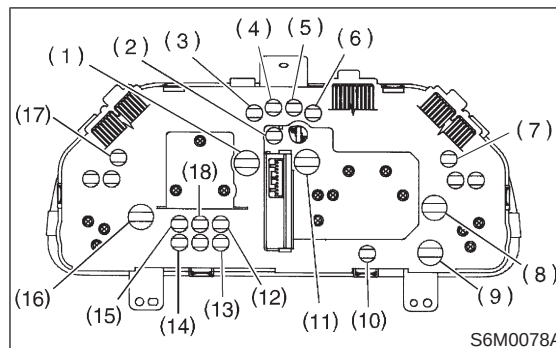

- (1) Tachometer
- (2) Door open
- (3) Turn RH
- (4) Airbag
- (5) HI-beam
- (6) Turn LH
- (7) ABS
- (8) Speedometer and fuel gauge
- (9) Low fuel
- (10) Seat belt
- (11) Speedometer
- (12) Oil pressure
- (13) Brake
- (14) FWD
- (15) Check engine
- (16) Tachometer and temperature gauge
- (17) AT oil temp.
- (18) Charge