



6. Ignitor

A: REMOVAL AND INSTALLATION


- 1) Disconnect battery ground cable.

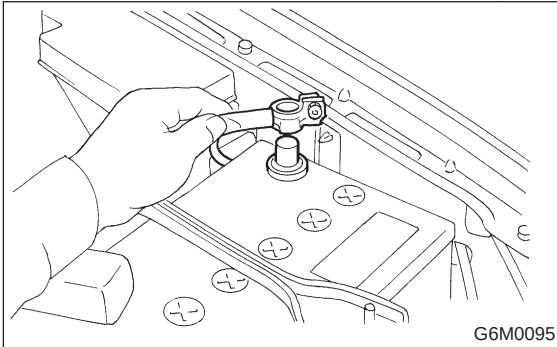


- 2) Remove air intake chamber. <Ref. to 2-7 [W19A0].>

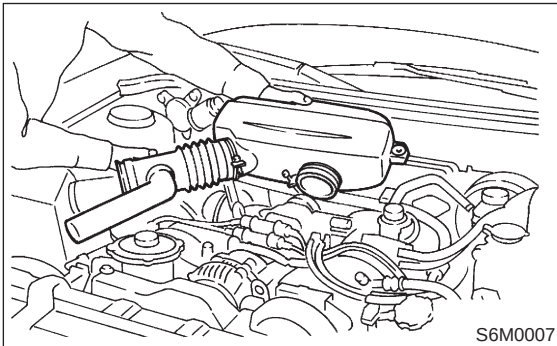

- 3) Disconnect connector from ignitor.

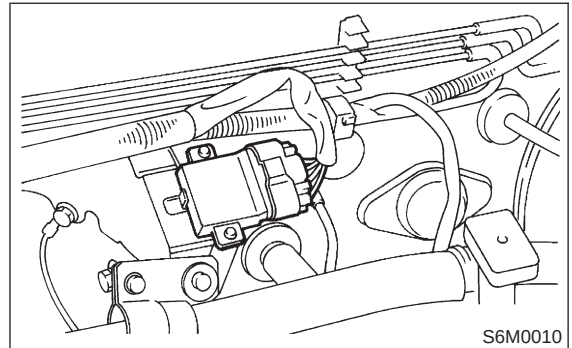

- 4) Remove screws which hold ignitor onto body.

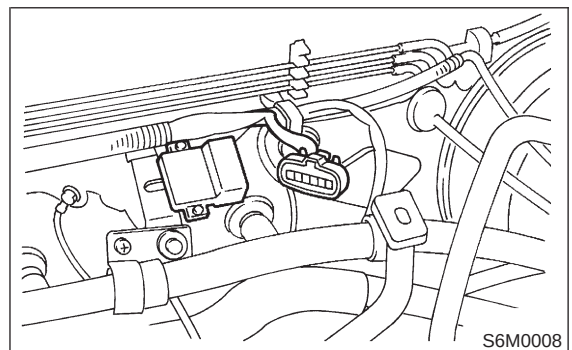

- 5) Installation is in the reverse order of removal.