



4. Purge Control Solenoid Valve

A: REMOVAL AND INSTALLATION


1) Disconnect battery ground cable.

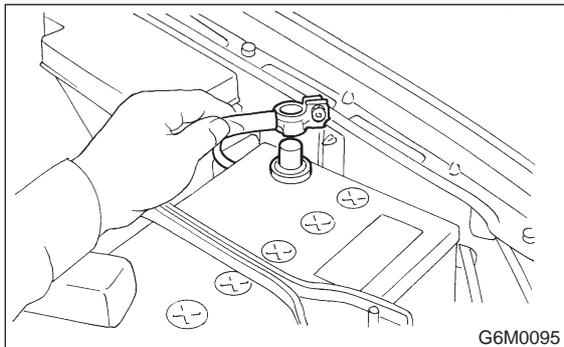


2) Remove air intake chamber and air intake duct as a unit. <Ref. to 2-7 [W19A0].> and <Ref. to 2-1 [W1A0].>

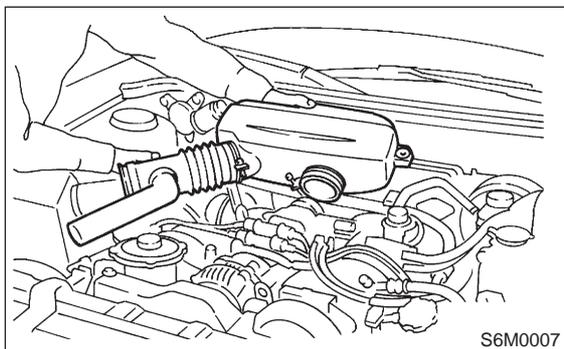

3) Remove bolt which installs purge control solenoid valve to intake manifold.

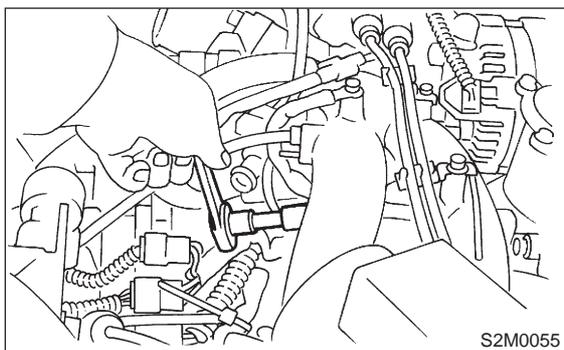

- 4) Take out purge control solenoid valve.
- 5) Disconnect connector from purge control solenoid valve.
- 6) Disconnect vacuum hoses from purge control solenoid valve.

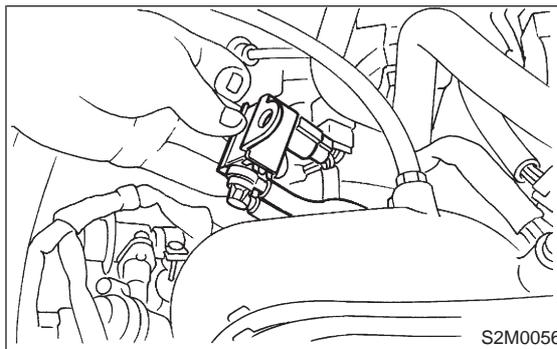

7) Installation is in the reverse order of removal.

Tightening torque:

$15.7 \pm 1.5 \text{ N}\cdot\text{m}$ ($1.6 \pm 0.15 \text{ kg}\cdot\text{m}$, $11.6 \pm 1.1 \text{ ft}\cdot\text{lb}$)

