



7. EGR Solenoid Valve

A: REMOVAL AND INSTALLATION

1) Disconnect battery ground cable.

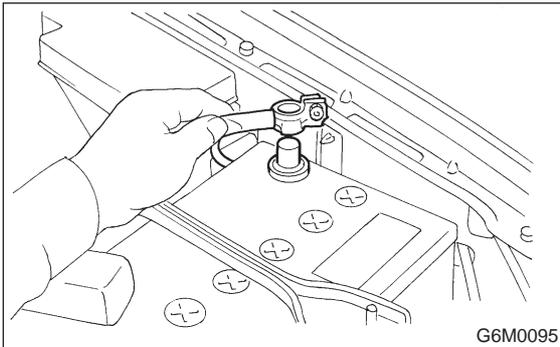


2) Remove air intake chamber. <Ref. to 2-7 [W19A0].>

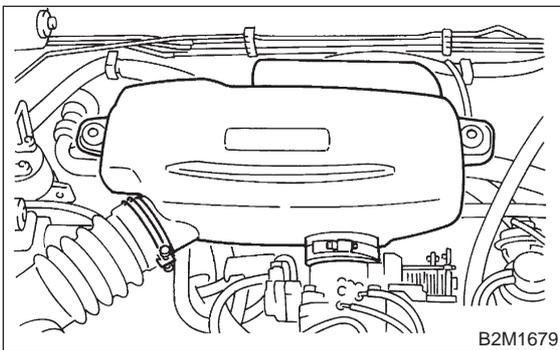


3) Disconnect vacuum hoses from EGR solenoid valve.

4) Disconnect connector from EGR solenoid valve.

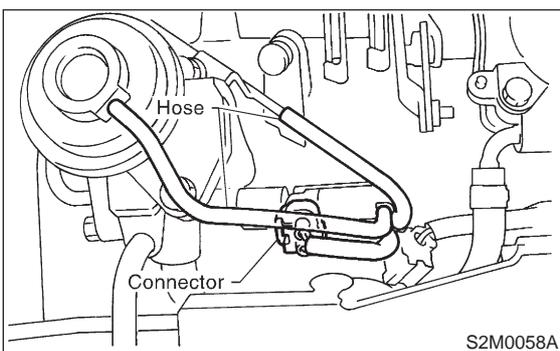

5) Remove bolt which installs EGR solenoid valve onto intake manifold.

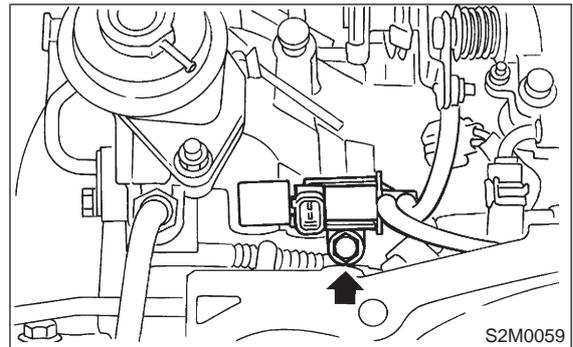

6) Installation is in the reverse order of removal.

Tightening torque:

$15.7 \pm 1.5 \text{ N}\cdot\text{m}$ ($1.6 \pm 0.15 \text{ kg}\cdot\text{m}$, $11.6 \pm 1.1 \text{ ft}\cdot\text{lb}$)