



9) Disconnect vacuum hose from pressure control solenoid valve.

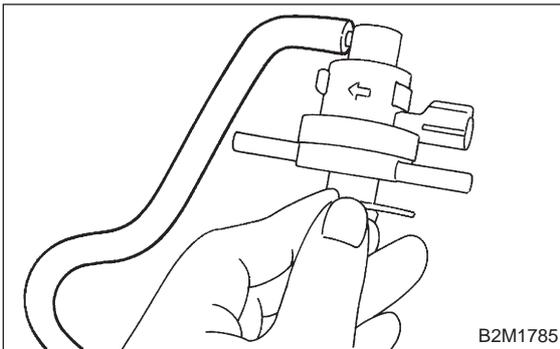

10) Installation is in the reverse order of removal.


Tightening torque:
17.6±5 N·m (1.8±0.5 kg·m, 13.0±3.6 ft·lb)

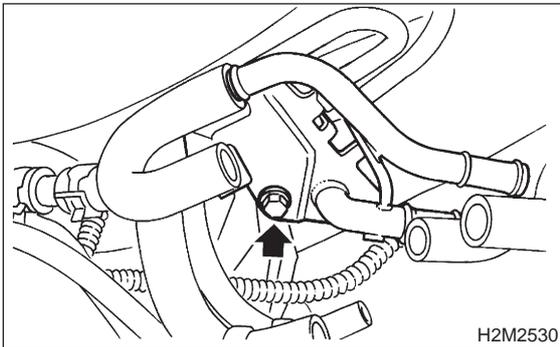


10. Vent Control Solenoid Valve

A: REMOVAL


1) Disconnect battery ground cable.

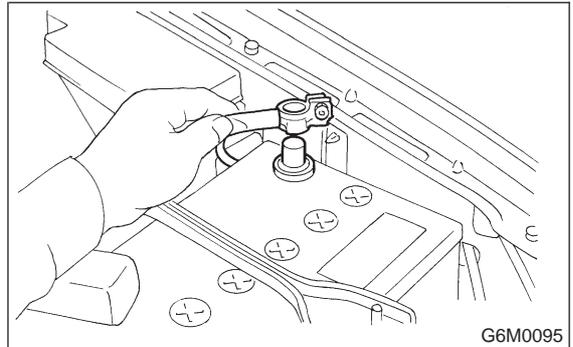

2) Lift-up the vehicle.
3) Remove canister. <Ref. to 2-1 [W3A0].>

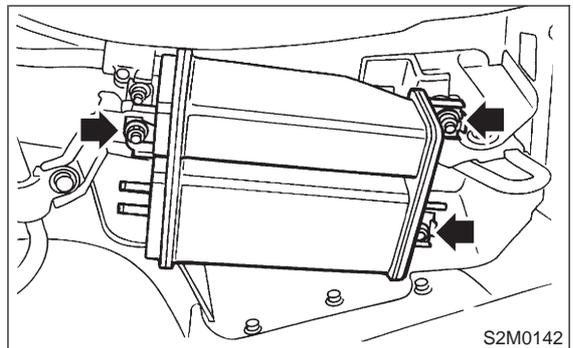


4) Disconnect two hoses from air filter.

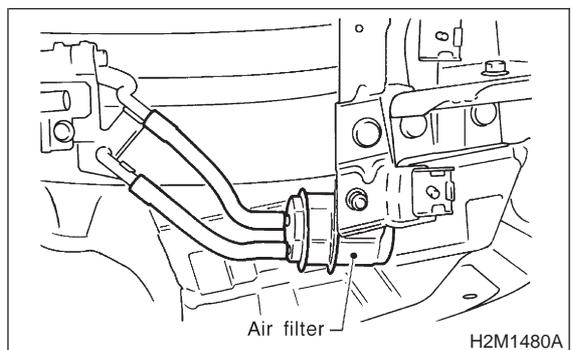


10. Vent Control Solenoid Valve


- 5) Disconnect connector from vent control solenoid valve.

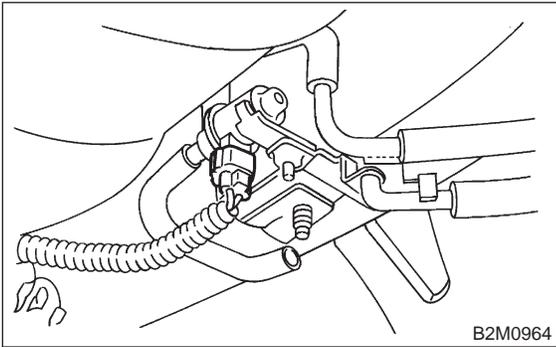


- 6) Remove one bolt fixing bracket on the body.

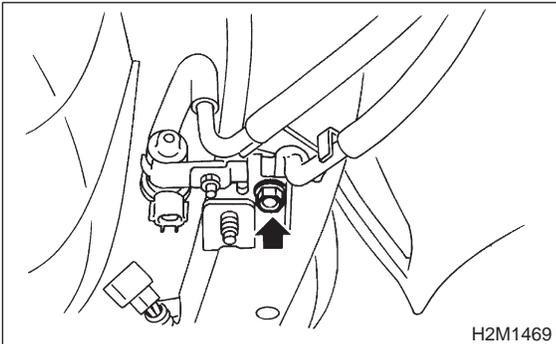

- 7) Remove two vacuum hoses from vent control solenoid valve.

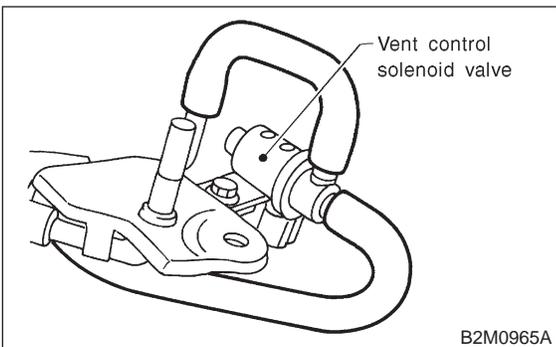


- 8) Remove one bolt fixing vent control solenoid valve on bracket.

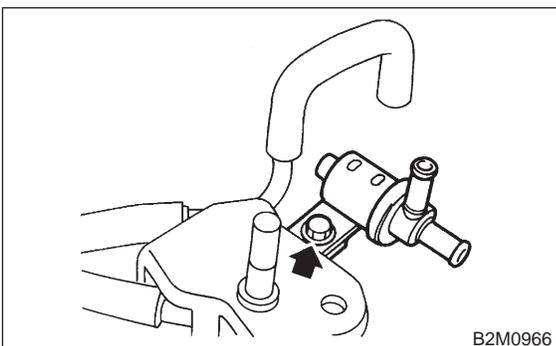


- 9) Remove vent control solenoid valve.

B: INSTALLATION

- 1) Install the bolt fixing vent control solenoid valve on bracket.

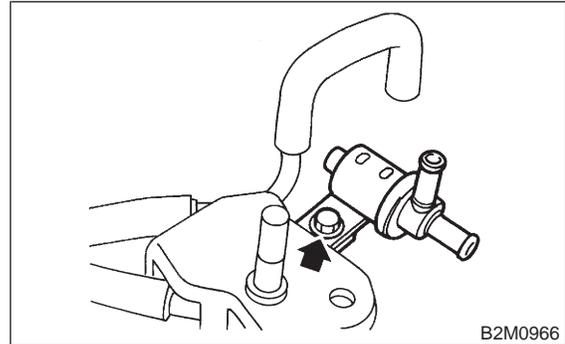


- 2) Install two vacuum hoses to vent control solenoid valve.

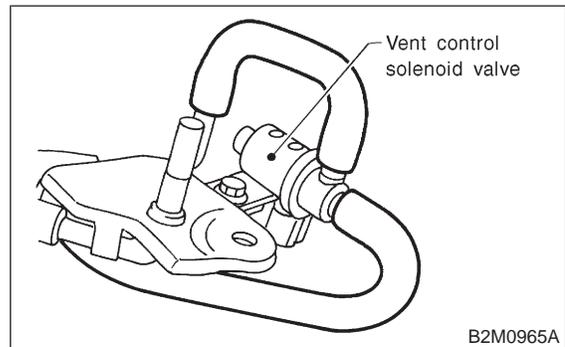


- 3) Install the bolt fixing bracket on the body.

Tightening torque:


17.6±5 N·m (1.8±0.5 kg·m, 13.0±3.6 ft·lb)

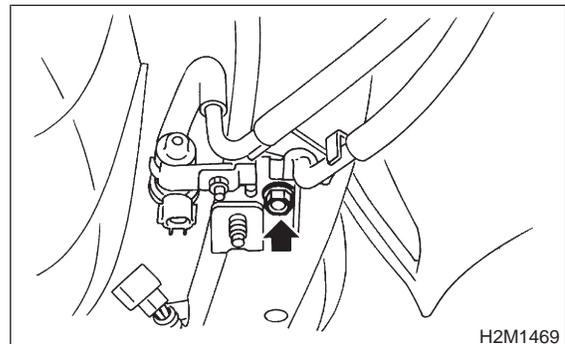


- 4) Connect connector to vent control solenoid valve.

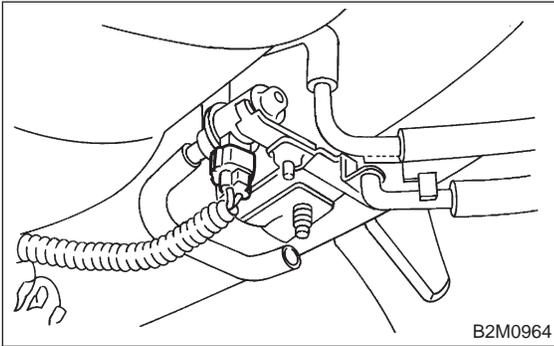


- 5) Connect two hoses to air filter.

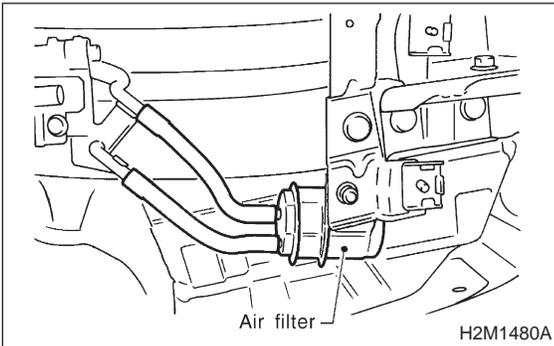

- 6) Install canister. <Ref. to 2-1 [W3A0].>

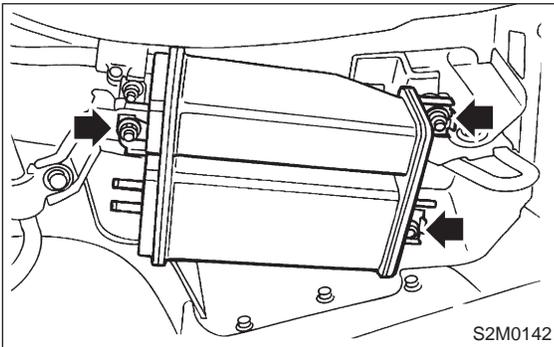

- 7) Lower the vehicle.
- 8) Connect battery ground cable.

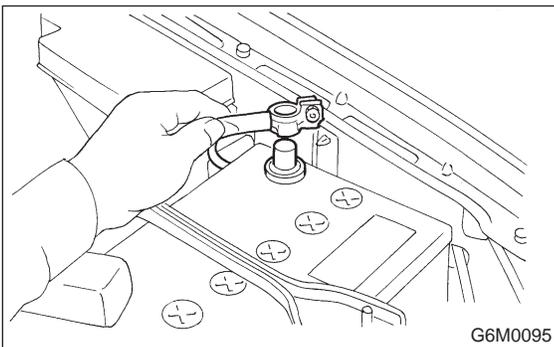


11. Main Fuel Level Sensor


A: REMOVAL

1. WITHOUT ORVR MODEL

- 1) Release fuel pressure. <Ref. to 2-2 [W9B0].>
- 2) Remove fuel filler cap.
- 3) Disconnect battery ground cable.

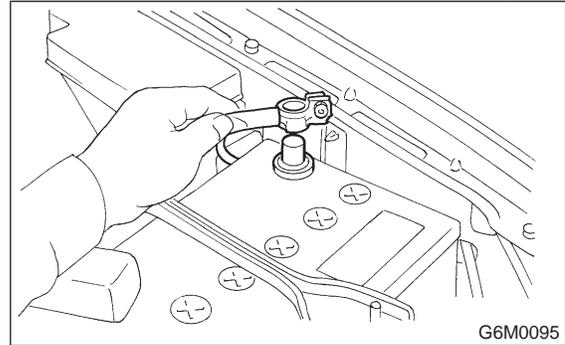

- 4) Disconnect quick connector, and disconnect fuel delivery hose (A). <Ref. to 2-8 [W6A0].>
- 5) Move clips, and disconnect return hose (B) and jet pump hose (C).

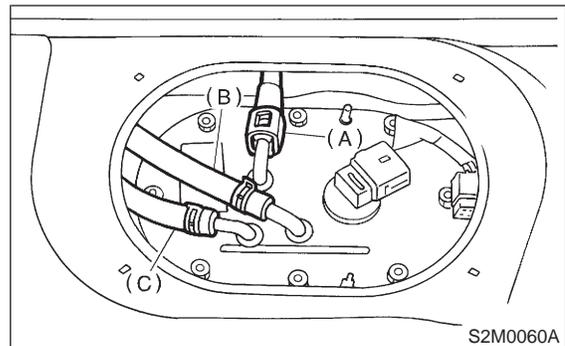

- 6) Remove nuts which install fuel pump assembly onto fuel tank.

