



12. Sub Fuel Level Sensor

A: REMOVAL AND INSTALLATION


1) Disconnect battery ground cable.

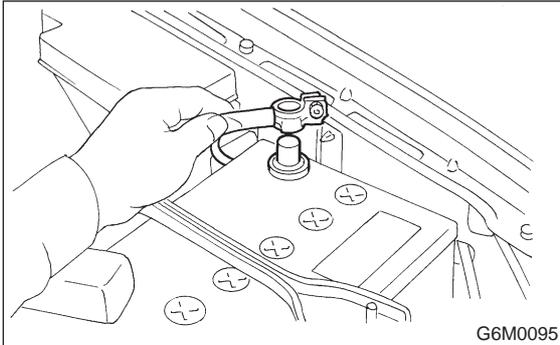


2) Remove service hole cover.

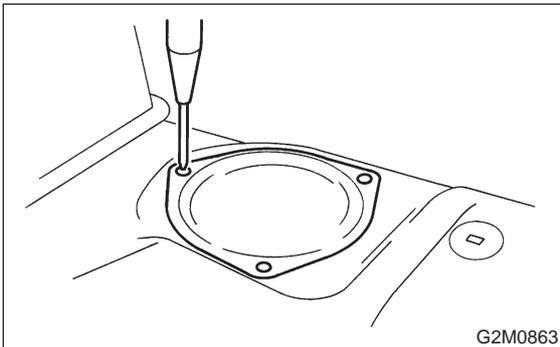


3) Disconnect connector from fuel sub meter, and disconnect jet pump hose.

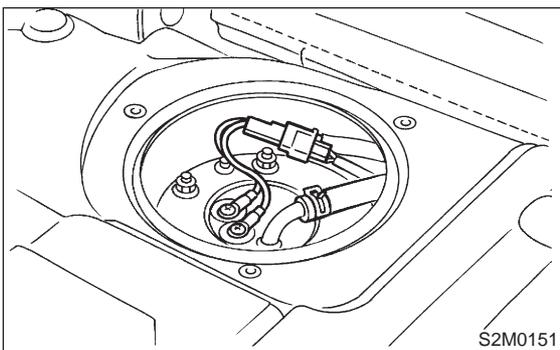

4) Remove bolts which install sub fuel level sensor on fuel tank.

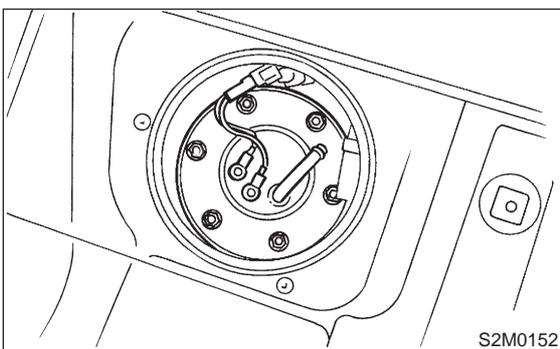

5) Remove sub fuel level sensor.

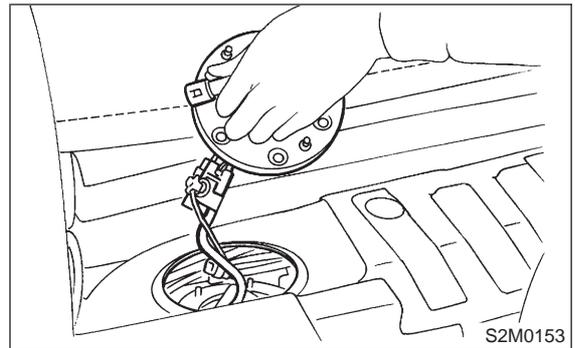

6) Installation is in the reverse order of removal.

Tightening torque:

T: 4.4 ± 1.5 N·m (0.45 ± 0.15 kg·m, 3.3 ± 1.1 ft·lb)

