


13. Air Filter


A: REMOVAL AND INSTALLATION

1. WITHOUT ORVR MODEL

- 1) Remove canister. <Ref. to 2-1 [W3A0].>
- 2) Disconnect two hoses from air filter.

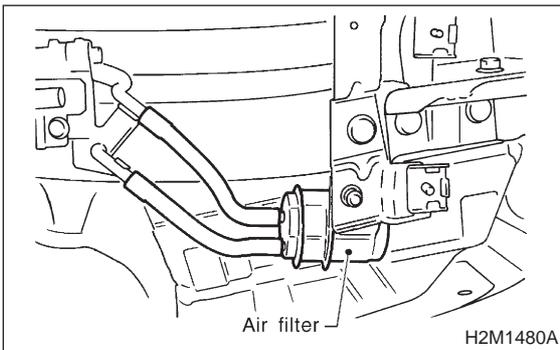


- 3) Remove flange nut from bracket.

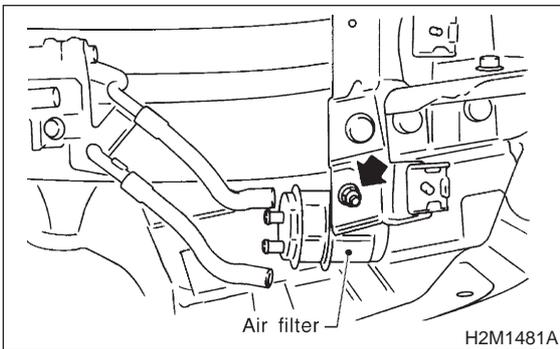

- 4) Installation is in the reverse order of removal.


2. WITH ORVR MODEL

- 1) Disconnect battery ground cable.

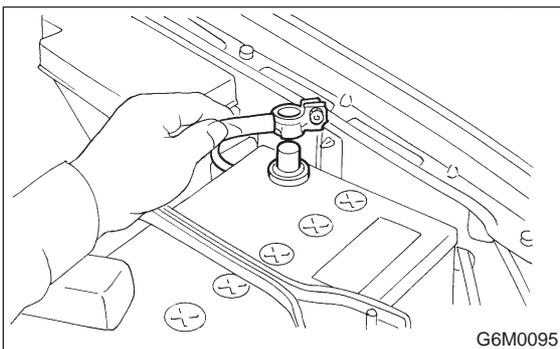


- 2) Lift-up the vehicle.


- 3) Remove canister. <Ref. to 2-1 [W3A0].>

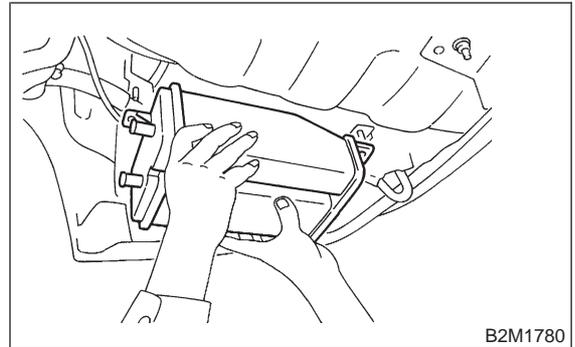


- 4) Disconnect connector from drain valve.

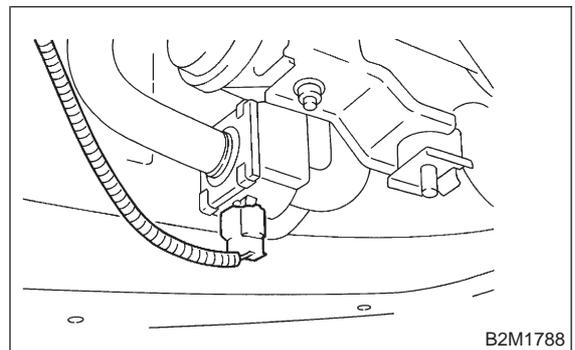


- 5) Disconnect evaporation hoses (A) from joint pipes.

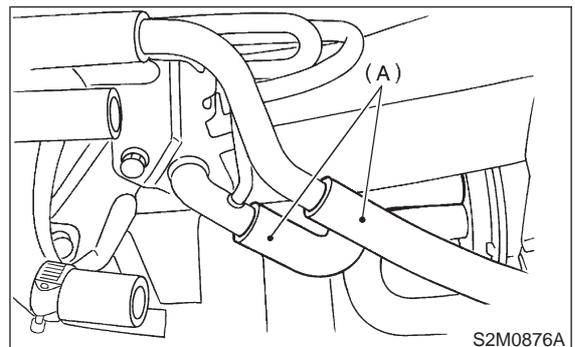

- 6) Remove nut which installs air filter and drain valve brackets on body, and remove them as a unit.

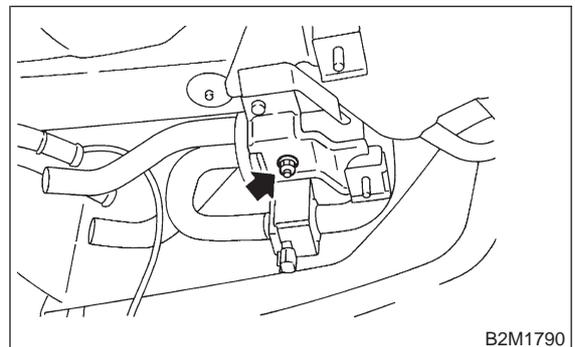


7) Disconnect evaporation hoses, and remove air filter.

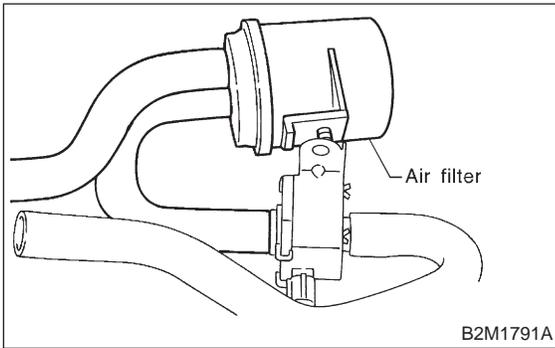

8) Installation is in the reverse order of removal.

Tightening torque:


22.5±7 N·m (2.3±0.7 kg·m, 16.6±5.1 ft·lb)

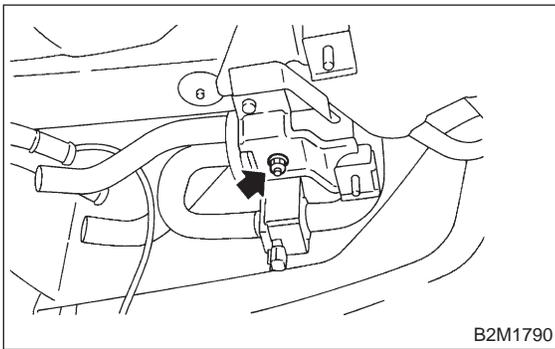


14. Vent Valve

A: REMOVAL AND INSTALLATION


- 1) Release fuel pressure. <Ref. to 2-2 [W9B0].>
- 2) Open fuel flap lid, and remove fuel filler cap.

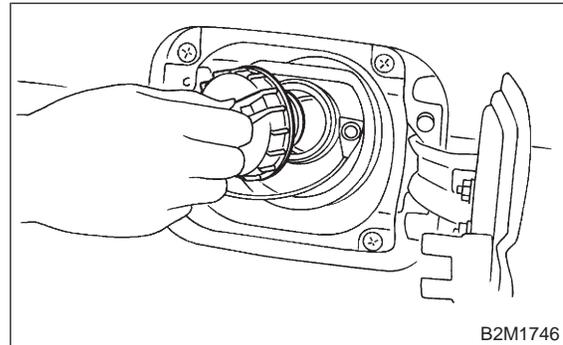

- 3) Disconnect battery ground cable.

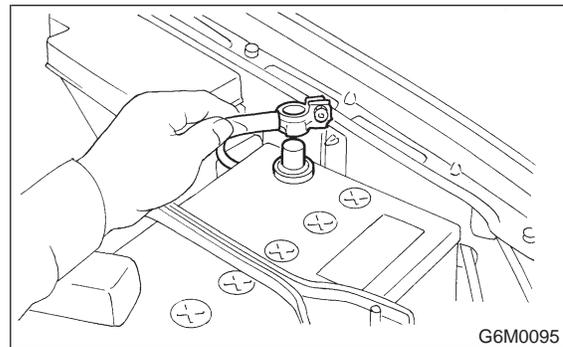

- 4) Drain fuel from fuel tank. <Ref. to 2-2 [W9C0].>

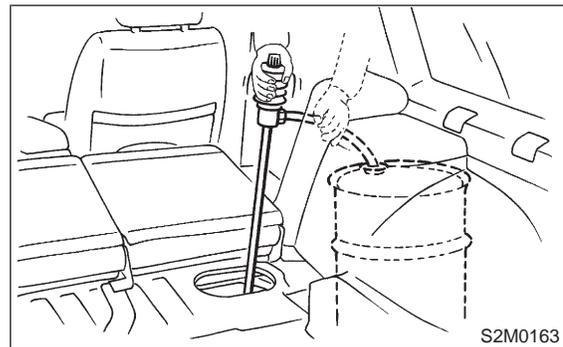

- 5) Remove fuel tank. <Ref. to 2-8 [W1A0].>

