



## 8. Reservoir Tank

### A: REMOVAL AND INSTALLATION


1) Disconnect over flow hose from radiator filler neck position.

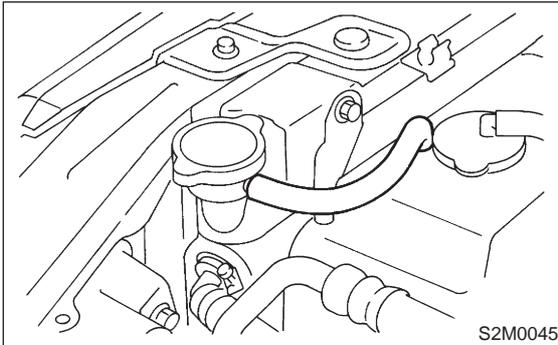

2) Remove bolts which install reservoir tank onto radiator main fan shroud.

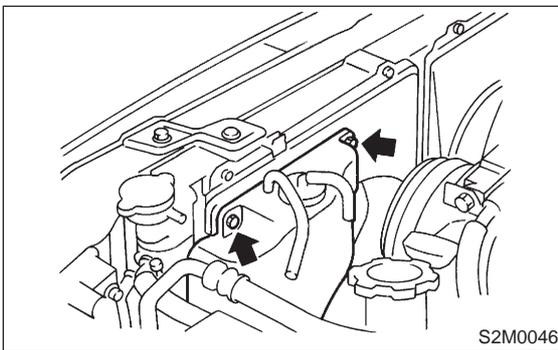

3) Remove reservoir tank.

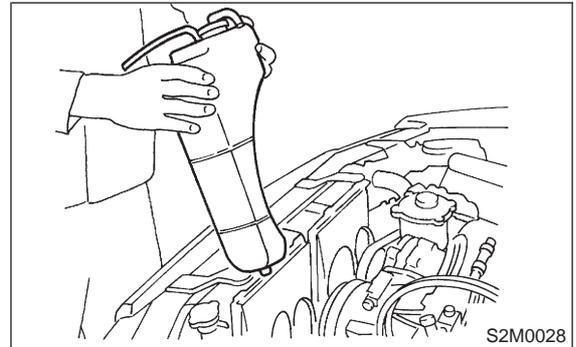

4) Installation is in the reverse order of removal.

**Tightening torque:**

**$7.4 \pm 2.0$  N-m ( $0.75 \pm 0.20$  kg-m,  $5.4 \pm 1.4$  ft-lb)**

