


- 8) Remove engine coolant temperature sensor.
- 9) Installation is in the reverse order of removal.


**Tightening torque:**

**$25\pm 3$  N·m ( $2.5\pm 0.3$  kg·m,  $18.1\pm 2.2$  ft·lb)**

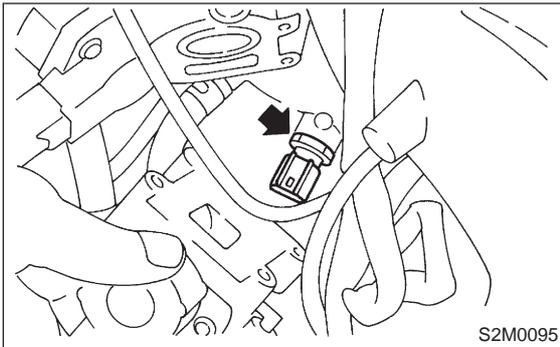


**6. Crankshaft Position Sensor**  
**A: REMOVAL AND INSTALLATION**


- 1) Disconnect battery ground cable.

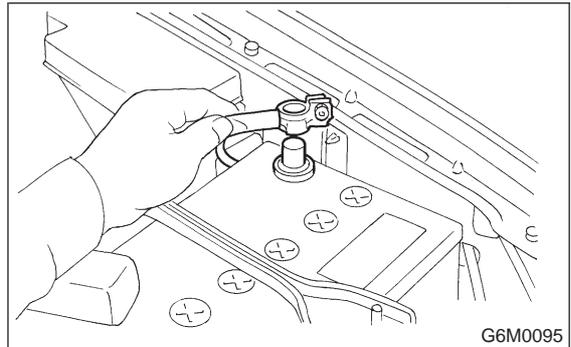

- 2) Remove bolt which install crankshaft position sensor to cylinder block.

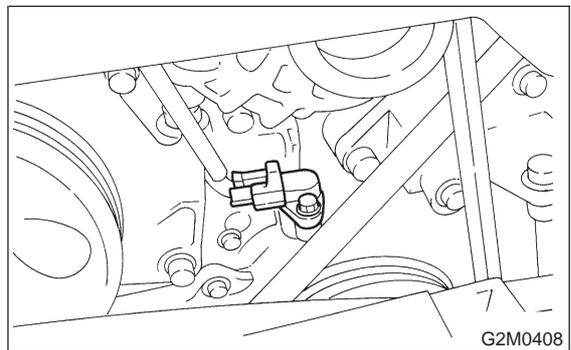


- 3) Remove crankshaft position sensor, and disconnect connector from it.

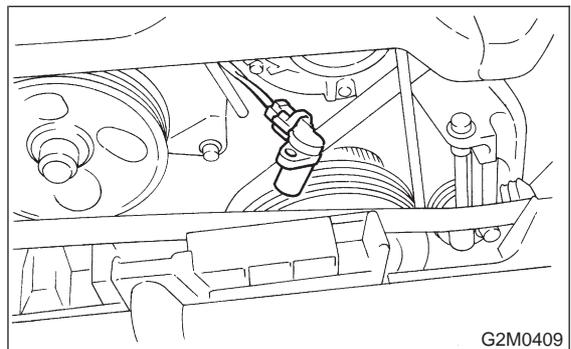

4) Installation is in the reverse order of removal.

**Tightening torque:**


**$6.4 \pm 0.5 \text{ N}\cdot\text{m}$  ( $0.65 \pm 0.05 \text{ kg}\cdot\text{m}$ ,  $4.7 \pm 0.4 \text{ ft}\cdot\text{lb}$ )**

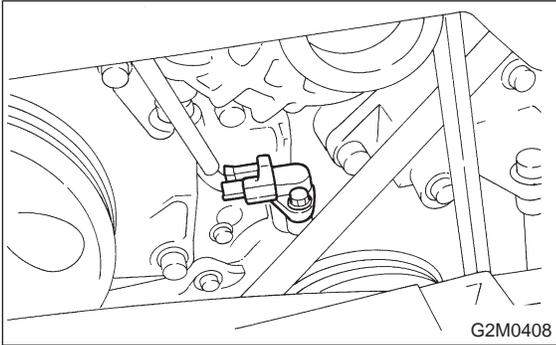


## 7. Camshaft Position Sensor

### A: REMOVAL AND INSTALLATION

1) Disconnect battery ground cable.

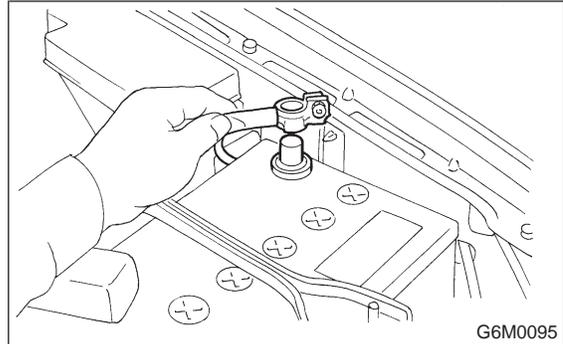

2) Disconnect connector from camshaft position sensor.

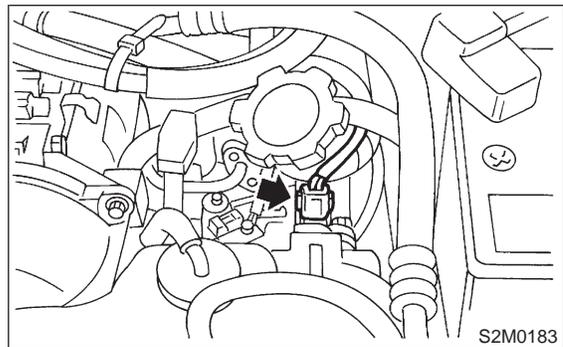

3) Remove camshaft position sensor from camshaft support LH.

