


12. Pressure Sensor

A: REMOVAL AND INSTALLATION


- 1) Disconnect battery ground cable.

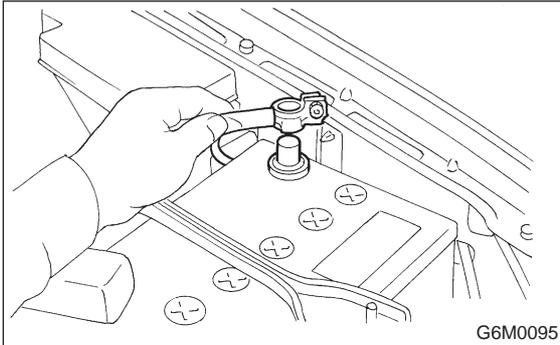

- 2) Disconnect connector from pressure sensor.
- 3) Disconnect hose from pressure sensor.
- 4) Remove pressure sensor from bracket.
- 5) Installation is in the reverse order of removal.

Tightening torque:


$6.4 \pm 0.5 \text{ N}\cdot\text{m}$ ($0.65 \pm 0.05 \text{ kg}\cdot\text{m}$, $4.7 \pm 0.4 \text{ ft}\cdot\text{lb}$)

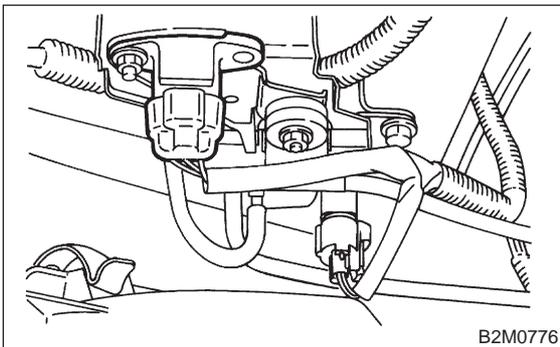


13. Idle Air Control Solenoid Valve

A: REMOVAL AND INSTALLATION

- 1) Disconnect battery ground cable.

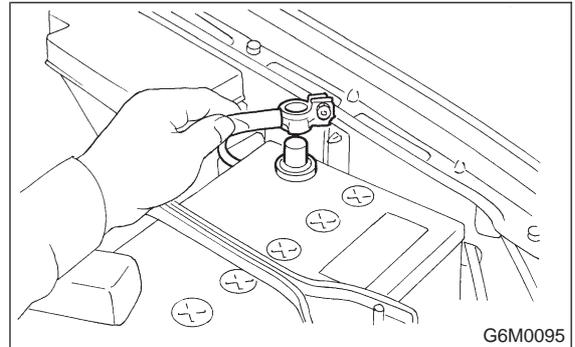

- 2) Loosen clamp which connects air intake duct to mass air flow sensor.

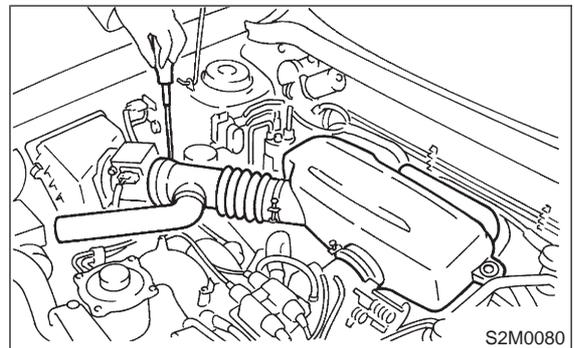

- 3) Loosen clamp which connects air intake chamber to throttle body.

