



## 15. Fuel Injector

### A: REMOVAL AND INSTALLATION


- 1) Release fuel pressure.  
<Ref. to 2-2 [W9B0].>
- 2) Disconnect battery ground cable.

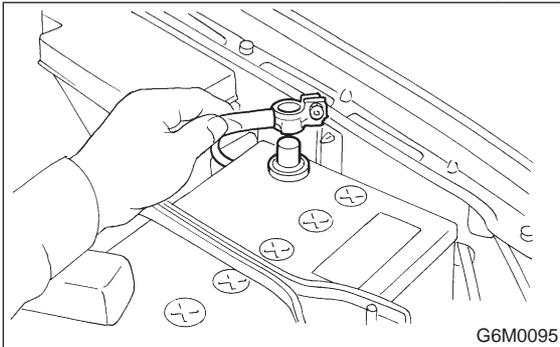

- 3) Disconnect connector from fuel injector.

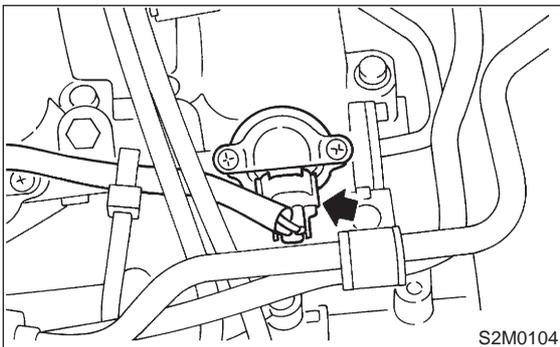


- 4) Remove fuel injector from fuel pipe assembly.

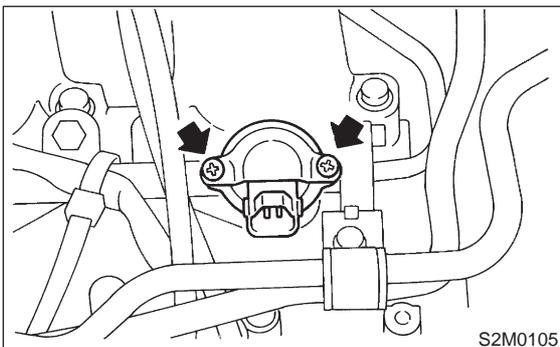

- 5) Installation is in the reverse order of removal.

**CAUTION:**  
Replace O-rings and insulator.

**Tightening torque:**  
**T:  $3.4 \pm 0.5$  N·m ( $0.35 \pm 0.05$  kg·m,  $2.5 \pm 0.4$  ft·lb)**

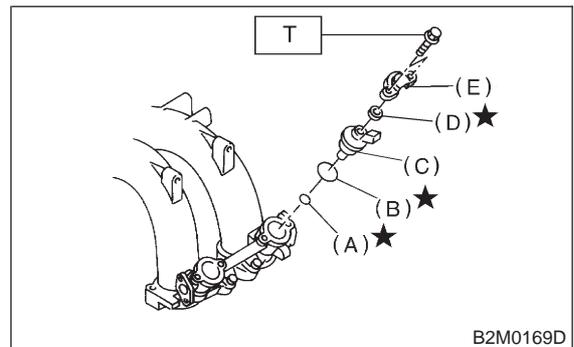

- (A) O-ring B
- (B) O-ring A
- (C) Fuel injector
- (D) Insulator
- (E) Fuel injector cup