


## 18. Fuel Pump Relay


### A: REMOVAL AND INSTALLATION

4) Installation is in the reverse order of removal.

1) Disconnect battery ground cable.

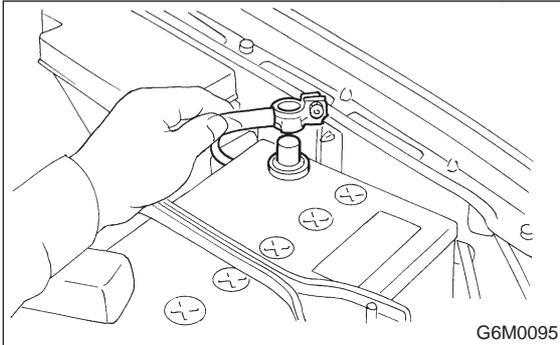

2) Disconnect connector from fuel pump relay.

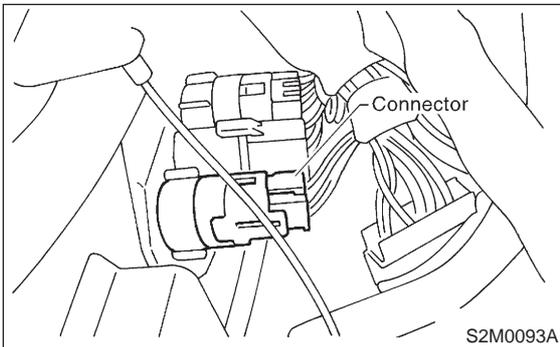

3) Remove fuel pump relay from mounting bracket.

