


19. Air Intake Chamber


A: REMOVAL AND INSTALLATION

- 1) Loosen clamps which connect air intake chamber to throttle body and air intake duct.

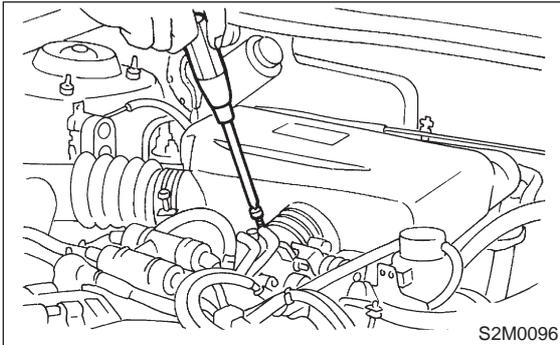

- 2) Disconnect air hoses from air intake chamber.

- 3) Remove bolts which secure air intake chamber to stays.

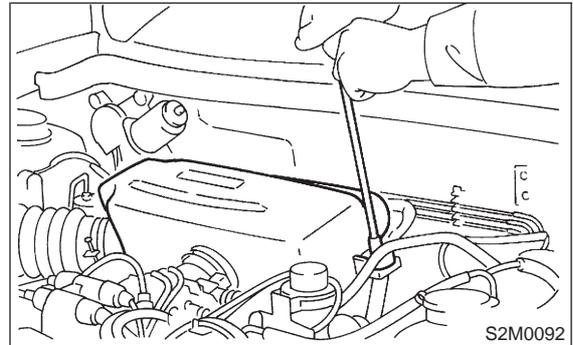

- 4) Remove air intake chamber.
- 5) Installation is in the reverse order of removal.

Tightening torque:

$4.9 \pm 0.5 \text{ N}\cdot\text{m}$ ($0.5 \pm 0.05 \text{ kg}\cdot\text{m}$, $3.6 \pm 0.4 \text{ ft}\cdot\text{lb}$)

MEMO: