



5) Remove bolts which install fuel sub meter unit on fuel tank.

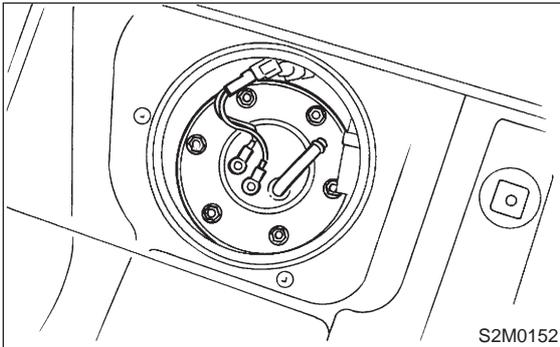


6) Remove fuel sub meter unit.

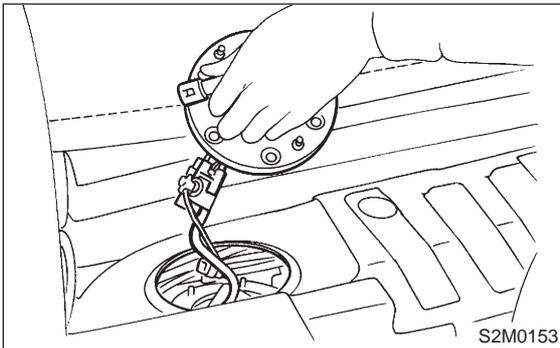

7) Installation is in the reverse order of removal.

**Tightening torque:**


**T:  $4.4 \pm 1.5$  N·m ( $0.45 \pm 0.15$  kg·m,  $3.3 \pm 1.1$  ft·lb)**

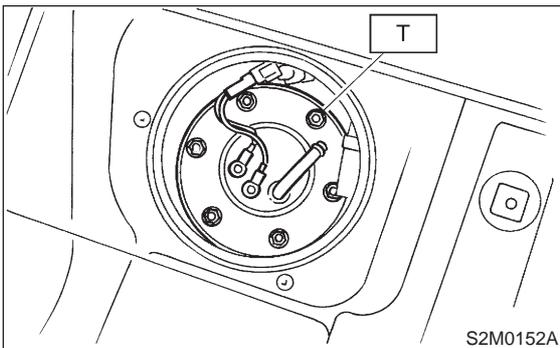


## 9. Fuel Cut Valve

### A: REMOVAL AND INSTALLATION

1) Remove fuel tank. <Ref. to 2-8 [W1A0].>

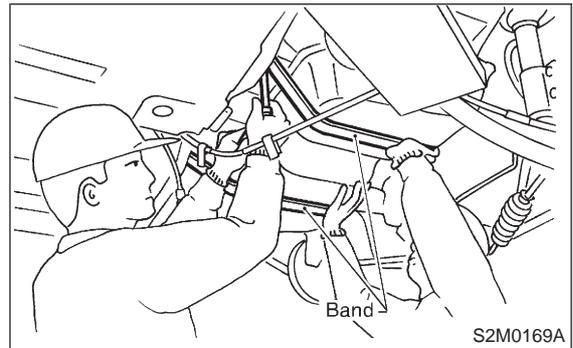

2) Move clip, and disconnect evaporation hose from fuel cut valve.

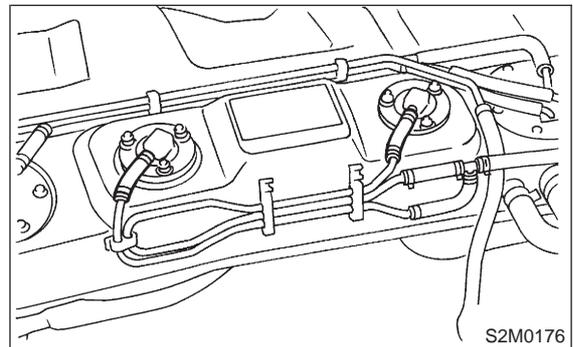

3) Remove bolts installing fuel cut valve on fuel tank.

4) Installation is in the reverse order of removal.

**Tightening torque:**

**$4.4 \pm 1.5$  N·m ( $0.45 \pm 0.15$  kg·m,  $3.3 \pm 1.1$  ft·lb)**

