



3. Blower Motor Assembly

A: REMOVAL AND INSTALLATION

- 1) Disconnect GND cable from battery.
- 2) Remove glove box.

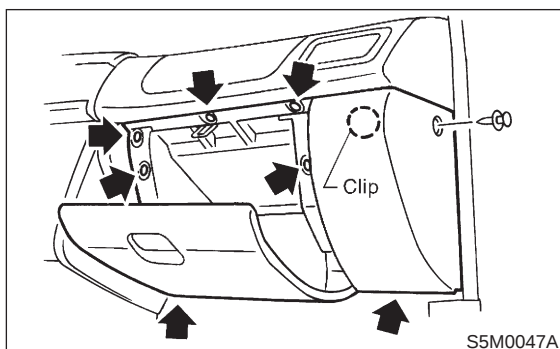

- 3) Disconnect blower motor harness connector.
- 4) Disconnect aspirator pipe (A).
- 5) Remove blower motor mounting screw.

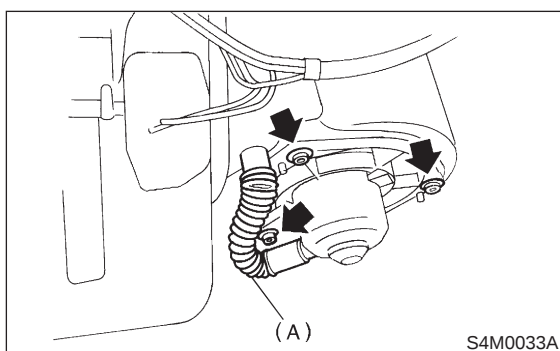

- 6) Remove blower motor assembly.
- 7) Installation is in the reverse order of removal.


4. Control Unit

A: REMOVAL AND INSTALLATION


- 1) Disconnect GND cable from battery.
- 2) Set temperature control switch to "FULL HOT" and mode selector switch to "DEF" position and recirc switch to "FRESH" position.
- 3) Disconnect temperature control cable and mode door control cable from heater unit then disconnect recirc control cable from intake unit.

NOTE:


Do not attempt to move links during installation.

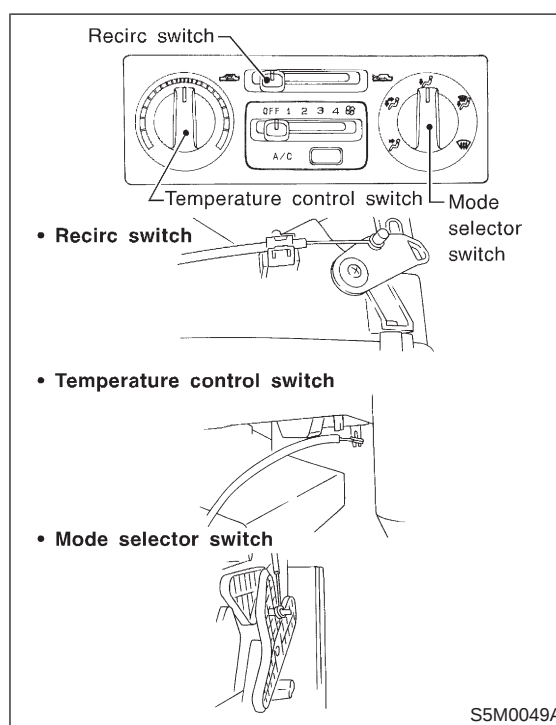

- 4) Remove console box. <Ref. to 5-4 [W1A0].>
- 5) Remove center panel and then disconnect connector.
- 6) Remove audio.

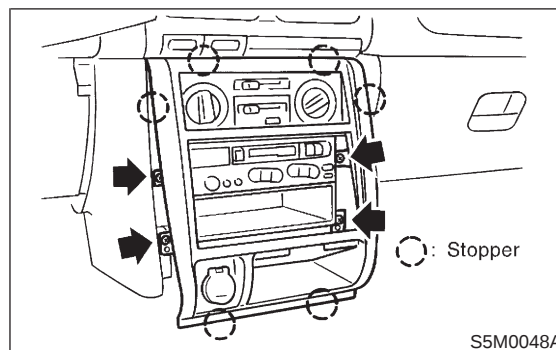

7) Remove control unit assembly from center console.

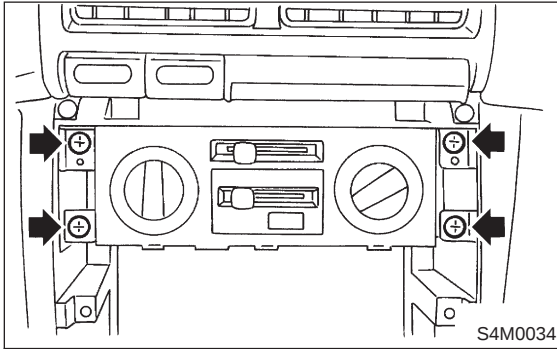

8) Installation is in the reverse order of removal.

NOTE:

Before installing control unit, set temperature control switch to "FULL HOT" and mode selector switch to "DEF" position and recirc switch to "FRESH" position.


B: INSPECTION

1. FAN SWITCH

Check continuity between terminals at each switch position.

Switch position	Terminals					
	1	2	3	4	5	6
1	○				○	○
2	○			○		○
3	○		○			○
4	○	○				○
	IGN					GND

H5M1280A

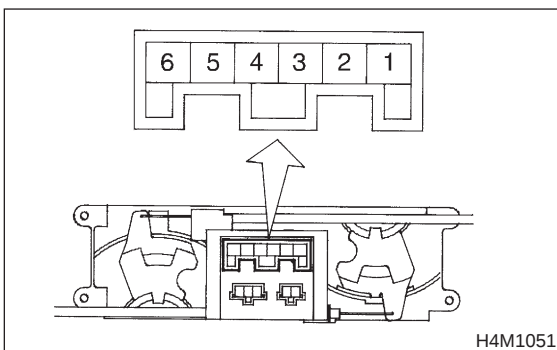


2. A/C SWITCH

Check A/C switch continuity between each terminal.

Terminal	Switch ON	Illumi.
1		○
2	○	○
3	○	○

H5M1281A

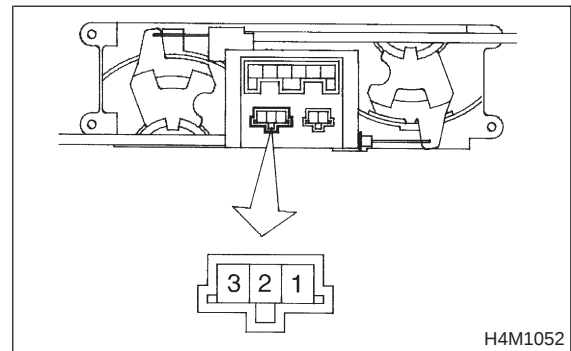

C: ADJUSTMENT

1) Operate temperature control switch to "FULL COLD" and mode selector switch to "VENT" position and recirc switch to "RECIRC" position.

2) Install control cable to lever. While pushing outer cable, secure control cable with clip.

