



25. Transmission Control Module

A: REMOVAL


- 1) Disconnect battery ground cable.

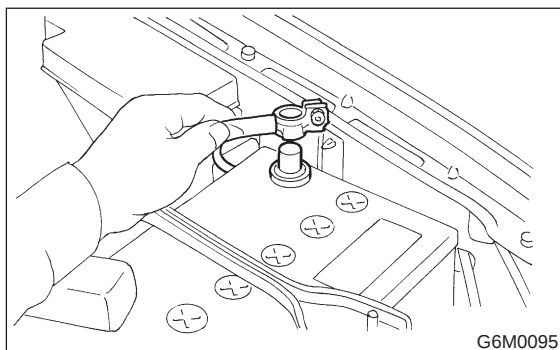

- 2) Remove lower cover and then disconnect connector.

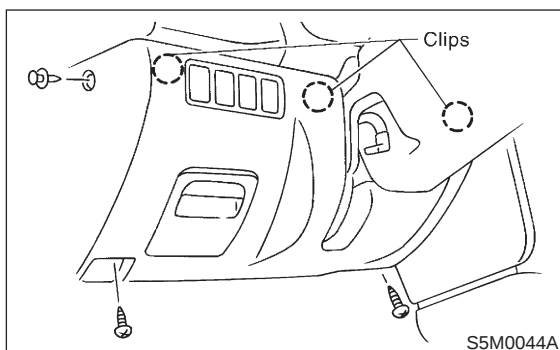

- 3) Remove transmission control module.

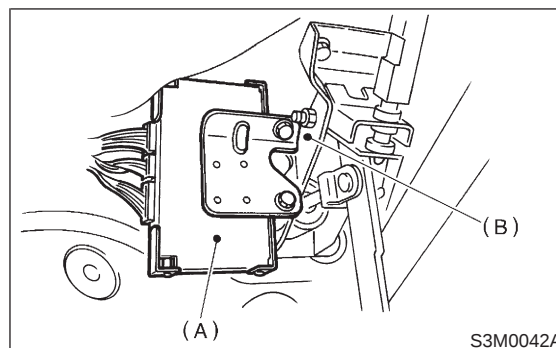

- (A) Transmission control module
(B) Pedal bracket


- 4) Disconnect connectors from transmission control module.

B: INSTALLATION

- 1) Connect connectors to transmission control module.
- 2) Install transmission control module.

Tightening torque:

$7.4 \pm 2.0 \text{ N} \cdot \text{m}$ ($0.75 \pm 0.2 \text{ kg} \cdot \text{m}$, $5.4 \pm 1.4 \text{ ft} \cdot \text{lb}$)

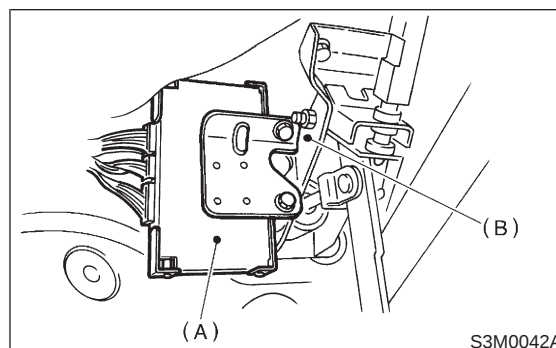

- (A) Transmission control module
(B) Pedal bracket

- 3) Installing procedure hereafter is in the reverse order of removal.

MEMO: