


5. Transfer Case and Extension

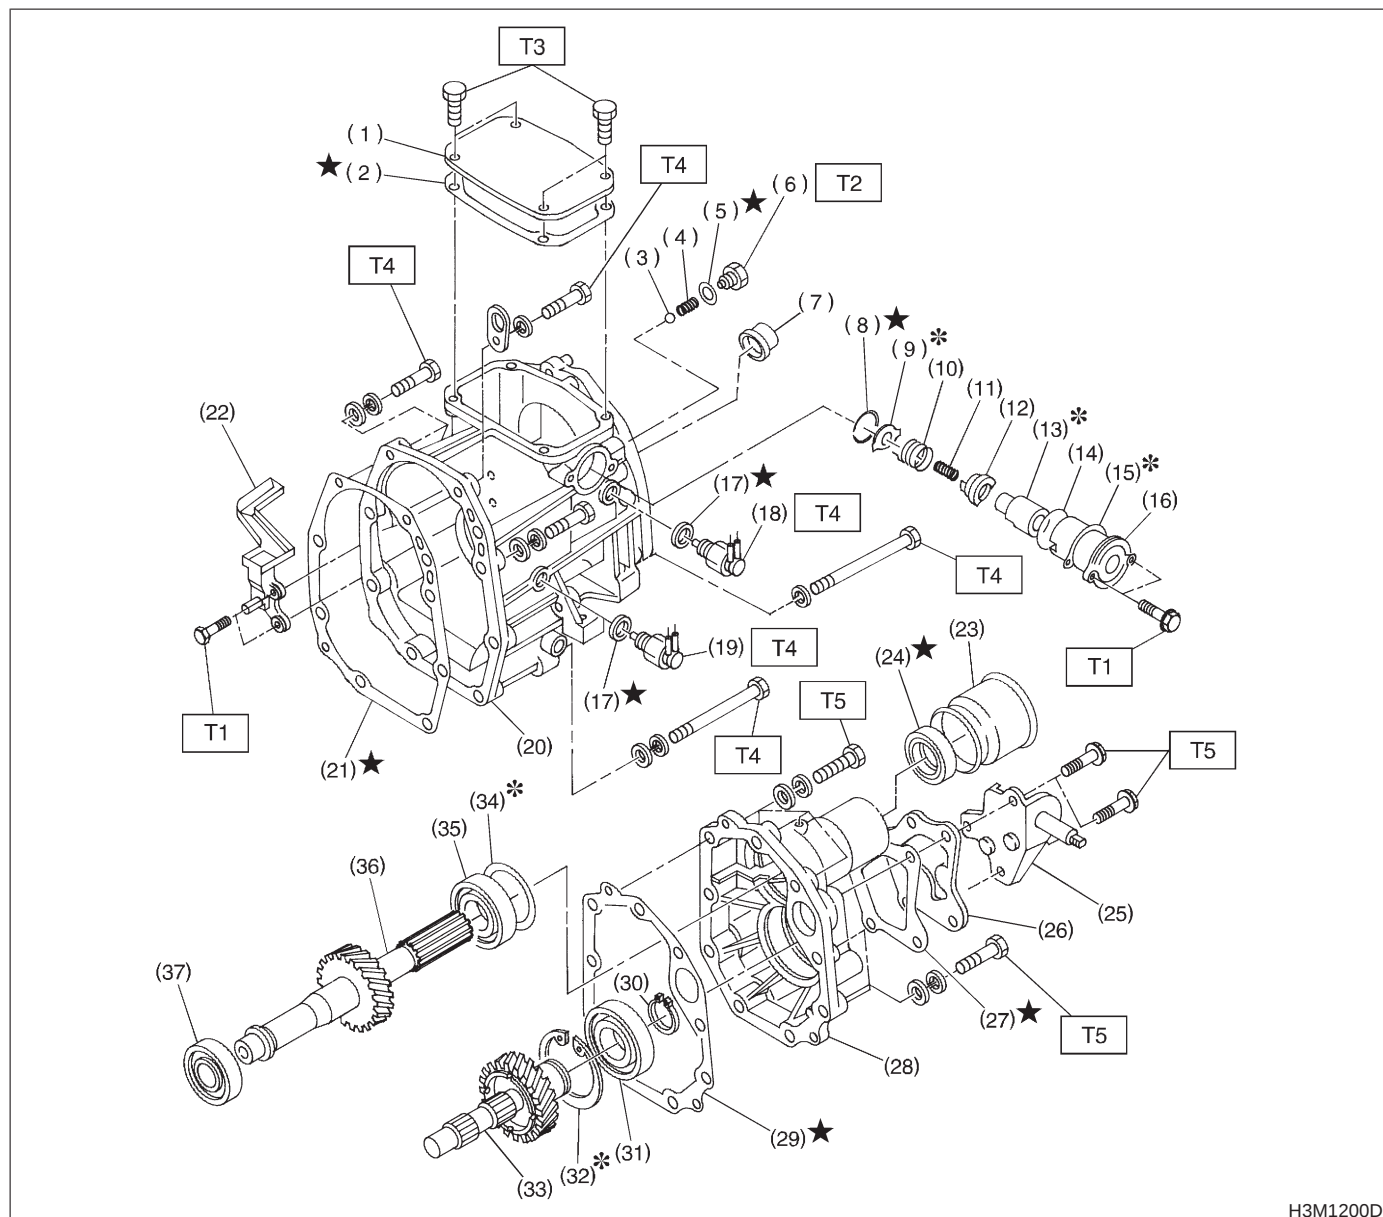

- (1) Transfer cover
- (2) Cover gasket
- (3) Ball
- (4) Reverse accent spring
- (5) Gasket
- (6) Plug
- (7) Oil seal
- (8) Snap ring (Inner)
- (9) Reverse check plate
- (10) Reverse check spring
- (11) Reverse return spring
- (12) Reverse check cam
- (13) Reverse accent shaft
- (14) O-ring
- (15) Adjusting select shim

- (16) Reverse check sleeve
- (17) Gasket
- (18) Neutral switch
- (19) Back-up light switch
- (20) Transfer case
- (21) Gasket
- (22) Oil guide
- (23) Dust cover
- (24) Oil seal
- (25) Shift bracket
- (26) Extension cover
- (27) Gasket
- (28) Extension
- (29) Gasket
- (30) Snap ring (Outer-30)

- (31) Ball bearing
- (32) Snap ring (Inner-72)
- (33) Transfer drive gear
- (34) Adjusting washer
- (35) Ball bearing
- (36) Transfer driven gear
- (37) Ball bearing

Tightening torque: N·m (kg-m, ft-lb)

T1: 5±1 (0.5±0.1, 3.6±0.7)

T2: 10±1 (1.0±0.1, 7.2±0.7)

T3: 15.7±1.5 (1.6±0.15, 11.6±1.1)

T4: 25±2 (2.5±0.2, 18.1±1.4)

T5: 37±3 (3.8±0.3, 27.5±2.2)