


1. Gear Shift Lever

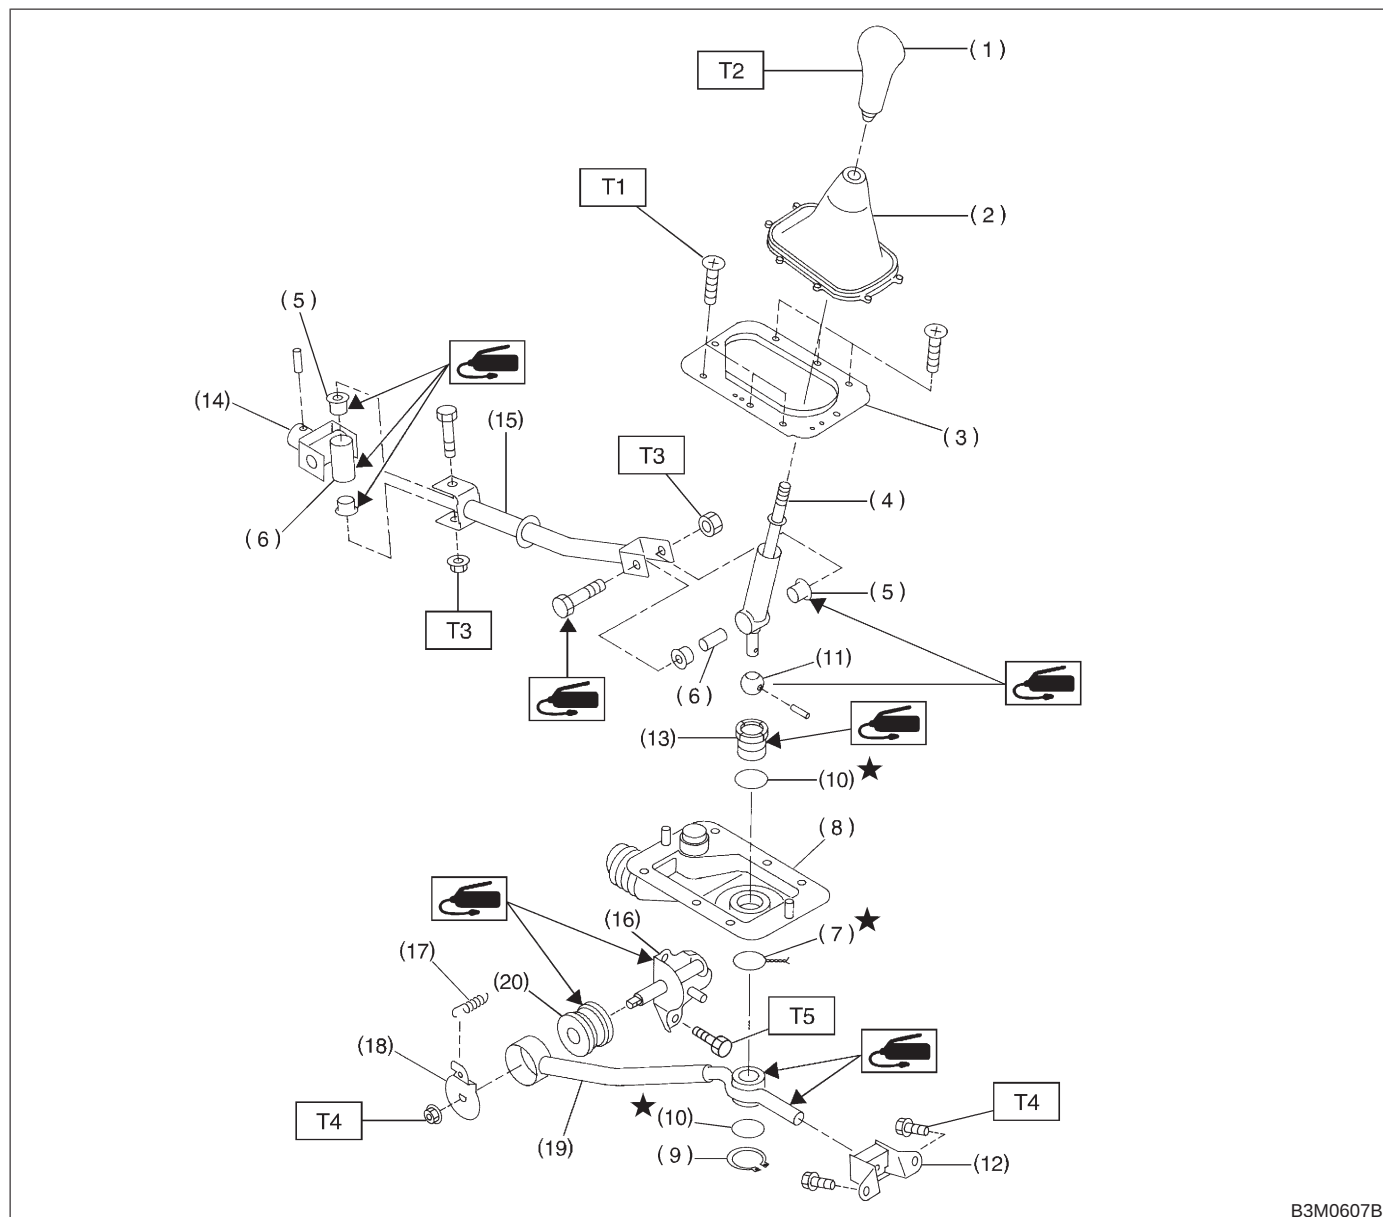

B3M0607B

- (1) Gear shift knob
- (2) Console boot
- (3) Boot plate
- (4) Gear shift lever
- (5) Bush
- (6) Spacer
- (7) Locking wire
- (8) Boot
- (9) Snap ring
- (10) O-ring
- (11) Bush (Shift lever)
- (12) Cushion rubber
- (13) Bush (Stay rear)
- (14) Joint
- (15) Rod
- (16) Bracket
- (17) Spring

- (18) Washer
- (19) Stay
- (20) Bush (Stay front)

Tightening torque: N·m (kg-m, ft-lb)

T1: 4.4±1.5 (0.45±0.15, 3.3±1.1)

T2: 5 (0.51, 3.7)

T3: 12±3 (1.2±0.3, 8.7±2.2)

T4: 18±5 (1.8±0.5, 13.0±3.6)

T5: 24.5±2

(2.50±0.20, 18.07±1.48)