

10) If any mechanism does not function properly, loosen bolts (C) and (D), slide seat as required, insert all lock plate pawls into holes in slide rail brackets, and tighten bolts (C) and (D) in that order.

11) Install bolt cover on rear end of slide rail.

12) Install headrest on backrest.

**NOTE:**

Tighten bolts in the designated order.


## 2. Rear Seat

### A: REMOVAL AND INSTALLATION

#### 1. CUSHION

1) Remove bolts securing hinges (located at front of cushion) to body.

2) Slightly raise front of cushion while pushing down on cushion in the direction of "A". With cushion held in that position, move it forward until it is unhooked.

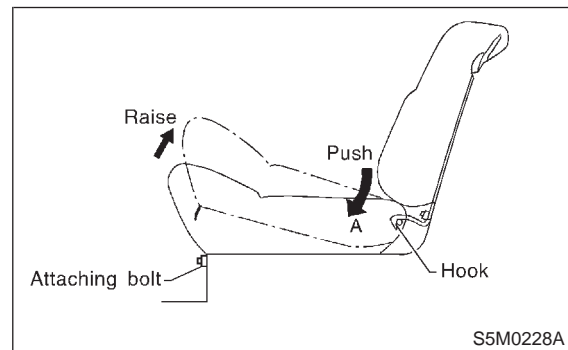


3) Install in the reverse order of removal.

#### 2. BACKREST

1) Remove cushion. <Ref. to 5-3 [W2A1].>

2) Remove rear quarter lower trim. <Ref. to 5-3 [W5A2].>

3) Remove bolts and nuts.

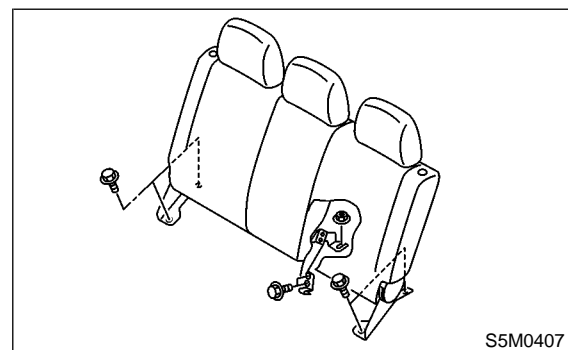

4) Detach backrest.

5) Install in the reverse order of removal.

**CAUTION:**

- Before installing seat, ensure that seat belt is placed on cushion.
- Confirm that winding of three-point type seat belt can operate regularly.