



3. Canister

A: REMOVAL AND INSTALLATION

- 1) Lift-up the vehicle.
- 2) Disconnect evaporation hoses from canister.

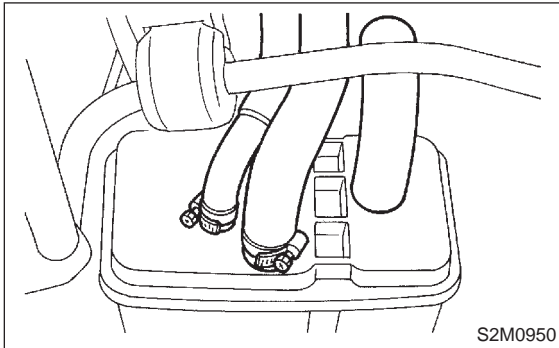


- 3) Remove canister from body.

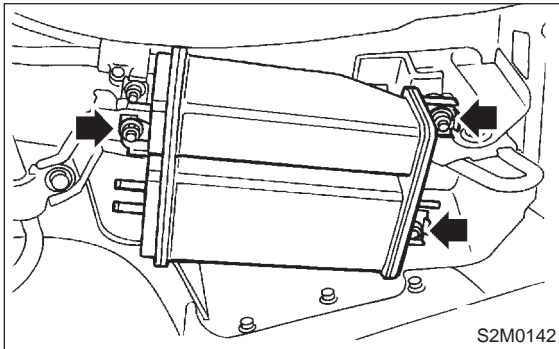

- 4) Install in the reverse order of removal.

Tightening torque:


22.5±7 N·m (2.3±0.7 kg·m, 16.6±5.1 ft·lb)

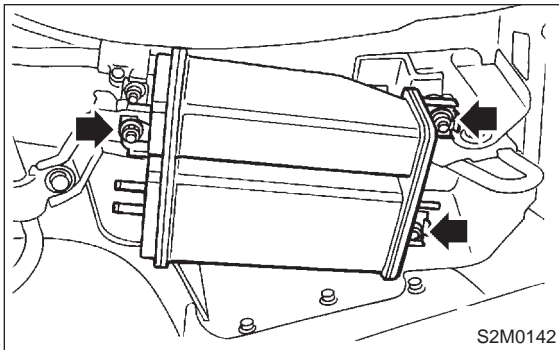


4. Purge Control Solenoid Valve

A: REMOVAL AND INSTALLATION


- 1) Disconnect battery ground cable.

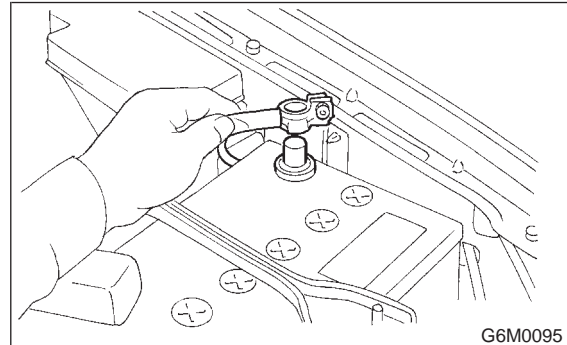

- 2) Remove air cleaner case and air intake duct.
<Ref. to 2-7 [W1A0].>

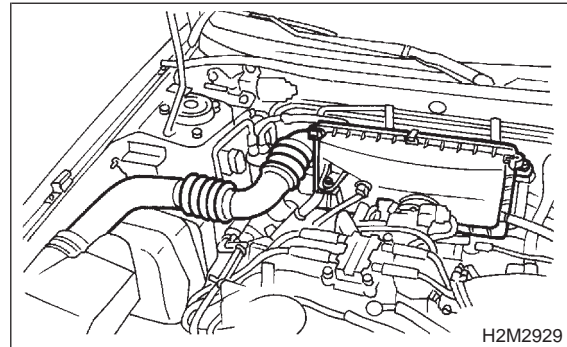


- 3) Remove bolt which installs purge control solenoid valve to intake manifold.

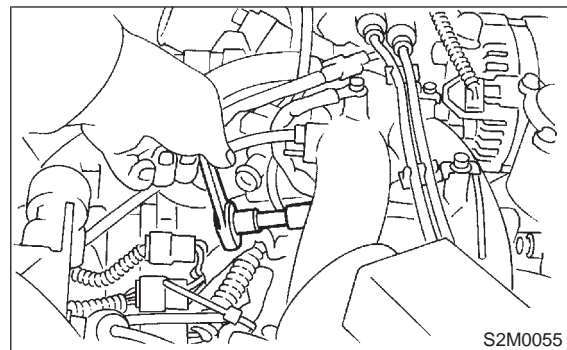

5. Fuel Temperature Sensor


- 4) Take out purge control solenoid valve.
- 5) Disconnect connector from purge control solenoid valve.
- 6) Disconnect vacuum hoses from purge control solenoid valve.

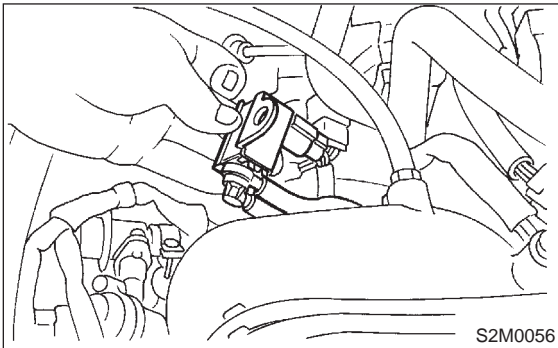


- 7) Install in the reverse order of removal.

Tightening torque:

$15.7 \pm 1.5 \text{ N}\cdot\text{m}$ ($1.6 \pm 0.15 \text{ kg}\cdot\text{m}$, $11.6 \pm 1.1 \text{ ft}\cdot\text{lb}$)

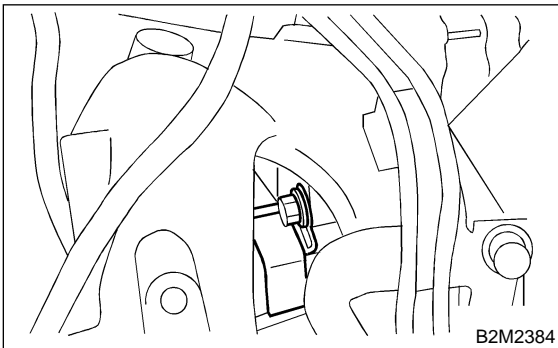


CAUTION:
Carefully connect the evaporation hoses.

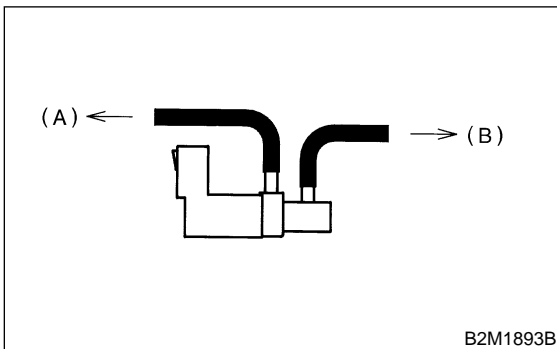


- (A) To fuel pipe
- (B) To intake manifold

5. Fuel Temperature Sensor**A: REMOVAL**

- 1) Release fuel pressure. <Ref. to 2-8 [W1A0].>
- 2) Open fuel filler lid, and remove fuel filler cap.

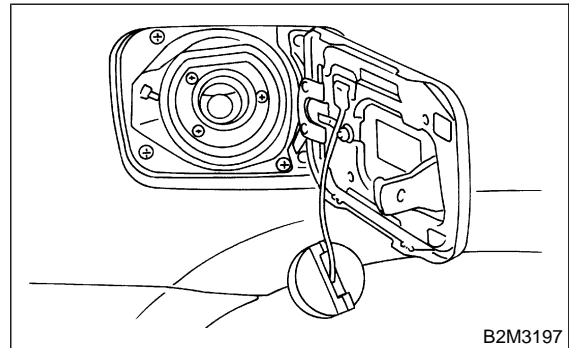

- 3) Disconnect battery ground cable.

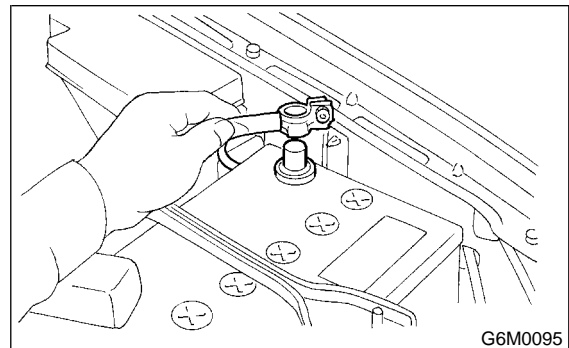

- 4) Remove the floor box located just behind the rear seat.
- 5) Remove service hole cover.

