


5. Fuel Temperature Sensor


- 4) Take out purge control solenoid valve.
- 5) Disconnect connector from purge control solenoid valve.
- 6) Disconnect vacuum hoses from purge control solenoid valve.

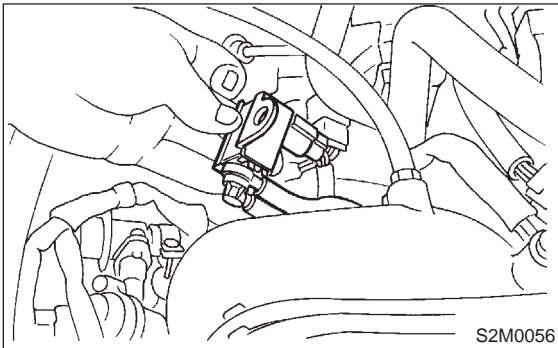


- 7) Install in the reverse order of removal.

Tightening torque:

$15.7 \pm 1.5 \text{ N}\cdot\text{m}$ ($1.6 \pm 0.15 \text{ kg}\cdot\text{m}$, $11.6 \pm 1.1 \text{ ft}\cdot\text{lb}$)

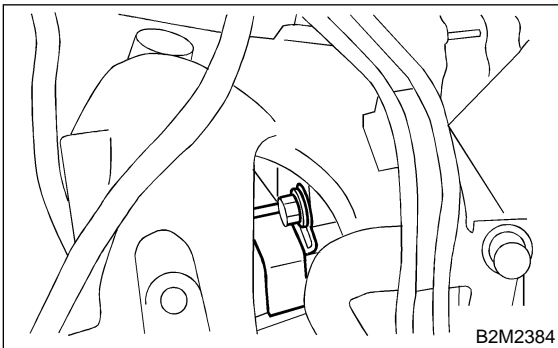


CAUTION:
Carefully connect the evaporation hoses.

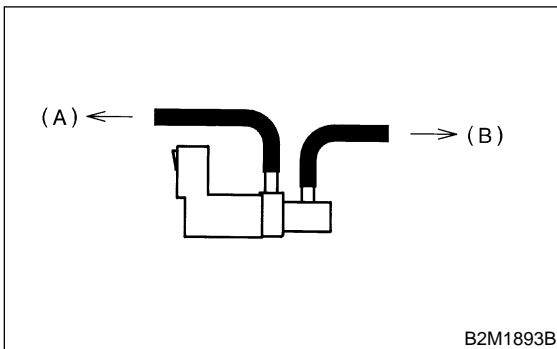


- (A) To fuel pipe
- (B) To intake manifold

5. Fuel Temperature Sensor**A: REMOVAL**


- 1) Release fuel pressure. <Ref. to 2-8 [W1A0].>
- 2) Open fuel filler lid, and remove fuel filler cap.

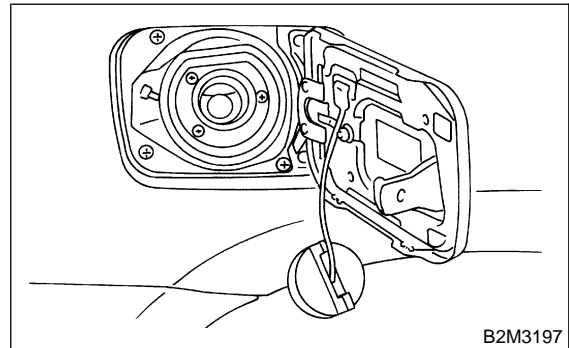


- 3) Disconnect battery ground cable.

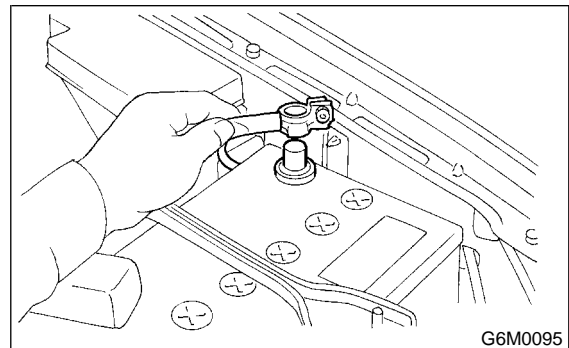


- 4) Remove the floor box located just behind the rear seat.
- 5) Remove service hole cover.

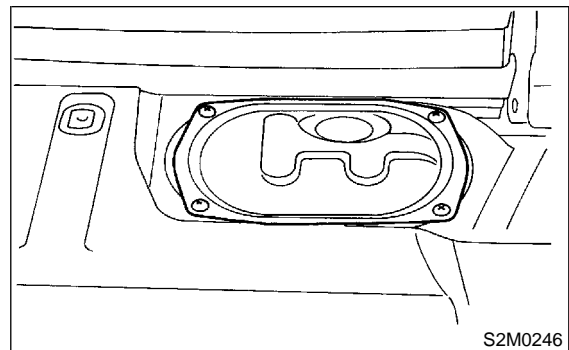


6) Disconnect connector from fuel pump.

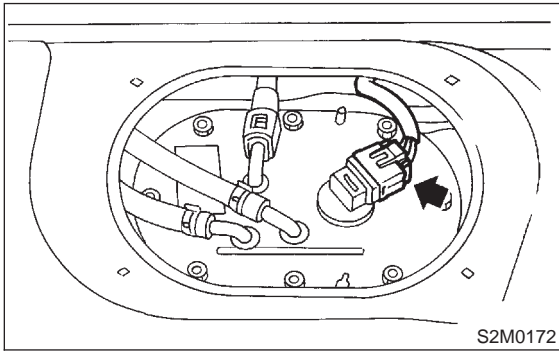


7) Move clips, and then disconnect fuel delivery hose (A), return hose (B) and jet pump hose (C).
8) Disconnect quick connector, and then disconnect fuel delivery hose (A). <Ref. to 2-8 [W7A0].>

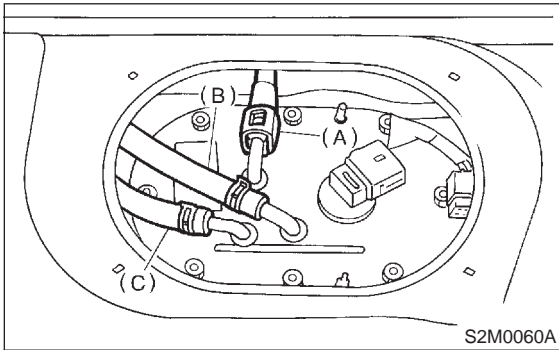


9) Remove nuts which install fuel pump assembly onto fuel tank.

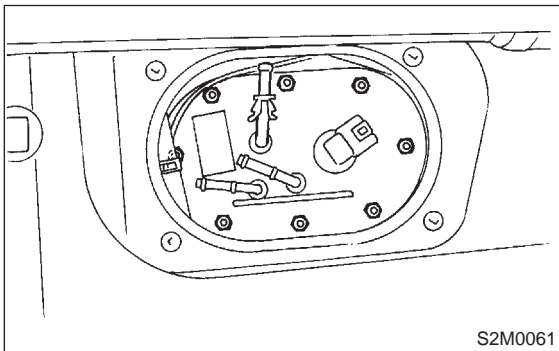


10) Take off fuel pump assembly from fuel tank.

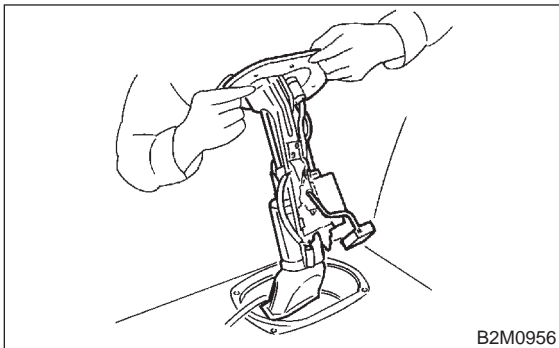

11) Disconnect connector from fuel pump bracket.

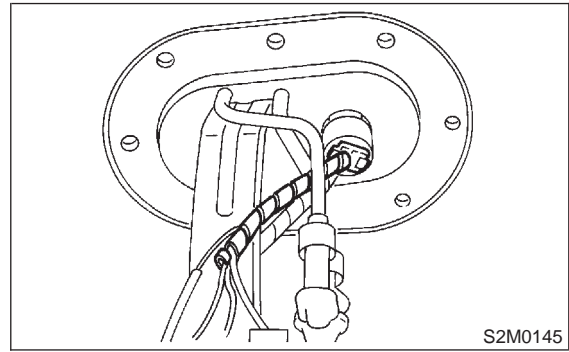

12) Remove main fuel level sensor from fuel pump assembly. <Ref. to 2-1 [W8A0].>

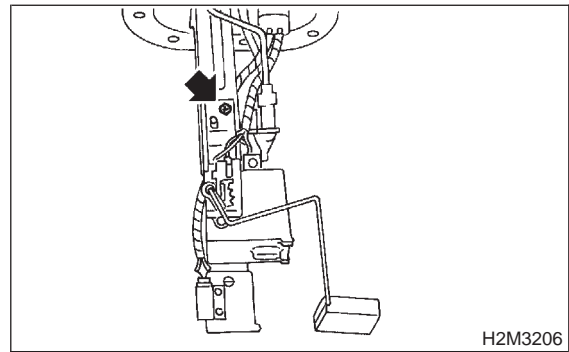

NOTE:
Fuel temperature sensor is a unit with fuel pump.
If replacing it, replace as a fuel pump.

B: INSTALLATION**CAUTION:**


Leave fuel filler cap open when tightening nuts, to prevent fuel from flowing out through fuel delivery and return pipes. Close fuel filler cap after tightening nuts.

Install in the reverse order of removal. Do the following:


- (1) Always use new gaskets.
- (2) Ensure sealing portion is free from fuel or foreign particles before installation.
- (3) Tighten nuts in alphabetical sequence shown in figure to specified torque.

Tightening torque:


$4.4 \pm 1.5 \text{ N}\cdot\text{m}$ ($0.45 \pm 0.15 \text{ kg}\cdot\text{m}$, $3.3 \pm 1.1 \text{ ft}\cdot\text{lb}$)

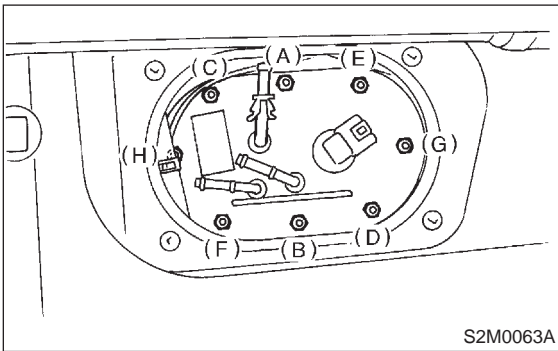


- (4) Connect connector to fuel pump relay.

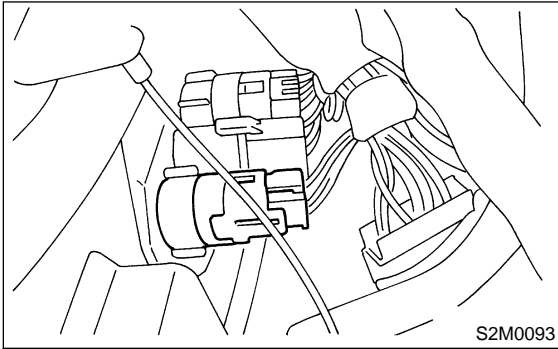**6. Fuel Tank Pressure Sensor****A: REMOVAL AND INSTALLATION**


- 1) Remove fuel tank. <Ref. to 2-8 [W2A0].>

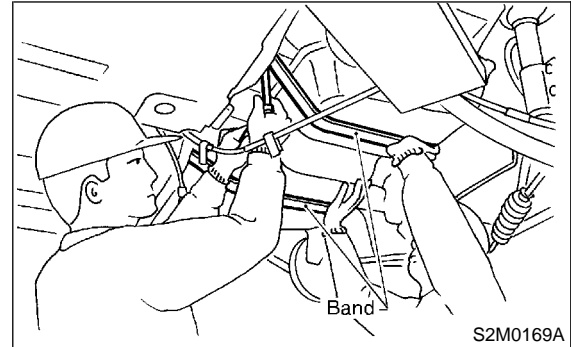

- 2) Remove protector cover.

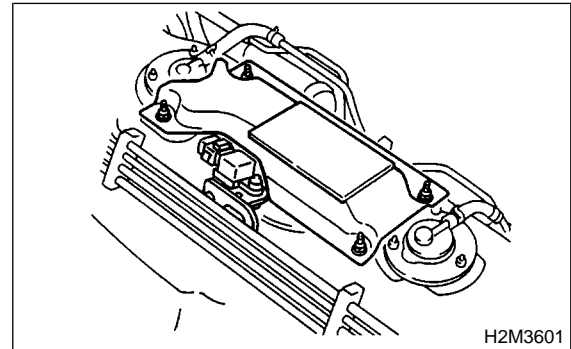

- 3) Disconnect connector from fuel tank pressure sensor.

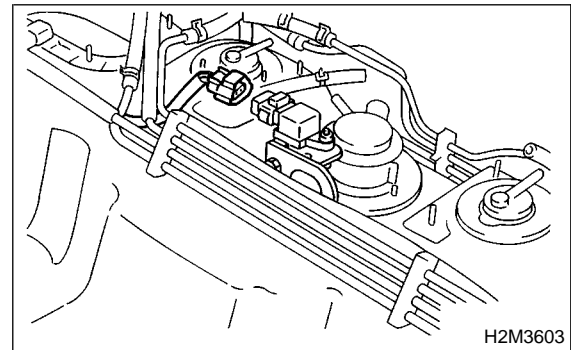

- 4) Release clips which hold fuel pipes onto fuel tank.

