



5) Remove shut valve from fuel filler pipe.

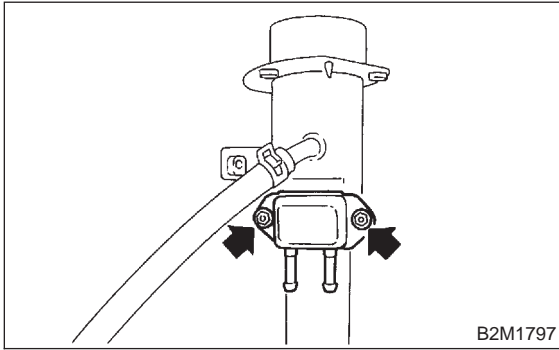

6) Install in the reverse order of removal.

Tightening torque:


$4.4 \pm 1.5 \text{ N}\cdot\text{m}$ ($0.45 \pm 0.15 \text{ kg}\cdot\text{m}$, $3.3 \pm 1.1 \text{ ft}\cdot\text{lb}$)

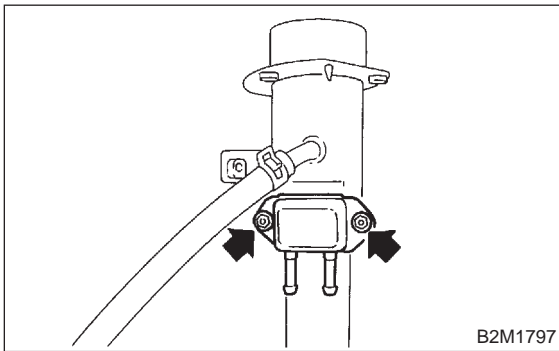

13. Drain Valve


A: REMOVAL AND INSTALLATION

1) Disconnect battery ground cable.

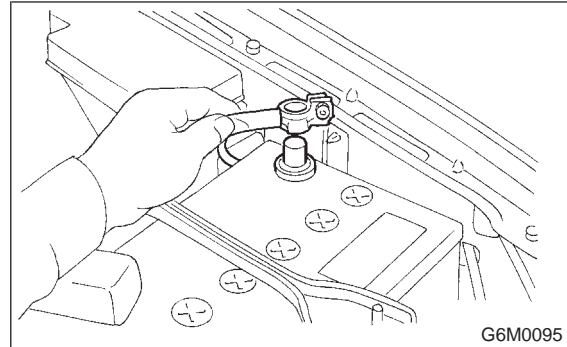


2) Lift-up the vehicle.


3) Remove canister. <Ref. to 2-1 [W3A0].>

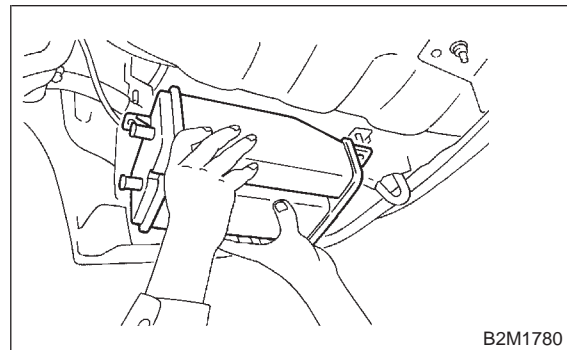


4) Disconnect connector from drain valve.

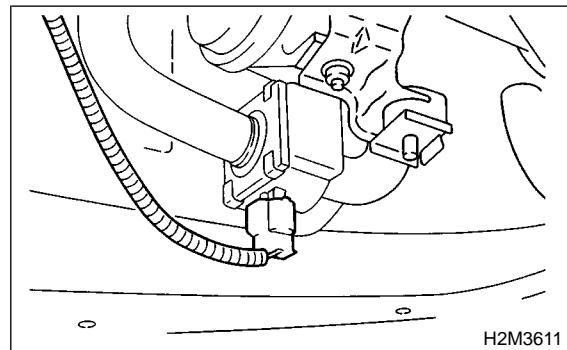


5) Disconnect evaporation hoses from drain valve.

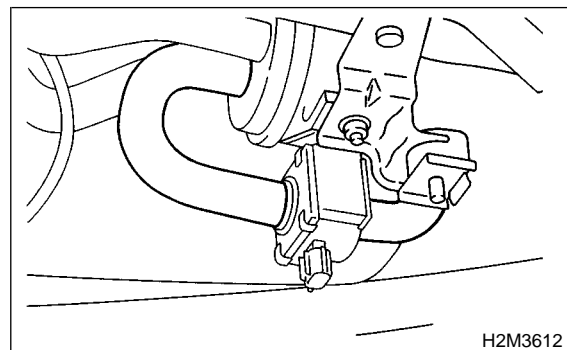

6) Remove bolt which installs drain filter and drain valve brackets on body.

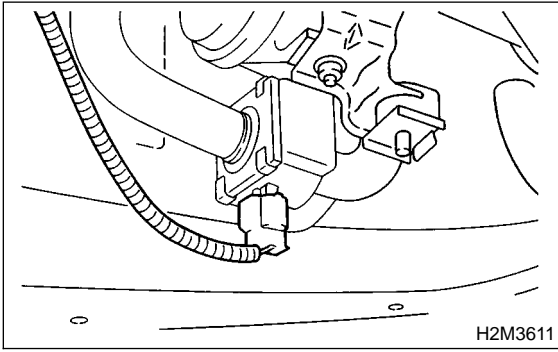

7) Move drain filter to upper side, and remove drain valve with bracket.

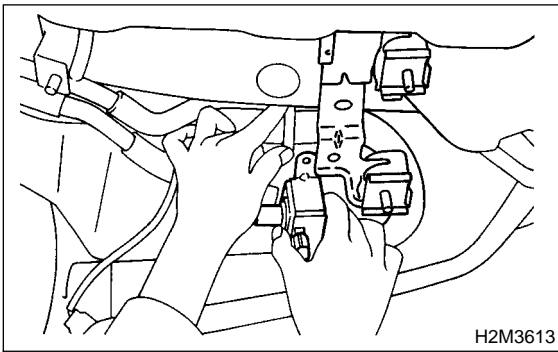

8) Install in the reverse order of removal.

Tightening torque:

22.5 ± 7 N·m (2.3 ± 0.7 kg·m, 16.6 ± 5.1 ft·lb)

