



4) Connect battery ground cable.

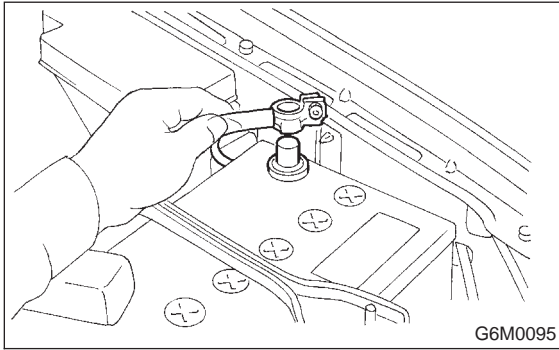


## 8. Front Oxygen (A/F) Sensor

### A: REMOVAL

- 1) Set the vehicle on the lift.
- 2) Disconnect battery ground cable.

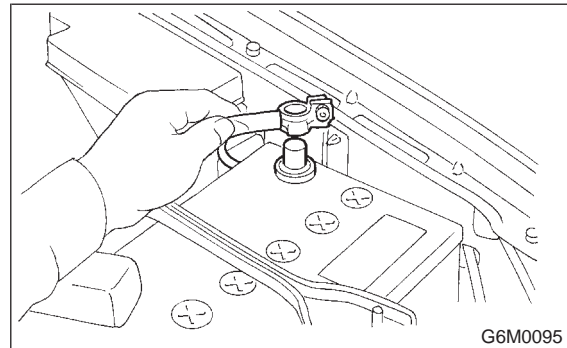

- 3) Disconnect connector from front oxygen (A/F) sensor.

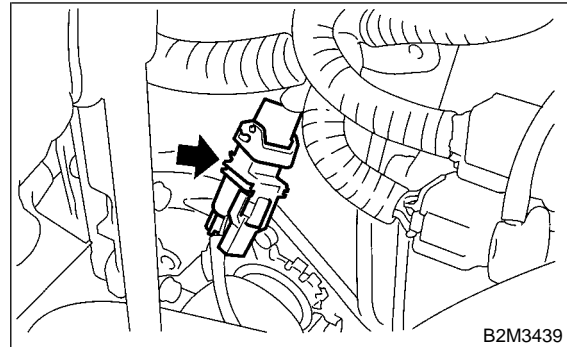


- 4) Lift-up the vehicle.
- 5) Apply SUBARU CRC or its equivalent to threaded portion of front oxygen (A/F) sensor, and leave it for one minute or more.

**SUBARU CRC (Part No. 004301003)**

- 6) Remove front oxygen (A/F) sensor.

#### CAUTION:

**When removing front oxygen (A/F) sensor, do not force front oxygen (A/F) sensor especially when exhaust pipe is cold, otherwise it will damage exhaust pipe.**

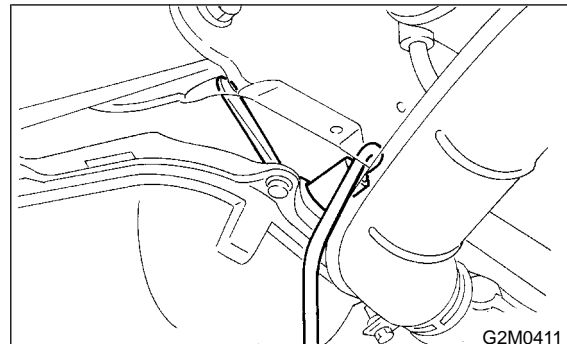

## 8. Front Oxygen (A/F) Sensor


**B: INSTALLATION**

1) Before installing front oxygen (A/F) sensor, apply anti-seize compound only to threaded portion of front oxygen (A/F) sensor to make the next removal easier.

**Anti-seize compound:**  
**SS-30 by JET LUBE**


**CAUTION:**

**Never apply anti-seize compound to protector of front oxygen (A/F) sensor.**

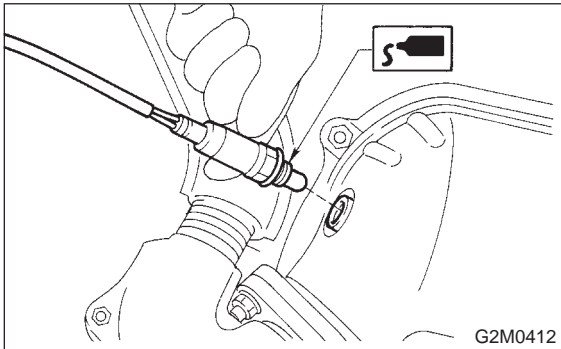


2) Install front oxygen (A/F) sensor.

**Tightening torque:**  
**21±3 N·m (2.1±0.3 kg·m, 15.2±2.2 ft·lb)**

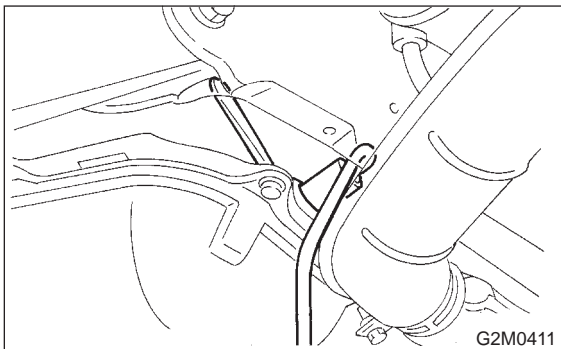

3) Lower the vehicle.

4) Connect connector of front oxygen (A/F) sensor.

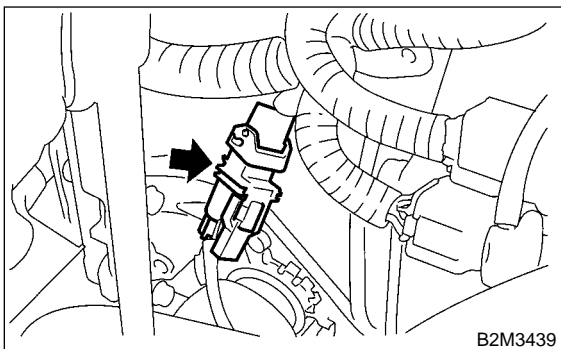

5) Connect battery ground cable.

