



4) Remove intake air temperature and pressure sensor.

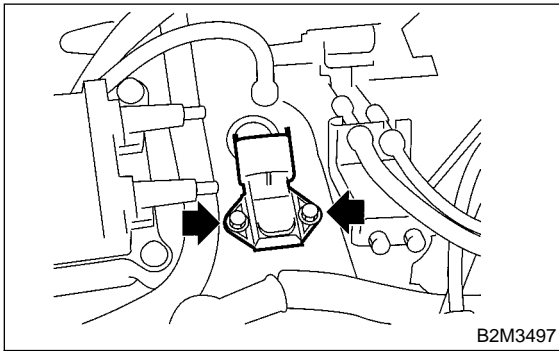


5) Install in the reverse order of removal.

Tightening torque:

$2.0 \pm 0.4 \text{ N}\cdot\text{m}$ ($0.2 \pm 0.04 \text{ kg}\cdot\text{m}$, $1.4 \pm 0.3 \text{ ft}\cdot\text{lb}$)

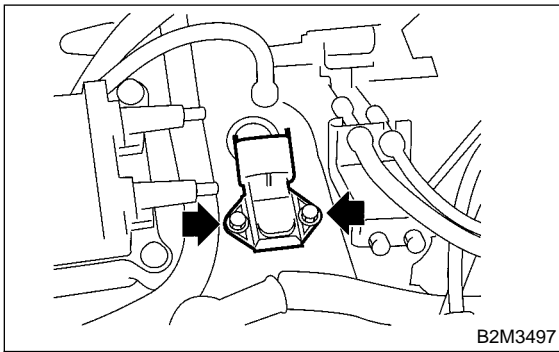


CAUTION:
Replace O-ring with new one.

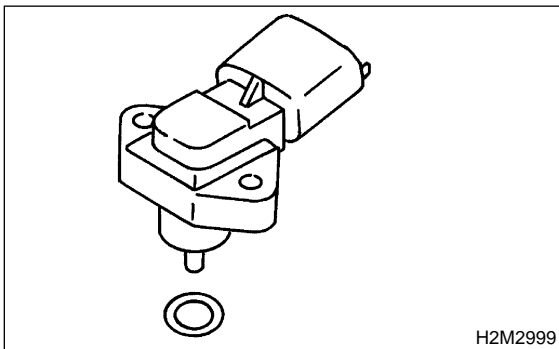


12. Atmospheric Pressure Sensor

A: REMOVAL AND INSTALLATION


1) Disconnect battery ground cable.

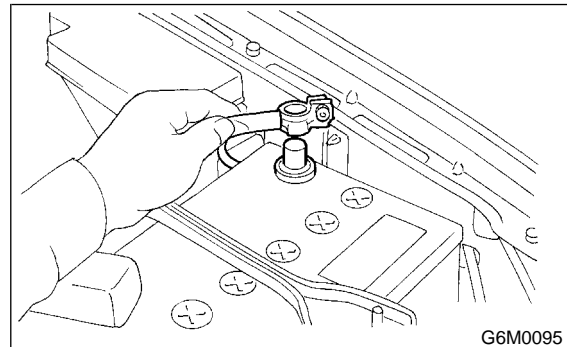

2) Disconnect connector from atmospheric pressure sensor.

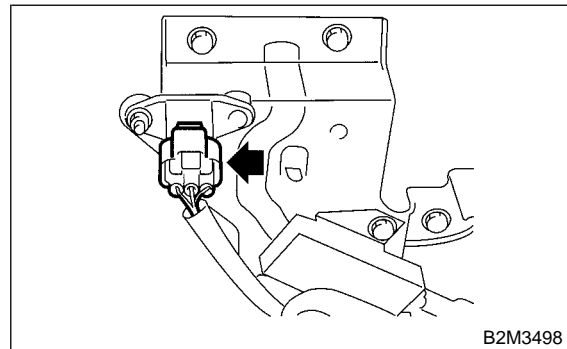

3) Remove atmospheric pressure sensor from bracket.

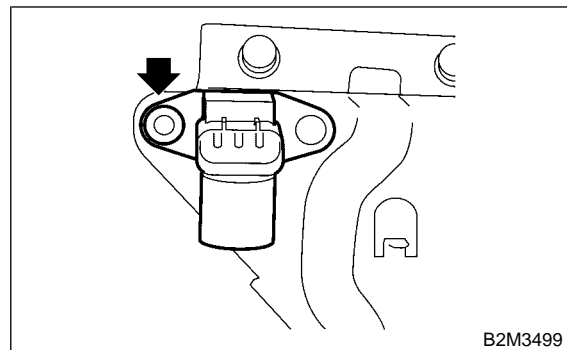


13. Idle Air Control Solenoid Valve

4) Install in the reverse order of removal.

Tightening torque:


$6.4 \pm 0.5 \text{ N}\cdot\text{m}$ ($0.65 \pm 0.05 \text{ kg}\cdot\text{m}$, $4.7 \pm 0.4 \text{ ft}\cdot\text{lb}$)

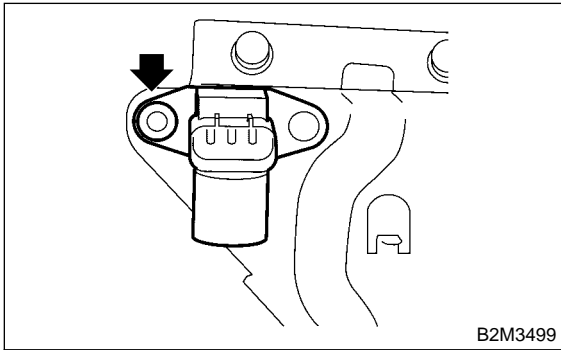


13. Idle Air Control Solenoid Valve

A: REMOVAL AND INSTALLATION

1) Disconnect battery ground cable.

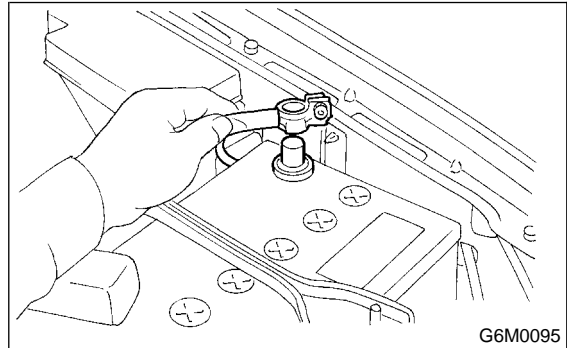

2) Disconnect connector from idle air control solenoid valve.

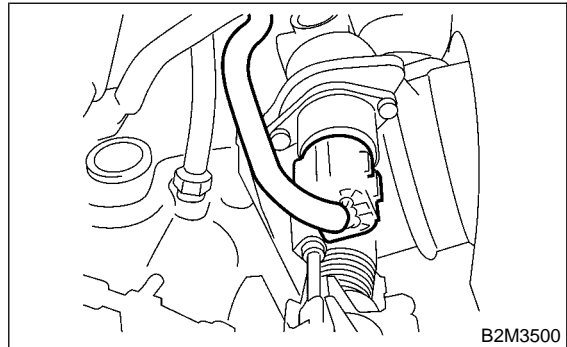

3) Remove idle air control solenoid valve from throttle body.

