


13. Idle Air Control Solenoid Valve

4) Install in the reverse order of removal.

Tightening torque:


$6.4 \pm 0.5 \text{ N}\cdot\text{m}$ ($0.65 \pm 0.05 \text{ kg}\cdot\text{m}$, $4.7 \pm 0.4 \text{ ft}\cdot\text{lb}$)

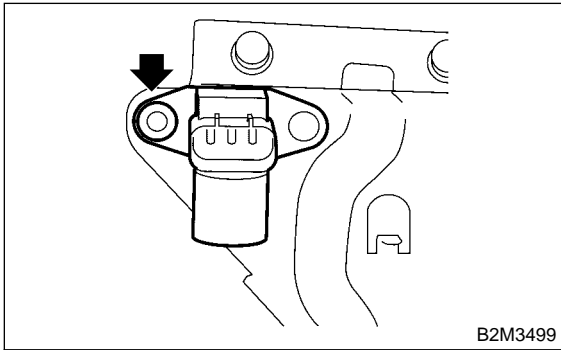


13. Idle Air Control Solenoid Valve

A: REMOVAL AND INSTALLATION


1) Disconnect battery ground cable.

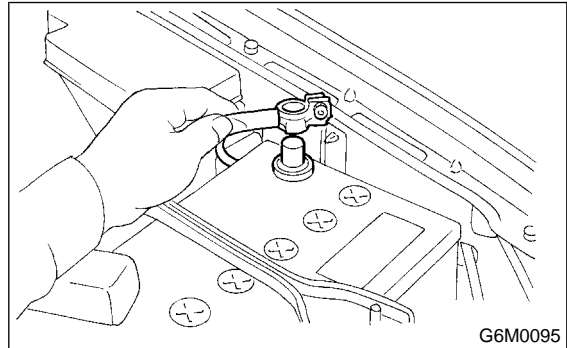

2) Disconnect connector from idle air control solenoid valve.

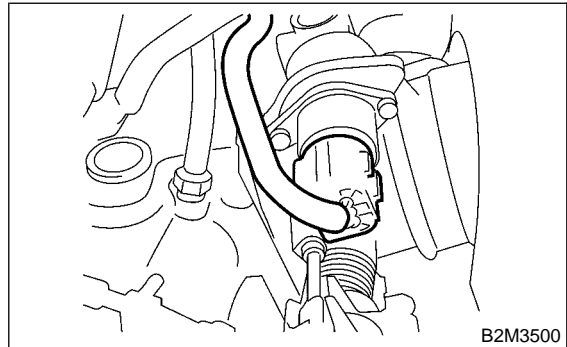

3) Remove idle air control solenoid valve from throttle body.

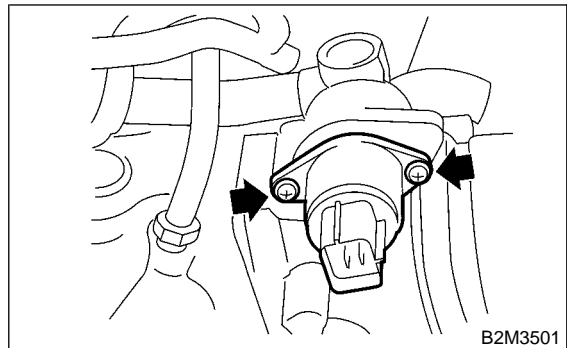


4) Install in the reverse order of removal.

CAUTION:

Always use new gasket.

Tightening torque:


$6.0 \pm 0.8 \text{ N}\cdot\text{m}$ ($0.61 \pm 0.08 \text{ kg}\cdot\text{m}$, $4.4 \pm 0.6 \text{ ft}\cdot\text{lb}$)

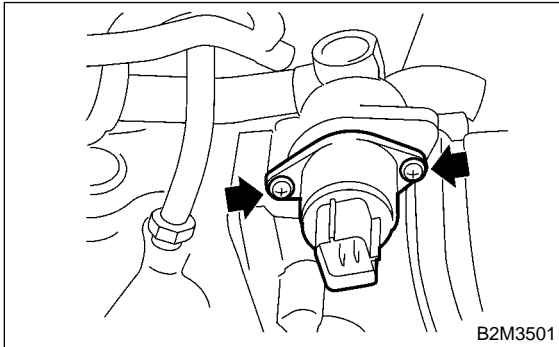


14. Air Assist Injector Solenoid Valve

A: REMOVAL AND INSTALLATION

1) Disconnect battery ground cable.

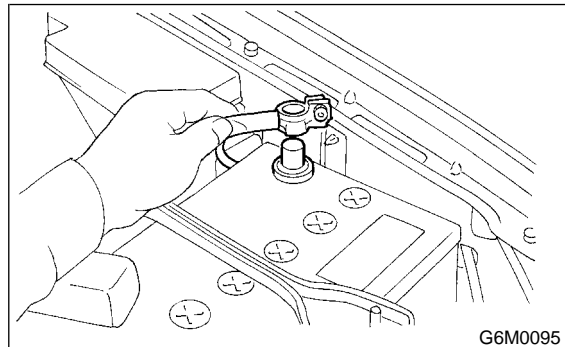

2) Disconnect connector from air assist injector solenoid valve and disconnect air by-pass hoses.

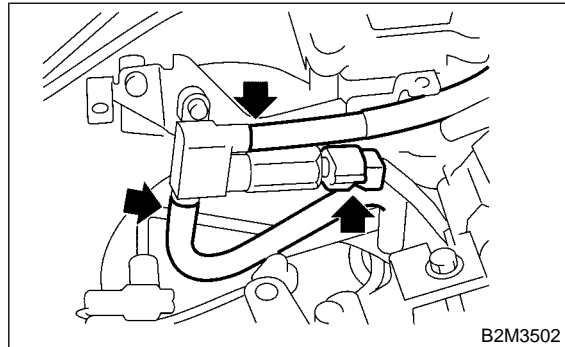

3) Remove air assist injector solenoid valve from intake manifold.

