


4) Install in the reverse order of removal.

**CAUTION:**

Always use new gasket.

**Tightening torque:**


**$6.0 \pm 0.8 \text{ N}\cdot\text{m}$  ( $0.61 \pm 0.08 \text{ kg}\cdot\text{m}$ ,  $4.4 \pm 0.6 \text{ ft}\cdot\text{lb}$ )**

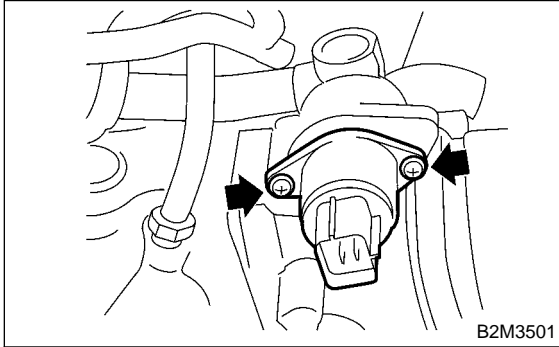


## 14. Air Assist Injector Solenoid Valve

### A: REMOVAL AND INSTALLATION


1) Disconnect battery ground cable.

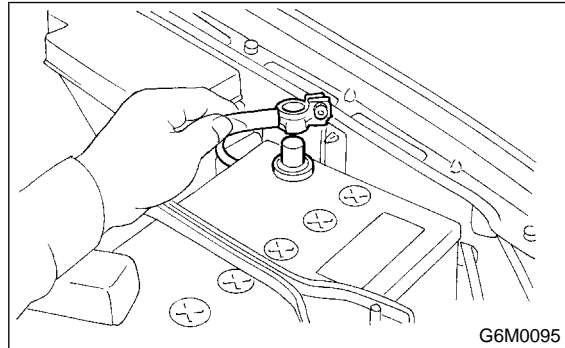

2) Disconnect connector from air assist injector solenoid valve and disconnect air by-pass hoses.

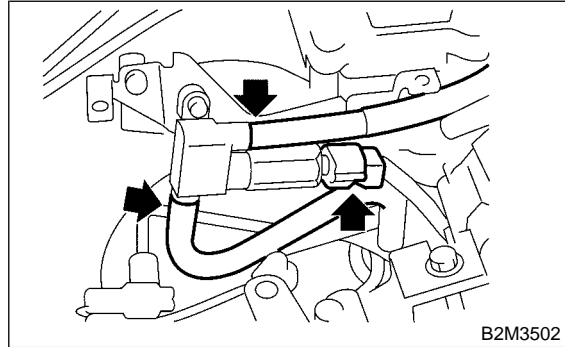

3) Remove air assist injector solenoid valve from intake manifold.

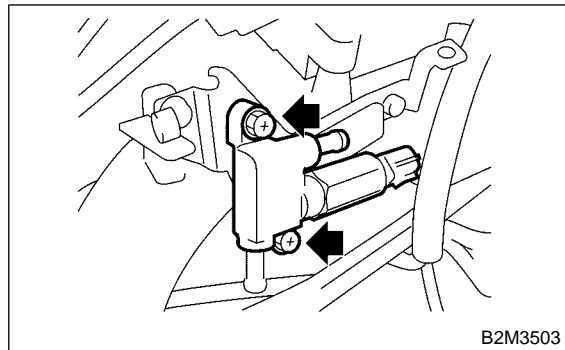


## 15. Purge Control Solenoid Valve

4) Install in the reverse order of removal.

**Tightening torque:**


$15.7 \pm 1.5 \text{ N}\cdot\text{m}$  ( $1.6 \pm 0.15 \text{ kg}\cdot\text{m}$ ,  $11.6 \pm 1.1 \text{ ft}\cdot\text{lb}$ )

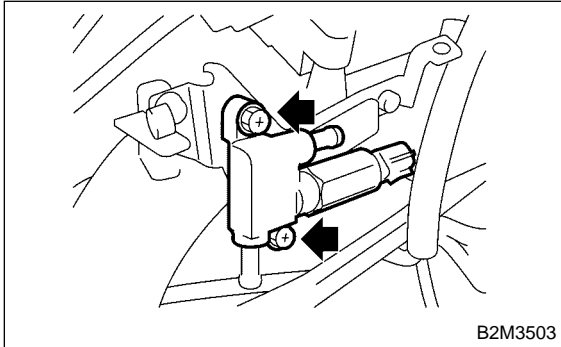


## 15. Purge Control Solenoid Valve

### A: REMOVAL AND INSTALLATION

1) Disconnect battery ground cable.

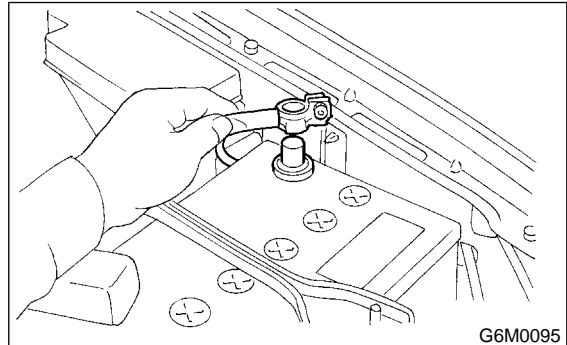

2) Remove bolt which installs purge control solenoid valve onto intake manifold.

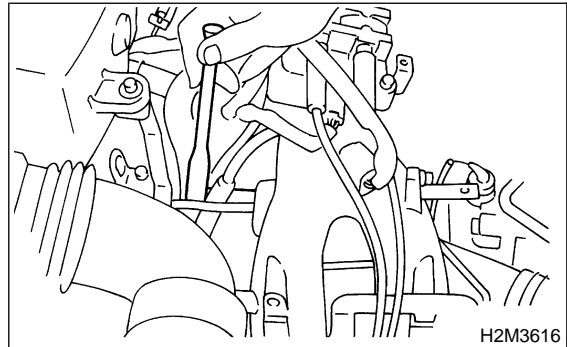

3) Take out purge control solenoid valve through the bottom of the intake manifold.

4) Disconnect connector and hoses from purge control solenoid valve.

