




5) Remove nuts which hold ECM to bracket.

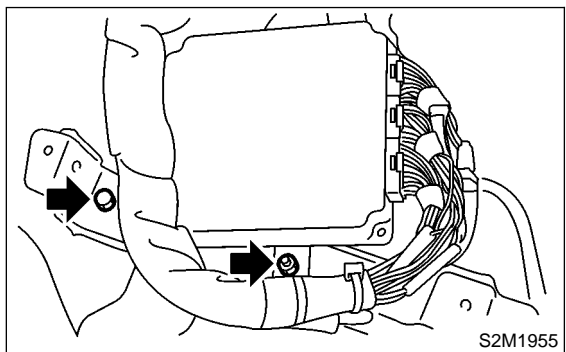


6) Remove clip from bracket.

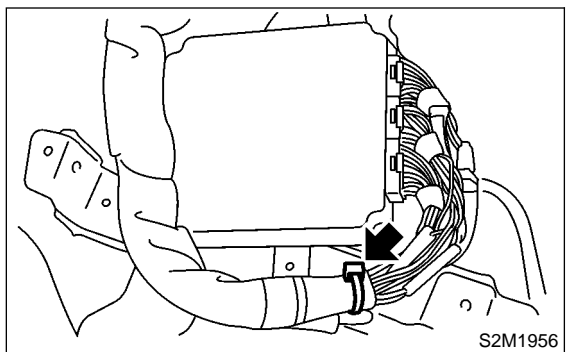

7) Disconnect ECM connectors.

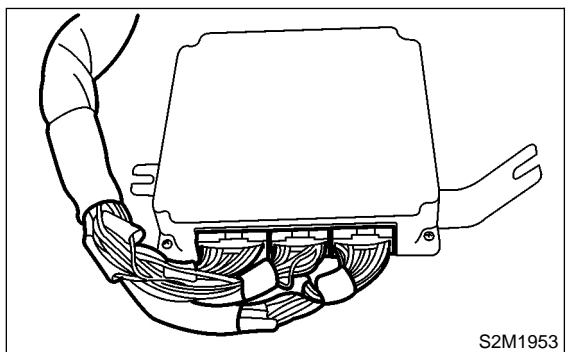

8) Take out ECM.

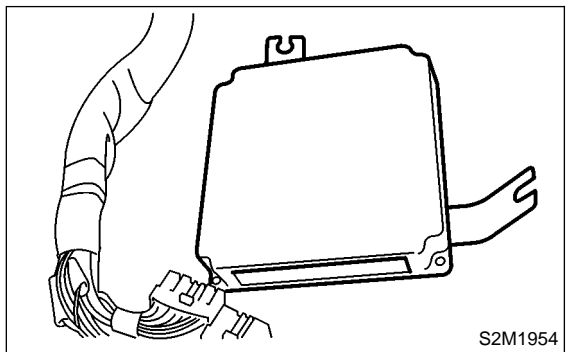

9) Install in the reverse order of removal.


CAUTION:

When replacing ECM, be careful not to use the wrong spec. ECM to avoid any damage to the fuel injection system.


18. Main Relay

A: REMOVAL AND INSTALLATION


1) Disconnect battery ground cable.

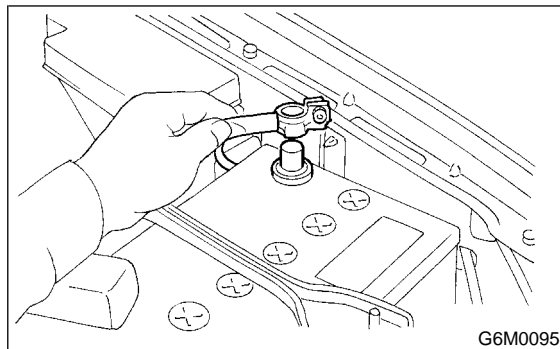

2) Remove bolt which holds bracket of main relay and fuel pump relay.

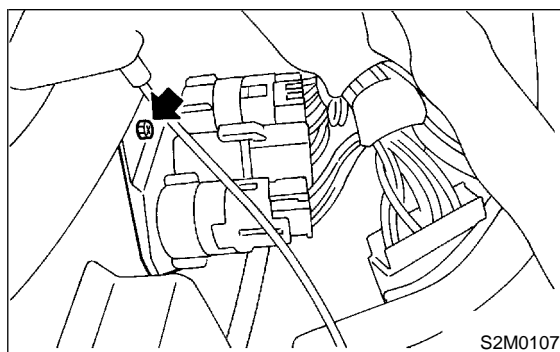


3) Disconnect connectors from relays.

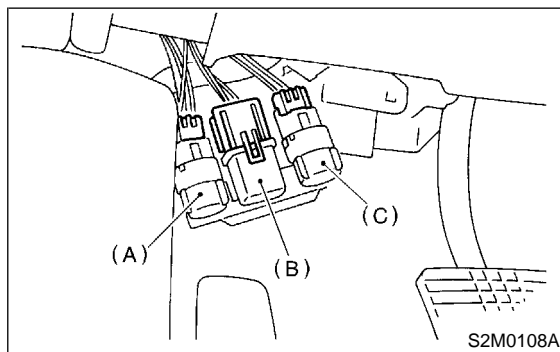

- (A) Rear accessory power supply relay
- (B) Main relay
- (C) Fuel pump relay

4) Remove main relay from mounting bracket.

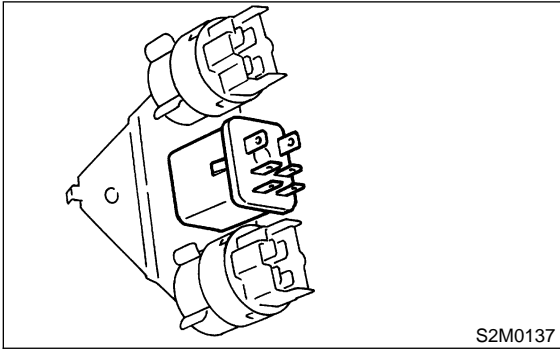


5) Install in the reverse order of removal.


19. Fuel Pump Relay

A: REMOVAL AND INSTALLATION


1) Disconnect battery ground cable.

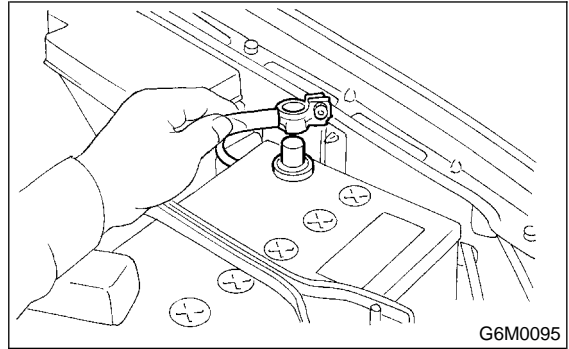

2) Disconnect connector from fuel pump relay.

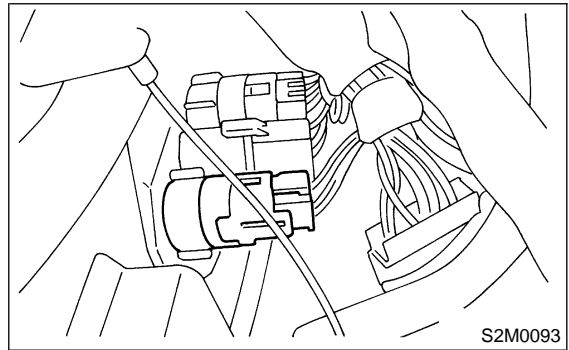

3) Remove fuel pump relay from mounting bracket.

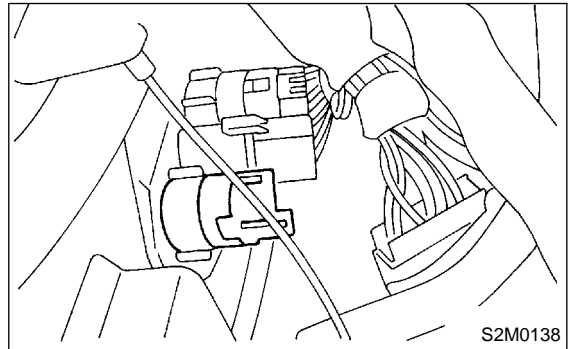

4) Install in the reverse order of removal.