


4) Remove main relay from mounting bracket.

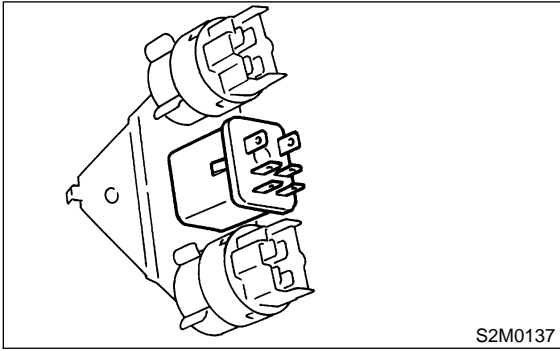


5) Install in the reverse order of removal.


## 19. Fuel Pump Relay

### A: REMOVAL AND INSTALLATION


1) Disconnect battery ground cable.

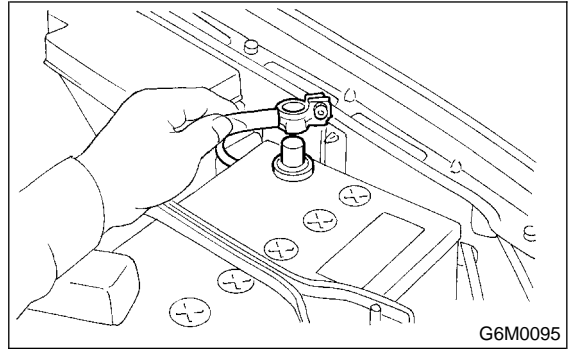

2) Disconnect connector from fuel pump relay.

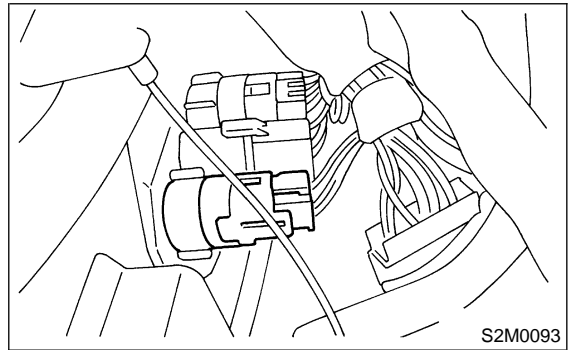

3) Remove fuel pump relay from mounting bracket.

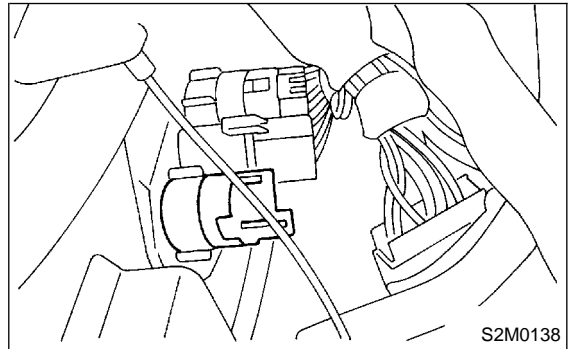

4) Install in the reverse order of removal.