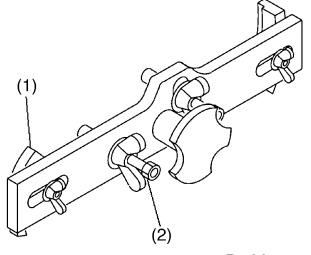 
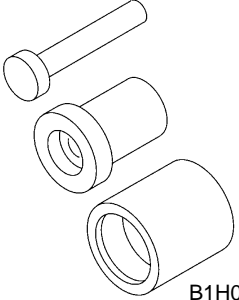 
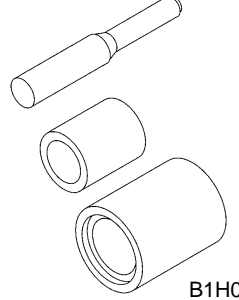 
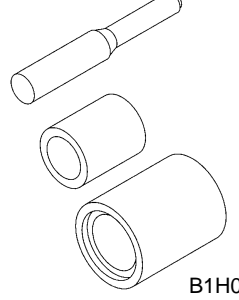 
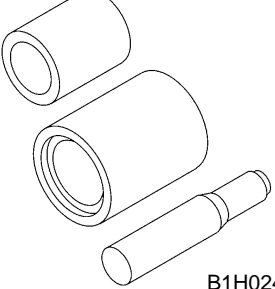 
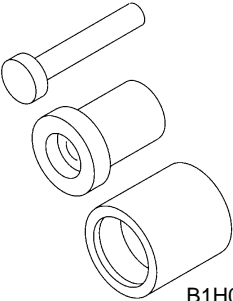 
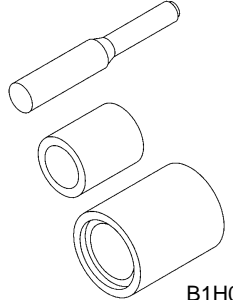 
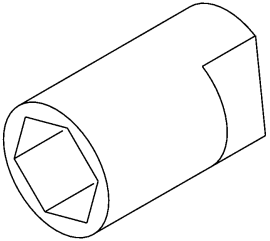 


5. Suspension Tools

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p>B1H0144</p>	927380001	ADAPTER	<p>Used as an adapter for camber &amp; caster gauge when measuring camber and caster.</p> <p>(1) 28199AC000 PLATE (2) 28199AC010 BOLT</p>
 <p>B1H0244</p>	927680000	INSTALLER & REMOVER	Used for replacing transverse link bushing (Front).
 <p>B1H0245</p>	927690000	INSTALLER & REMOVER	Used for replacing lateral link bushing (12 dia).
 <p>B1H0245</p>	927700000	INSTALLER & REMOVER	Used for replacing lateral link bushing (14 dia).
 <p>B1H0246</p>	927710000	INSTALLER & REMOVER	Used for replacing lateral link bushing (23 dia).

# SPECIAL TOOLS

[G500] 1-6  
5. Suspension Tools

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p>B1H0244</p>	927720000	INSTALLER & REMOVER	Used for replacing trailing link bushing.
 <p>B1H0245</p>	927730000	INSTALLER & REMOVER	Used for replacing rear housing bushing.
 <p>B1H0247</p>	927760000	STRUT MOUNT SOCKET	Used for disassembling and assembling strut mount.