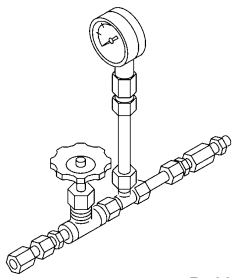 
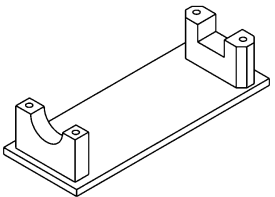 
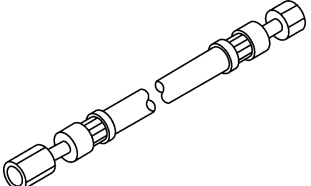 
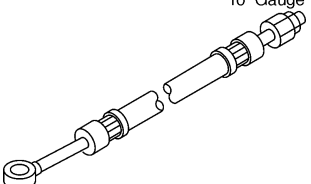 
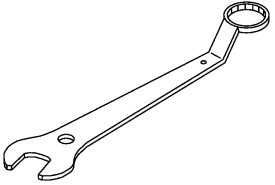 


1-6 [G700]
7. Steering System Tools

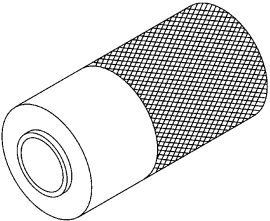 
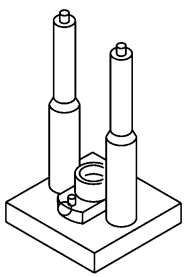 
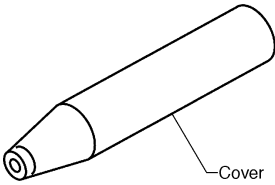 
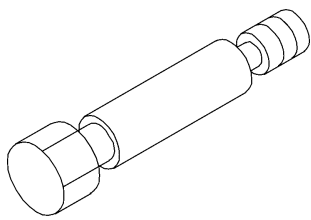 
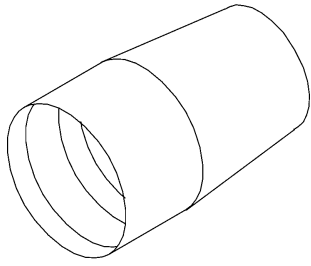 
SPECIAL TOOLS

7. Steering System Tools

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 B1H0147	925711000	PRESSURE GAUGE	Used for measuring oil pump pressure.
 G1H0263	926200000	STAND	Used when inspecting characteristic of gearbox assembly and disassembling it. Vise this tool and secure gearbox assembly using gearbox clamp.
 To Gauge B1H0172A	34099AC010	ADAPTER HOSE A	Used with PRESSURE GAUGE (925711000).
 To Gauge B1H0185A	34099AC020	ADAPTER HOSE B	Used with PRESSURE GAUGE (925711000).
 G1H0265	926230000	SPANNER	For the lock nut when adjusting backlash of gearbox. Measurement of rotating resistance of gearbox assembly.

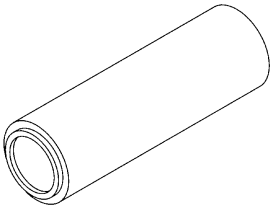 
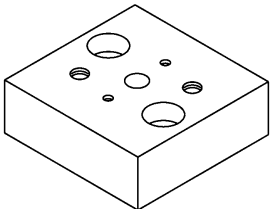 
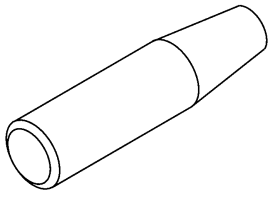 
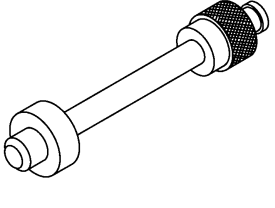 
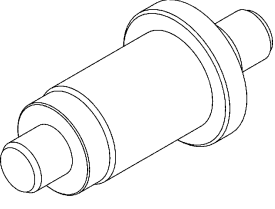 
SPECIAL TOOLS

[G700] 1-6
7. Steering System Tools

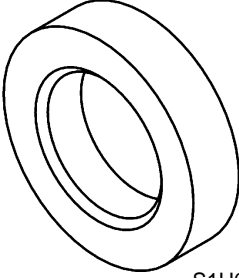 
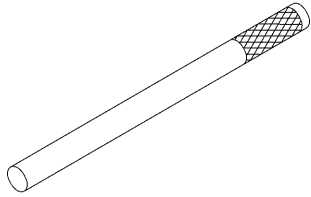 
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p>B1H0261</p>	927640000	INSTALLER B	Used for installing ball bearing into housing.
 <p>G1H0267</p>	926370000	INSTALLER A	<ul style="list-style-type: none"> • Used for installing valve assembly into valve housing assembly. • Used with STAND BASE (927630000).
 <p>H1H0476A</p>	926390001	COVER & REMOVER ASSY	Used for assembling rack assembly.
 <p>B1H0069</p>	926400000	GUIDE	<ul style="list-style-type: none"> • Right side of rack when installing rack bush. • Used with GUIDE (927660000).
 <p>B1H0070</p>	927660000	GUIDE	<ul style="list-style-type: none"> • Right side of rack when installing rack bush. • Used with GUIDE (926400000).

1-6 [G700]
7. Steering System Tools

SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p>B1H0262</p>	927620000	INSTALLER B	Oil seal of valve housing. Used with INSTALLER A (926360000).
 <p>G1H0273</p>	927630000	STAND BASE	Used for assembling power steering gearbox.
 <p>B1H0263</p>	926360000	INSTALLER A	<ul style="list-style-type: none"> • Used as a guide to install oil seal. • Used with INSTALLER B (927620000).
 <p>G1H0275</p>	34099FA110	INSTALLER	Used for installing oil seal.
 <p>S1H0030</p>	927610000	INSTALLER	Used for installing valve housing oil seal.

SPECIAL TOOLS**[G700] 1-6**
7. Steering System Tools

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 S1H0031	34099FA130	INSTALLER SEAL	<ul style="list-style-type: none">• Used for installing valve housing oil seal.• Used with INSTALLER AND REMOVER SEAL (34099FA120).
 S1H0054	34199AE050	REMOVER OIL SEAL	Used for removing oil seal.