


NOTE:

Confirm that the O-ring is inserted in the specified position.

15. Condenser Fan Assembly

A: REMOVAL AND INSTALLATION

- 1) Disconnect battery negative terminal.
- 2) Disconnect harness connector from fan motor.
- 3) Remove condenser fan bolt from radiator.

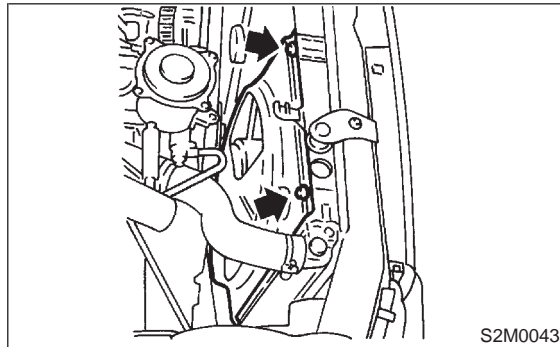

- 4) Pull condenser fan assembly.
- 5) Install the condenser fan assembly in the reverse order of removal.