


22. Transfer Valve Body

A: DISASSEMBLY

- 1) Separate transfer duty solenoid and transfer valve body.
- 2) Remove the stopper plate and pry out the plug with a screwdriver. Then extract the spring and transfer control valve together.

CAUTION:

Be careful not to damage the valve and valve body.

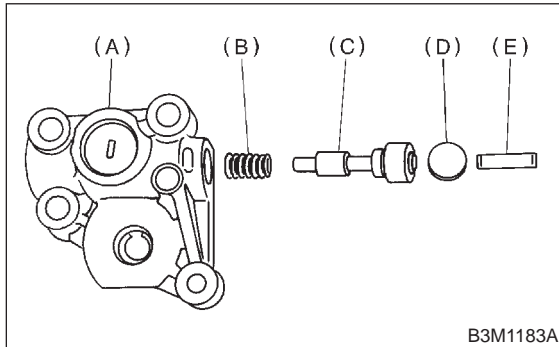

- (A) Transfer valve body
- (B) Return spring
- (C) Transfer control valve
- (D) Plug
- (E) Stopper plate

B: INSPECTION

Check each component for harmful cuts, damage, or other faults.

C: ASSEMBLY

Assemble in the reverse order of removal.


NOTE:

Make sure the valve slides smoothly after assembling.


23. Transmission Control Module (TCM)

A: REMOVAL

- 1) Disconnect battery ground terminal.

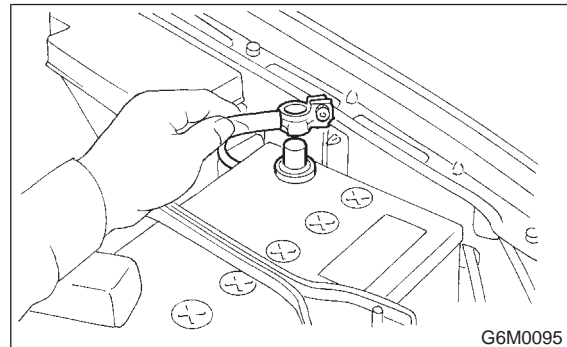


- 2) Remove lower cover and then disconnect connector.

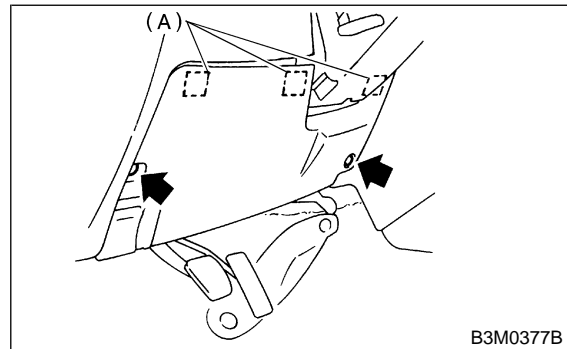

- (A) Clip

- 3) Disconnect connectors from TCM.
- 4) Remove transmission control module.

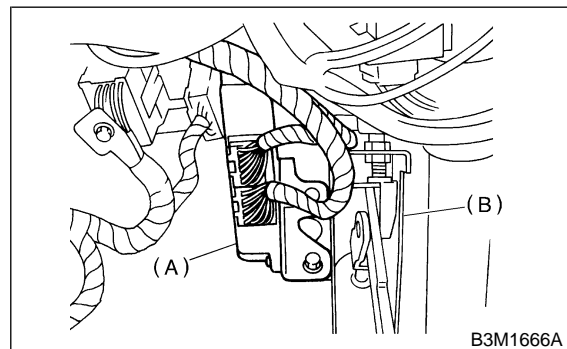

- (A) Transmission control module
- (B) Brake pedal bracket