


2. Select Cable


A: ADJUSTMENT

Move select lever from "P" position to "1" position. You should be able to feel the detentes in each position. If the detentes cannot be felt or the position pointer is improperly aligned, adjust the cable.

- 1) Prior to removal, set lever to "N" position.
- 2) Remove heat shield cover.

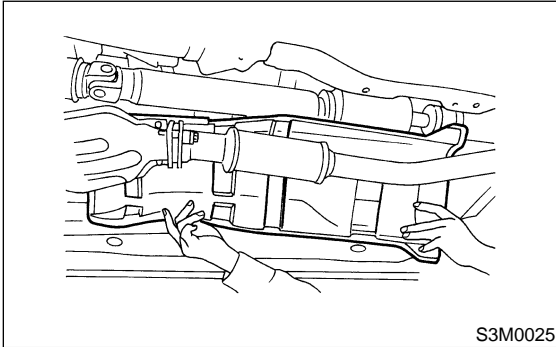


- 3) Loosen the adjusting nut on each side.

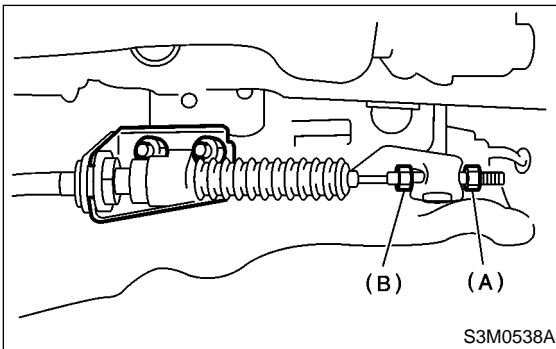

- (A) Adjusting nut A
- (B) Adjusting nut B

- 4) Turn adjusting nut B until it lightly touches the connector.

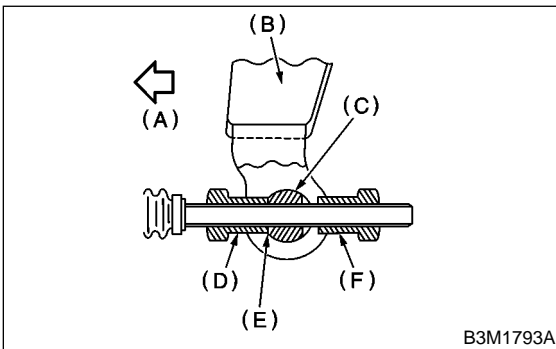


- (A) Front side
- (B) Select lever
- (C) Connector
- (D) Adjusting nut B
- (E) Contact point
- (F) Adjusting nut A

- 5) While preventing adjusting nut B from moving with a wrench, tighten adjusting nut A.

Tightening torque:

7.5±2.0 N·m (0.76±0.2 kg·m, 5.5±1.4 ft-lb)

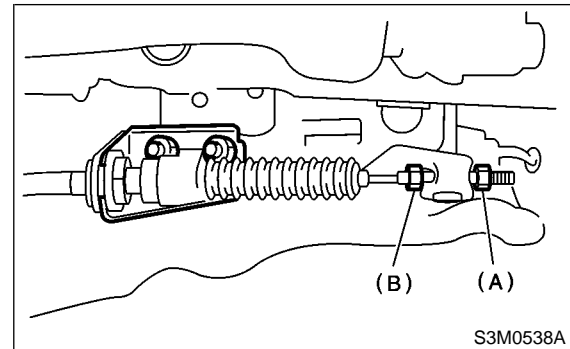


- (A) Adjusting nut A
- (B) Adjusting nut B


- 6) After completion of fitting, make sure that the select lever operates smoothly all across the operating range.

B: REMOVAL

- 1) Prior to removal, set lever to "N" position.
- 2) Remove under cover.
- 3) Remove heat shield cover.

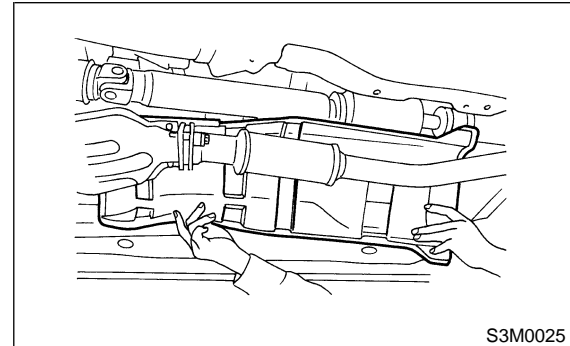


- 4) Remove snap pin from range select lever.

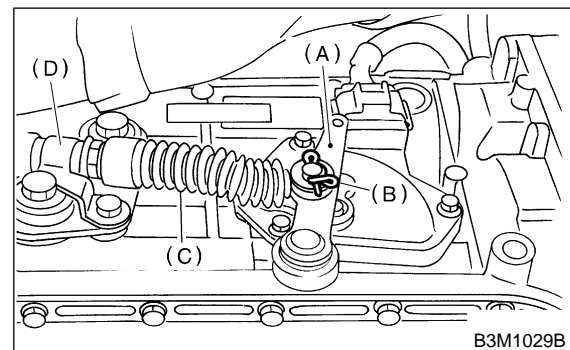


- (A) Range select lever
- (B) Snap pin
- (C) Select cable
- (D) Clamp

5) Remove plate assembly from transmission case.

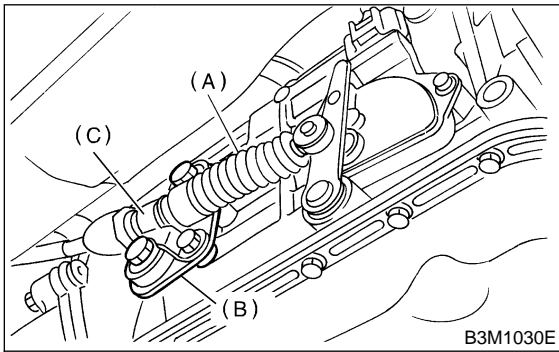

- (A) Select cable
- (B) Plate ASSY
- (C) Clamp

6) Disconnect cable from select lever and then remove cable bracket.

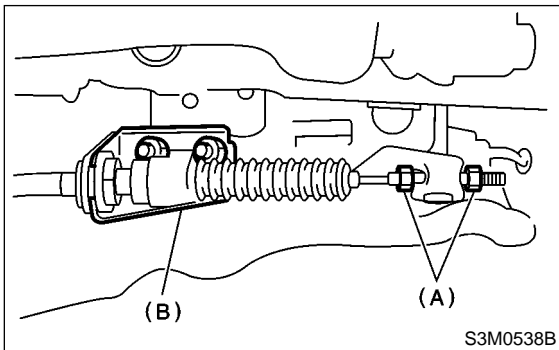

- (A) Adjusting nuts
- (B) Cable bracket

7) Remove select cable from plate assembly.

C: INSTALLATION

1) Install select cable to plate assembly.


Tightening torque:
32±10 N·m (3.3±1.0 kg·m, 24±7 ft·lb)

2) Install select cable to range select lever.
3) Install select cable bracket to body.

Tightening torque:
25±7 N·m (2.5±0.7 kg·m, 18.1±5.1 ft·lb)


4) Install plate assembly to transmission.

Tightening torque:
T: 24.5±2.0 N·m (2.5±0.2 kg·m, 18.1±1.4 ft·lb)

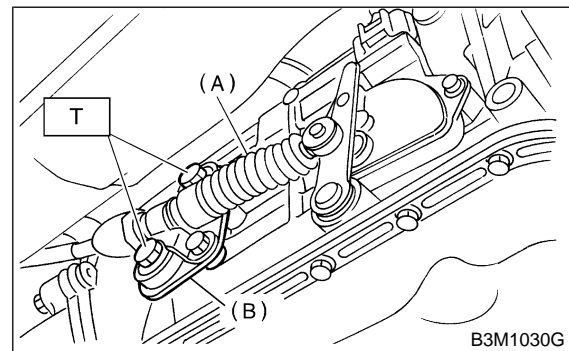

- (A) Select cable
- (B) Plate ASSY


5) Install snap pin to range select lever.

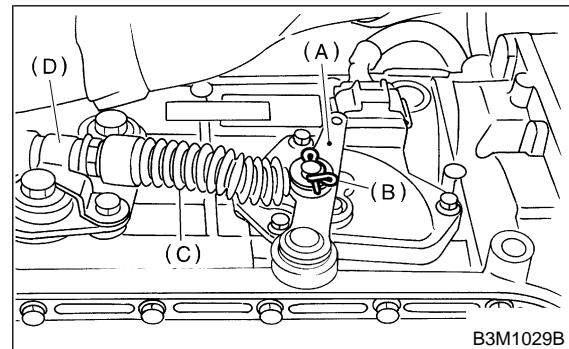

- (A) Range select lever
- (B) Snap ring
- (C) Select cable
- (D) Clamp

6) Move the select lever to the "N" position, then adjust the select cable position. <Ref. to 3-3 [W2A0].>


7) Install heat shield cover.

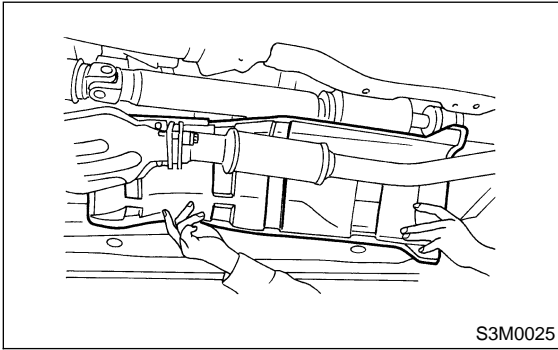


3. Select Lever

A: REMOVAL

- 1) Move the select lever to the "N" position.
- 2) Remove heat shield cover.

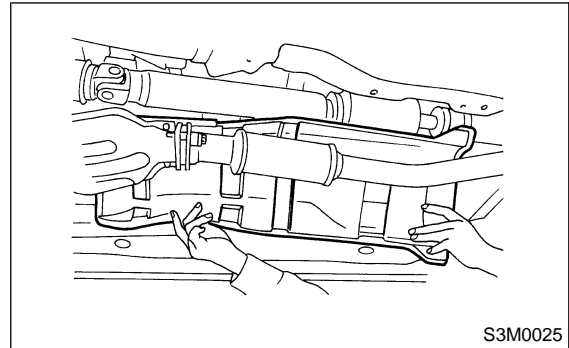

- 3) Disconnect cable from select lever and then remove cable bracket.

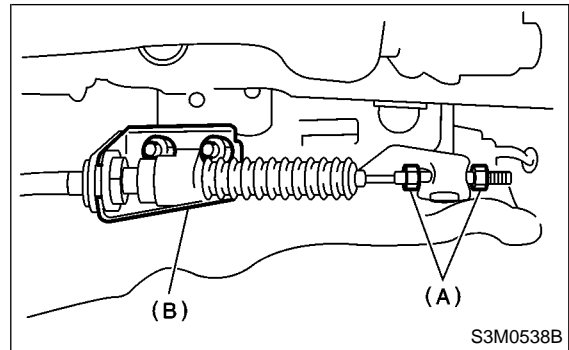

- (A) Adjusting nuts
- (B) Cable bracket

- 4) Remove front cover. <Ref. to 5-4 [W1A0].>
- 5) Disconnect connectors, and remove the stay.
- 6) Remove the six bolts to take out the select lever assembly from body.

