

CHASSIS SECTION

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUJI HEAVY INDUSTRIES LTD.

FRONT SUSPENSION FS

REAR SUSPENSION RS

WHEEL AND TIRE SYSTEM WT

DIFFERENTIALS DI

TRANSFER CASE TC

DRIVE SHAFT SYSTEM DS

ABS ABS

BRAKE BR

PARKING BRAKE PB


**POWER ASSISTED SYSTEM
(POWER STEERING)** PS

ABS (DIAGNOSTICS) ABS

ABS

ABS

	Page
1. General Description.....	2
2. ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).....	7
3. ABS Sequence Control	11
4. Front ABS Sensor	14
5. Rear ABS Sensor	18
6. Front Tone Wheel.....	21
7. Rear Tone Wheel	22
8. G Sensor	23



GENERAL DESCRIPTION

ABS


1. General Description S401001

A: SPECIFICATIONS S401001E49

Item		Standard or remarks	
ABS sensor	ABS sensor gap	Front	0.3 — 0.8 mm (0.012 — 0.031 in)
		Rear	0.7 — 1.2 mm (0.028 — 0.047 in)
	ABS sensor resistance	Front	1.25±0.25 kΩ
		Rear	1.0±0.2 kΩ
	Marks of the harness	Front LH	Brown
		Front RH	Blue
		Rear LH	Yellow
Rear RH		White	
G sensor	G sensor voltage	2.3±0.2 V	
ABS control module and hydraulic control unit (ABSCM&H/U) marks	AT	C7	
	MT	C8	

B: COMPONENT S401001A05

1. SENSOR S401001A0501

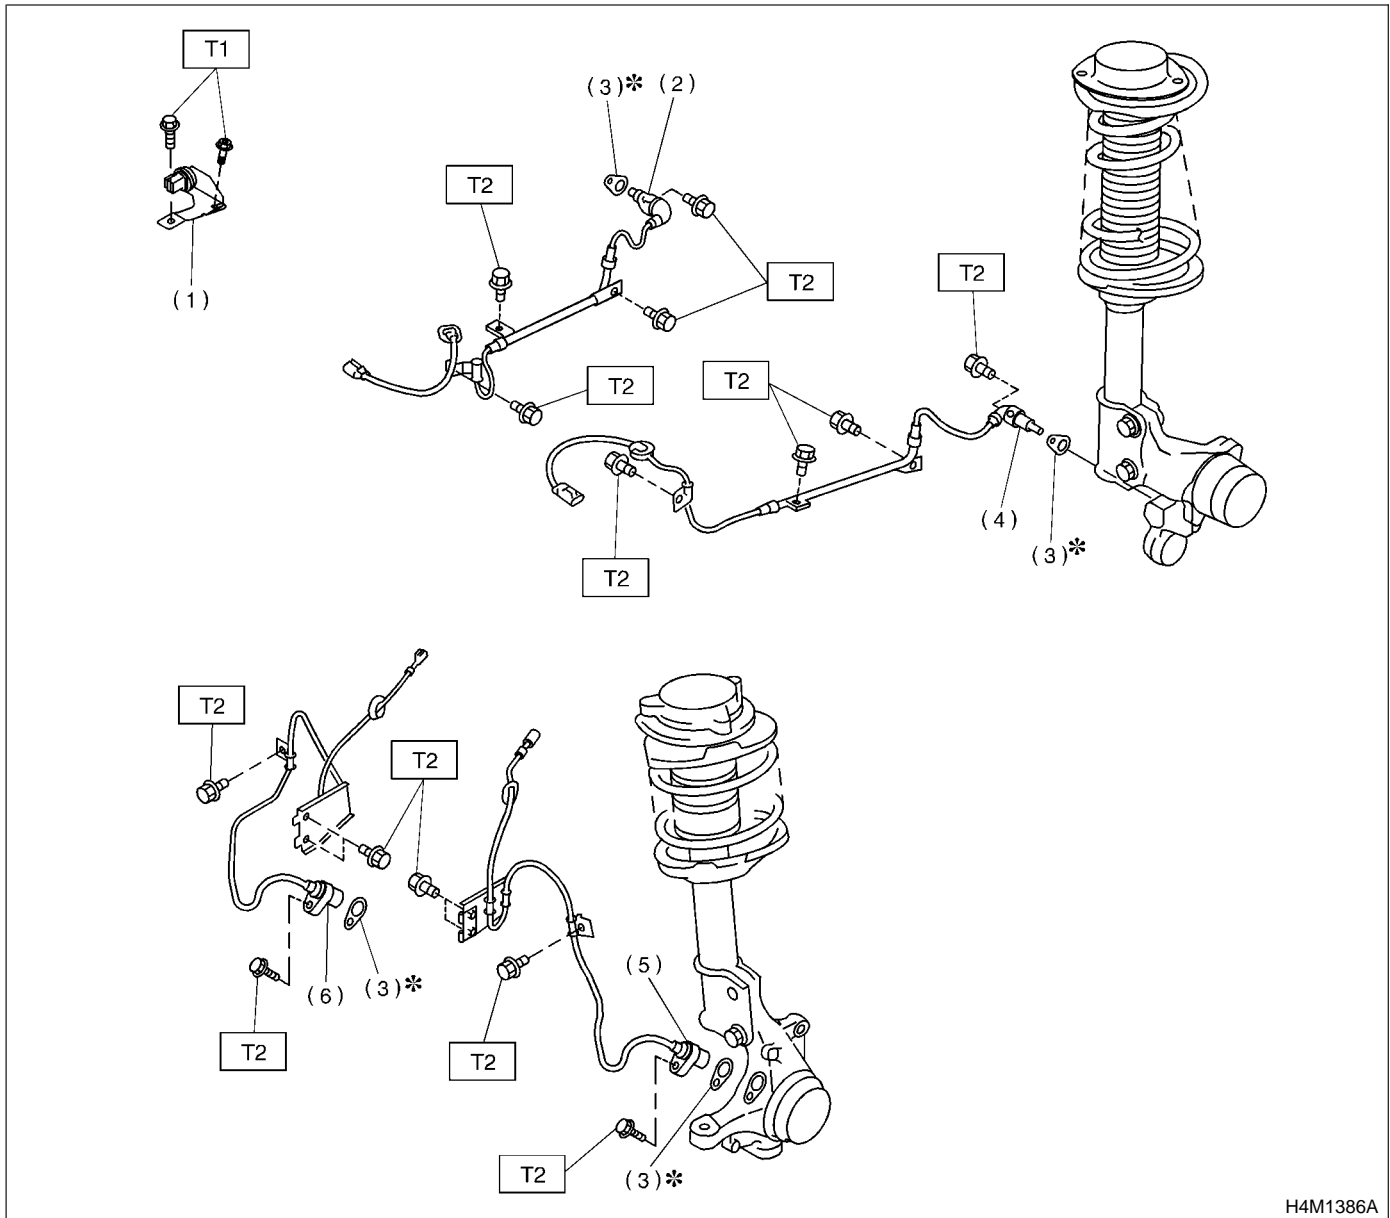

- (1) G sensor
- (2) Rear ABS sensor RH
- (3) ABS spacer
- (4) Rear ABS sensor LH


- (5) Front ABS sensor LH
- (6) Front ABS sensor RH

Tightening torque: N·m (kgf·m, ft·lb)
T1: 18 (1.8, 13.0)
T2: 32 (3.3, 24)

GENERAL DESCRIPTION

ABS

2. ABS CONTROL MODULE AND HYDRAULIC CONTROL UNIT (ABSCM&H/U) S401001A0502

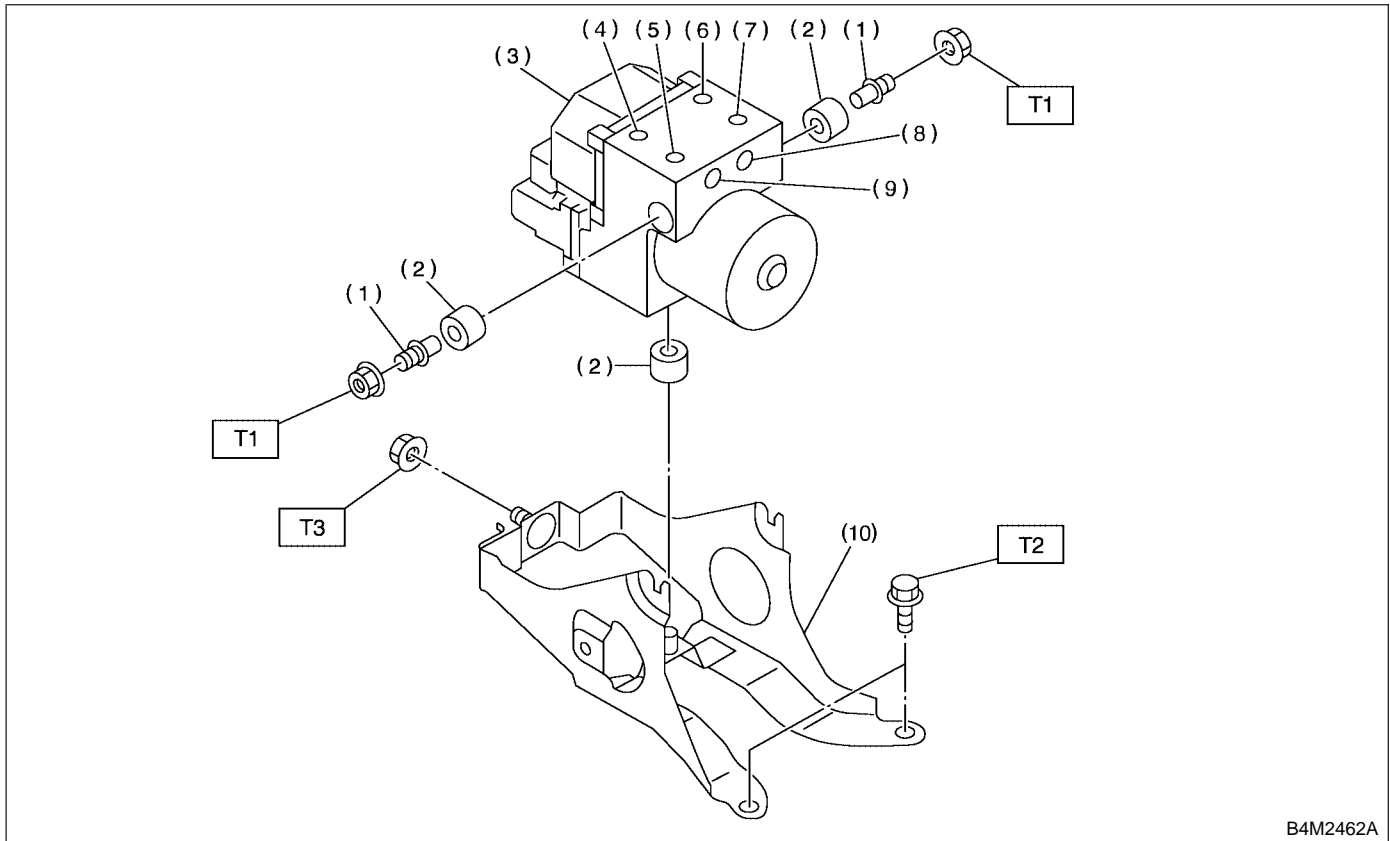

- (1) Stud bolt
- (2) Damper
- (3) ABS control module and hydraulic control unit
- (4) Front-LH outlet
- (5) Secondary inlet

- (6) Front-RH outlet
- (7) Primary inlet
- (8) Rear-LH outlet
- (9) Rear-RH outlet
- (10) Bracket

Tightening torque: N·m (kgf·m, ft·lb)

T1: 18 (1.8, 13.06)

T2: 32 (3.3, 24)

T3: 38 (3.8, 28)

C: CAUTION S401001A03



- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust or dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part in the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.
- Before disconnecting electrical connectors of sensors or units, be sure to disconnect negative terminal from battery.

GENERAL DESCRIPTION

ABS

D: PREPARATION TOOL S401001A17

1. SPECIAL TOOLS S401001A1701

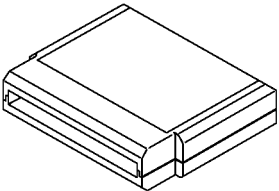ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <small>B2M3876</small>	24082AA150 (Newly adapted tool)	CARTRIDGE	Troubleshooting for electrical systems.
 <small>B2M3877</small>	22771AA030	SELECT MONITOR KIT	Troubleshooting for electrical systems. <ul style="list-style-type: none"> ● English: 22771AA030 (Without printer) ● German: 22771AA070 (Without printer) ● French: 22771AA080 (Without printer) ● Spanish: 22771AA090 (Without printer)

2. GENERAL PURPOSE TOOLS S401001A1702

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance, voltage and ampere.
Pressure Gauge	Used for measuring oil pressure.
Oscilloscope	Used for measuring sensor.

2. ABS Control Module and Hydraulic Control Unit (ABSCM&H/U)

S401543

A: REMOVAL


S401543A18

- 1) Disconnect ground terminal from battery.
- 2) Remove air intake duct from engine compartment to facilitate removal of ABSCM&H/U.
- 3) Use an air gun to get rid of water around the ABSCM&H/U.


CAUTION:

The contact will be insufficient if the terminal gets wet.

- 4) Pull off the lock of the ABSCM&H/U connector to remove it.

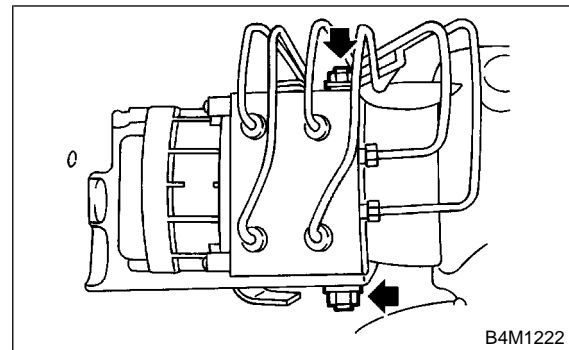

B4M1222

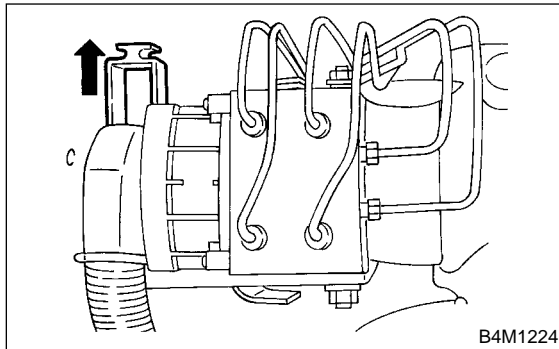

B4M1224

- 5) Disconnect connector from ABSCM&H/U.

CAUTION:

Be careful not to let water or other foreign matter contact the ABSCM&H/U terminal.

- 6) Unlock cable clip.
- 7) Disconnect brake pipes from ABSCM&H/U.

CAUTION:

Wrap brake pipes with vinyl bag to avoid spilling brake fluid on vehicle body.

- 8) Remove ABSCM&H/U ground terminal from bracket.
- 9) Remove ABSCM&H/U from engine compartment.

CAUTION:

- ABSCM&H/U cannot be disassembled. Do not attempt to loosen bolts and nuts.
- Do not drop or bump ABSCM&H/U.
- Do not turn the ABSCM&H/U upside down or place it on its side.
- Be careful to prevent foreign particles from getting into ABSCM&H/U.
- Apply a coat of rust-preventive wax (Nippeco LT or GB) to bracket attaching bolt after tightening.
- Do not pull harness when disconnecting connector.

ABS CONTROL MODULE AND HYDRAULIC CONTROL UNIT (ABSCM&H/U)

ABS

B: INSTALLATION

S401543A11

- 1) Install ABSCM&H/U.

CAUTION:

Confirm that the specifications of the ABSCM&H/U conforms to the vehicle specifications.

Tightening torque:

18 N·m (1.8 kgf-m, 13.0 ft-lb)

- 2) Install ABSCM&H/U ground terminal to bracket.


Tightening torque:

32 N·m (3.3 kgf-m, 24 ft-lb)

- 3) Connect brake pipes to their correct ABSCM&H/U connections.

Tightening torque:

15 N·m (1.5 kgf-m, 10.8 ft-lb)

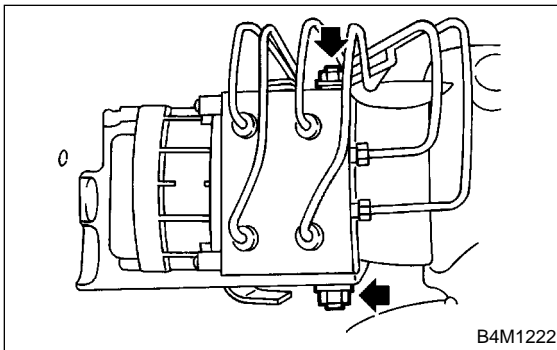

- 4) Using cable clip, secure ABSCM&H/U harness to bracket.
- 5) Connect connector to ABSCM&H/U.

CAUTION:

- Be sure to remove all foreign matter from inside the connector before connecting.
- Ensure that the ABSCM&H/U connector is securely locked.


- 6) Install air intake duct.
- 7) Connect ground terminal to battery.
- 8) Bleed air from the brake system.

C: INSPECTION

S401543A10

- 1) Check connected and fixed condition of connector.
- 2) Check specifications of the mark with ABSCM&H/U.

Mark	Model
C7	AT
C8	MT

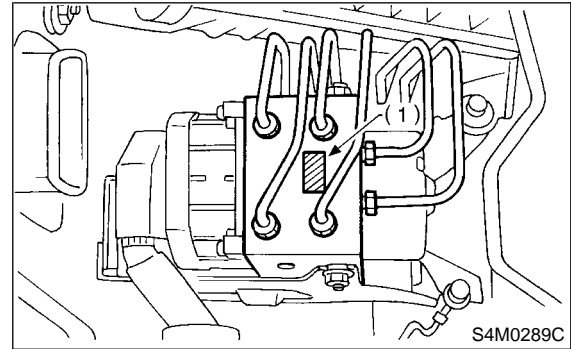

- (1) Mark

1. CHECKING THE HYDRAULIC UNIT ABS OPERATION BY PRESSURE GAUGE

S401543A1001


- 1) Lift-up vehicle and remove wheels.
- 2) Disconnect the air bleeder screws from the FL and FR caliper bodies.
- 3) Connect two pressure gauges to the FL and FR caliper bodies.

CAUTION:

- Pressure gauges used exclusively for brake fluid must be used.
- Do not employ pressure gauge previously used for transmission since the piston seal is expanded which may lead to malfunction of the brake.

NOTE:

Wrap sealing tape around the pressure gauge.

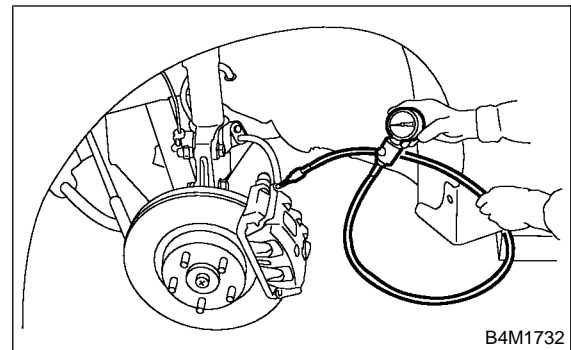


- 4) Bleed air from the pressure gauges.
- 5) Perform ABS sequence control.
<Ref. to ABS-11 ABS Sequence Control.>
- 6) When the hydraulic unit begins to work, and first the FL side performs decompression, holding, and compression, and then the FR side performs decompression, holding, and compression.
- 7) Read values indicated on the pressure gauge and check if the fluctuation of the values between decompression and compression meets the standard values. Also check if any irregular brake pedal tightness is felt.

	Front wheel	Rear wheel
Initial value	3,432 kPa (35 kg/cm ² , 498 psi)	3,432 kPa (35 kg/cm ² , 498 psi)
When decompressed	490 kPa (5 kg/cm ² , 71 psi) or less	490 kPa (5 kg/cm ² , 71 psi) or less
When compressed	3,432 kPa (35 kg/cm ² , 498 psi) or more	3,432 kPa (35 kg/cm ² , 498 psi) or more

- 8) Remove pressure gauges from FL and FR caliper bodies.
- 9) Remove air bleeder screws from the RL and RR caliper bodies.
- 10) Connect the air bleeder screws to the FL and FR caliper bodies.
- 11) Connect two pressure gauges to the RL and RR caliper bodies.
- 12) Bleed air from the pressure gauges and the FL and FR caliper bodies.
- 13) Perform ABS sequence control.
<Ref. to ABS-11 ABS Sequence Control.>
- 14) When the hydraulic unit begins to work, at first the RR side performs decompression, holding, and compression, and then the RL side performs decompression, holding, and compression.
- 15) Read values indicated on the pressure gauges and check if they meet the standard value.
- 16) After checking, remove the pressure gauges from caliper bodies.
- 17) Connect the air bleeder screws to RL and RR caliper bodies.
- 18) Bleed air from brake line.



2. CHECKING THE HYDRAULIC UNIT ABS OPERATION WITH BRAKE TESTER S401543A1002

- 1) In the case of AWD AT vehicles, install a spare fuse with the FWD connector in the main fuse box to simulate FWD vehicles.

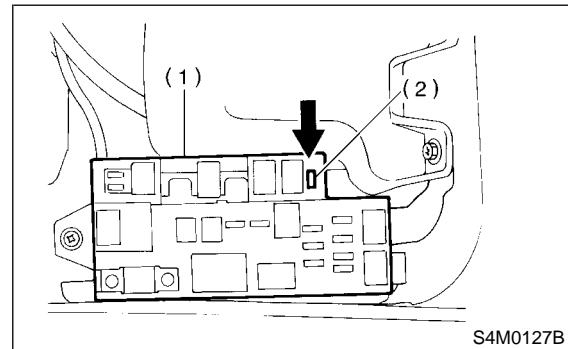

- (1) Main fuse box
- (2) FWD connector

- 2) Prepare for operating ABS sequence control.
<Ref. to ABS-11 ABS Sequence Control.>
- 3) Set the front wheels or rear wheels on the brake tester and set the select lever's position at "neutral".

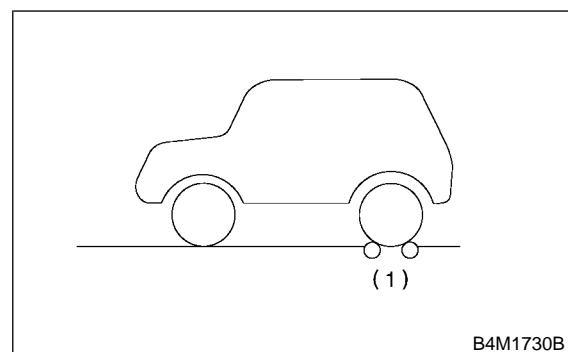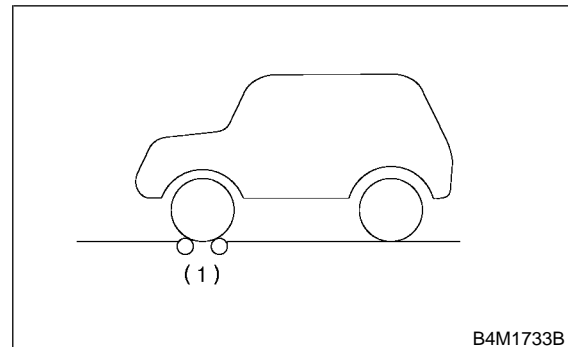

- (1) Brake tester

- 4) Operate the brake tester.
- 5) Perform ABS sequence control.
<Ref. to ABS-11 ABS Sequence Control.>

ABS CONTROL MODULE AND HYDRAULIC CONTROL UNIT (ABSCM&H/U)

ABS

6) Hydraulic unit begins to work; and check the following working sequence.

(1) The FL wheel performs decompression, holding, and compression in sequence, and subsequently the FR wheel repeats the cycle.

(2) The RR wheel performs decompression, holding, and compression in sequence, and subsequently the RL wheel repeats the cycle.

7) Read values indicated on the brake tester and check if the fluctuation of values, when decompressed and compressed, meet the standard values.

	Front wheel	Rear wheel
Initial value	981 N (100 kgf, 221 lb)	981 N (100 kgf, 221 lb)
When decompressed	490 N (50 kgf, 110 lb) or less	490 N (50 kgf, 110 lb) or less
When compressed	981 N (100 kgf, 221 lb) or more	981 N (100 kgf, 221 lb) or more

8) After checking, also check if any irregular brake pedal tightness is felt.


3. ABS Sequence Control S401187

A: OPERATION S401187A16

- 1) Under the ABS sequence control, after the hydraulic unit solenoid valve is driven, the operation of the hydraulic unit can be checked by means of the brake tester or pressure gauge.
- 2) ABS sequence control can be started by diagnosis connector or select monitor.

1. ABS SEQUENCE CONTROL WITH DIAGNOSIS CONNECTOR S401187A1601

- 1) Connect diagnosis terminals to terminals No. 5 and No. 8 of the diagnosis connector beside driver's seat heater unit.

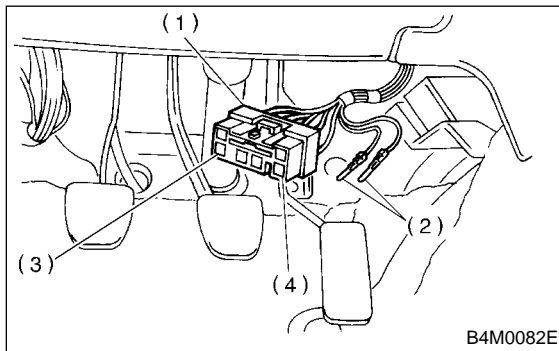

- (1) Diagnosis connector
- (2) Diagnosis terminals
- (3) 3 terminal
- (4) 6 terminal

- 2) Set the speed of all wheels at 2.75 km/h (2 MPH) or less.
- 3) Turn ignition switch OFF.
- 4) Within 0.5 seconds after the ABS warning light goes out, depress the brake pedal and hold it immediately after ignition switch is turned to ON.

CAUTION:
Do not depress the clutch pedal.

NOTE:

- When the ignition switch is set to on, the brake pedal must not be depressed.
 - Engine must not operate.
- 5) After completion of ABS sequence control, turn ignition switch OFF.

2. ABS SEQUENCE CONTROL WITH SELECT MONITOR S401187A1602

NOTE:

- In the event of any trouble, the sequence control may not be operative. In such a case, activate the sequence control, referring to "ABS SEQUENCE CONTROL WITH DIAGNOSIS CONNECTOR".

<Ref. to ABS-11 ABS SEQUENCE CONTROL WITH DIAGNOSIS CONNECTOR, OPERATION, ABS Sequence Control.>

- When the diagnosis terminal is connected to the diagnosis connector, the sequence control will not operate.

- 1) Connect select monitor to data link connector under driver's seat instrument panel lower cover.
- 2) Turn ignition switch ON.
- 3) Turn select monitor switch ON.
- 4) Put select monitor to "BRAKE CONTROL" mode.
- 5) When "Function check sequence" is selected, "ABS sequence control" will start.
- 6) The message 'Press Brake Pedal Firmly' is displayed as follows:

- (1) When using the brake tester, depress brake pedal with braking force of 981 N (100 kg, 221 lb).
- (2) When using the pressure gauge, depress brake pedal so as to make the pressure gauge indicate 3,432 kPa (35 kg/cm², 498 psi).


CAUTION:
Do not depress the clutch pedal.

- 7) When the message "Press YES" is displayed, press <<YES>> key.
- 8) Operation points will be displayed on select monitor.

ABS SEQUENCE CONTROL

ABS

3. CONDITIONS FOR ABS SEQUENCE CONTROL S401187A1603

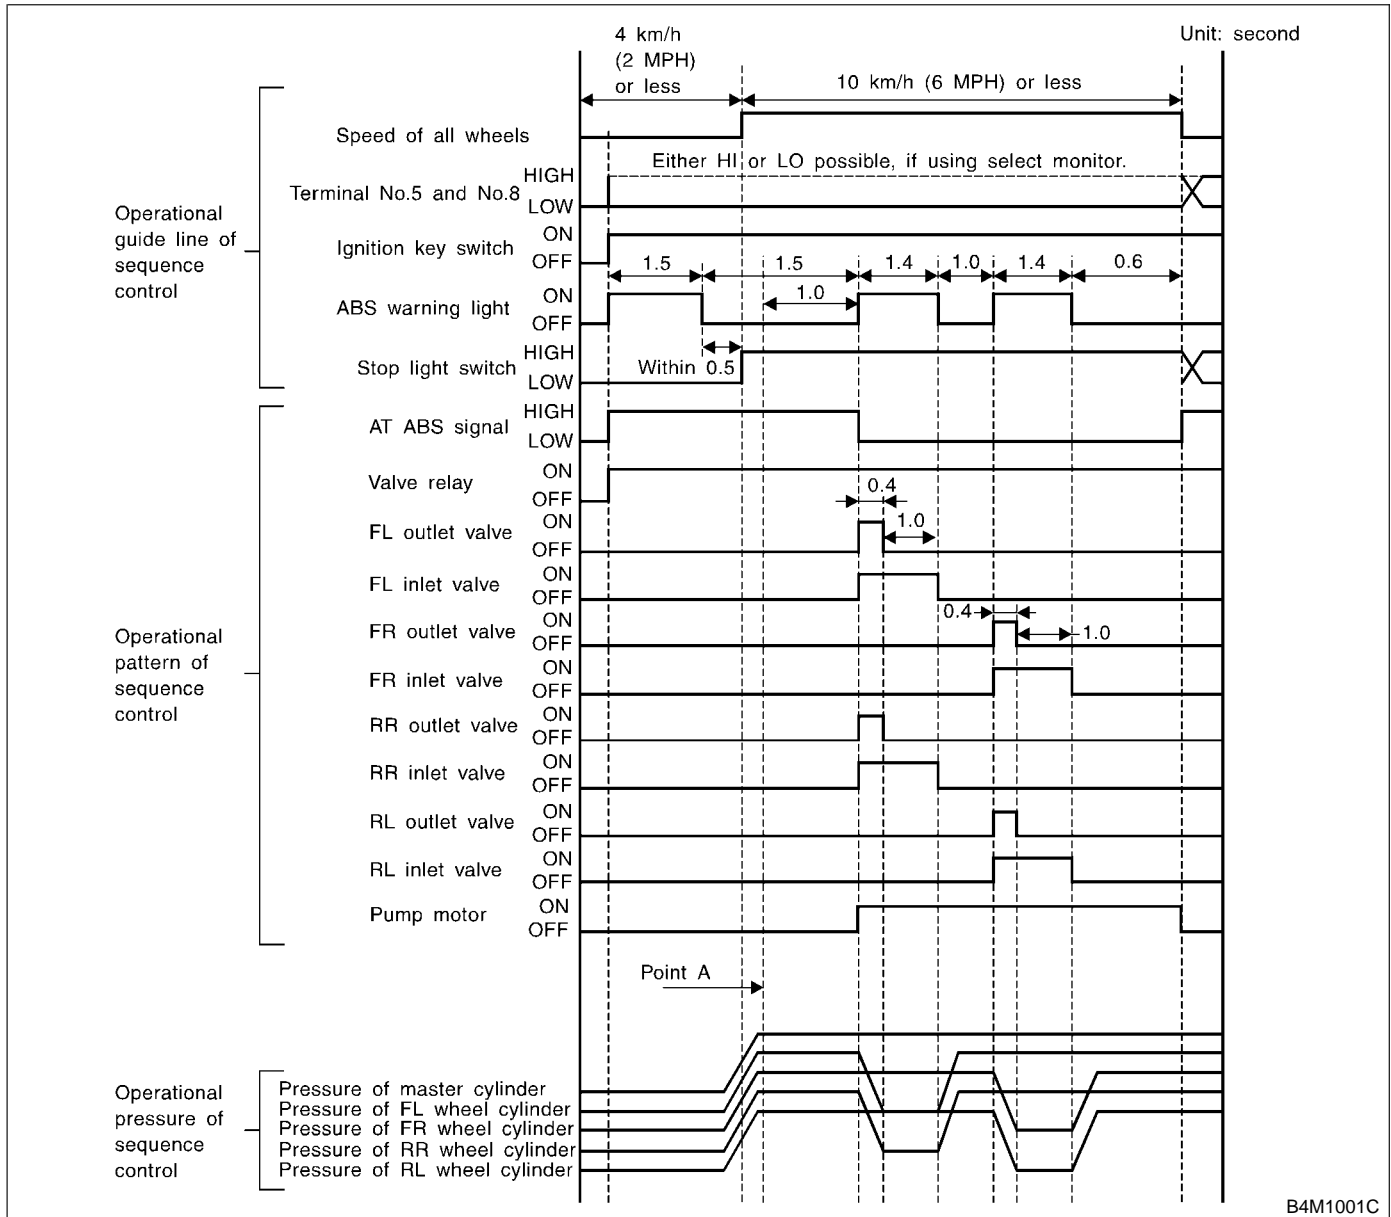

NOTE:

- When select monitor is used, control operation starts at point A. The patterns from IGN key ON to the point A show that operation is started by diagnosis connector.
- HIGH means high voltage.
- LOW means low voltage.

4. CONDITIONS FOR COMPLETION OF ABS SEQUENCE CONTROL S401187A1604


When the following conditions develop, the ABS sequence control stops and ABS operation is returned to the normal control mode.

- 1) When the speed of at least one wheel reaches 10 km/h (6 MPH).
- 2) When terminal No. 5 or No. 8 are separated from diagnosis terminals. (When select monitor is not used.)
- 3) When the brake pedal is released during sequence control and the braking lamp switch is set to off.
- 4) When brake pedal is depressed after ignition key is turned to ON, and before ABS warning light goes out. (When select monitor is not used.)
- 5) When brake pedal is not depressed after ignition key is turned to ON, and within 0.5 seconds after ABS warning light goes out. (When select monitor is not used.)
- 6) After completion of the sequence control.
- 7) When malfunction is detected. (When select monitor is used.)


4. Front ABS Sensor S401190

A: REMOVAL S401190A18

- 1) Set vehicle on a lift.
- 2) Disconnect battery ground terminal.
- 3) Loosen the wheel nuts.
- 4) Lift vehicle and remove wheels.
- 5) Disconnect front ABS sensor connector located next to front strut mounting house in engine compartment.
- 6) Remove bolts which secure sensor harness to strut.

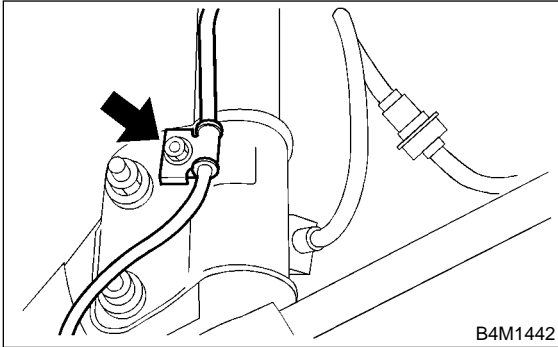

- 7) Remove bolts which secure sensor harness to body.

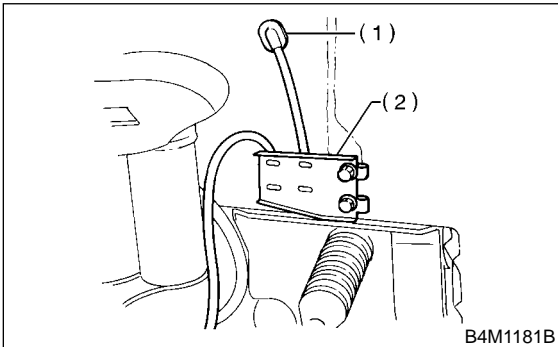


- (1) To front ABS sensor connector
- (2) Bracket

- 8) Remove bolts which secure front ABS sensor to housing, and remove front ABS sensor.

CAUTION:

- Be careful not to damage pole piece located at tip of the sensor and teeth faces during removal.
- Do not pull sensor harness during removal.

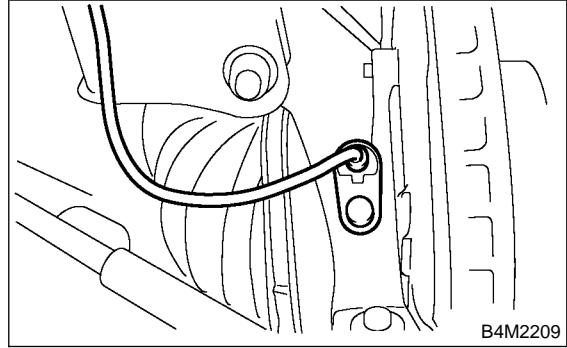


B: INSTALLATION S401190A11

1) Temporarily install front ABS sensor on housing.

CAUTION:


Be careful not to strike ABS sensor's pole piece and tone wheel's teeth against adjacent metal parts during installation.

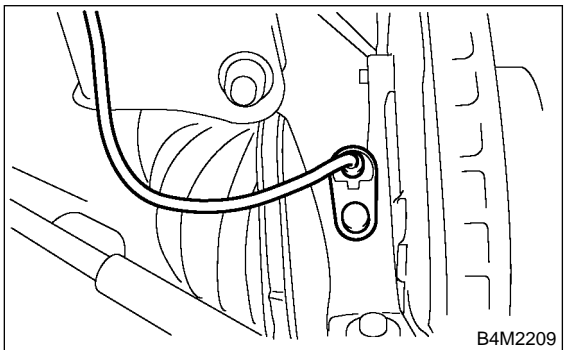

2) Install front ABS sensor on strut and wheel apron bracket.

Tightening torque:

32 N·m (3.3 kgf·m, 24 ft-lb)

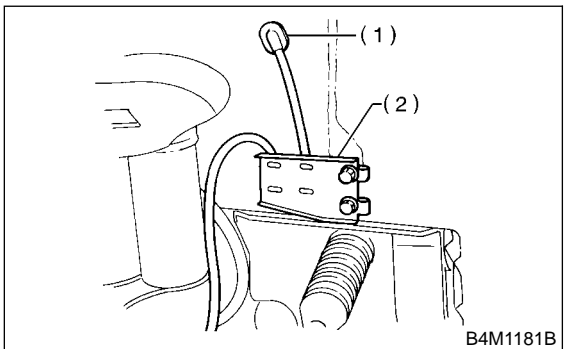

- (1) To front ABS sensor connector
- (2) Bracket


3) Place a thickness gauge between ABS sensor's pole piece and tone wheel's tooth face. After standard clearance is obtained over the entire perimeter, tighten ABS sensor on housing to specified torque.

ABS sensor standard clearance:

0.3 — 0.8 mm (0.012 — 0.031 in)

Tightening torque:

32 N·m (3.3 kgf·m, 24 ft-lb)

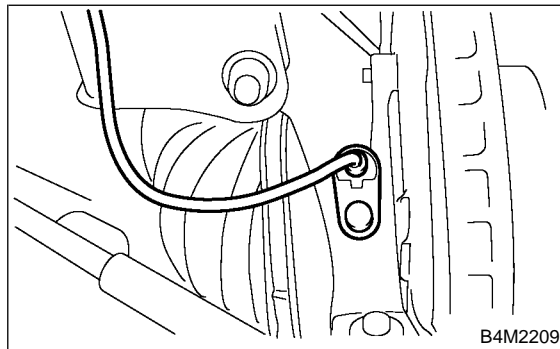

CAUTION:

Check the marks on the harness to make sure that no distortion exists.

	LH	RH
Mark	Brown	Light blue

NOTE:


If the clearance is outside specifications, readjust.

- 4) After confirmation of the ABS sensor clearance, connect connector to ABS sensor.
- 5) Install the wheels.
- 6) Connect connector to battery ground terminal.

C: INSPECTION S401190A10

1. ABS SENSOR S401190A1001

- 1) Check pole piece of ABS sensor for foreign particles or damage. If necessary, clean pole piece or replace ABS sensor.
- 2) Measure ABS sensor resistance.

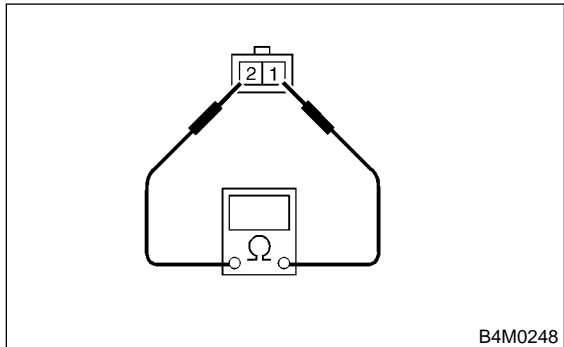

Terminal No.	Standard
1 and 2	1.25±0.25 kΩ

CAUTION:


If resistance is outside the standard value, replace ABS sensor with new one.

NOTE:

Check ABS sensor cable for discontinuity. If necessary, replace with a new one.

2. SENSOR GAP S401190A1002


- 1) Measure the distance “A” between ABS sensor surface and sensor pole face.

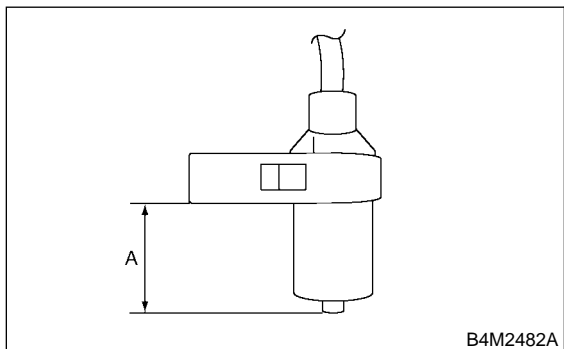

- 2) Measure the distance “B” between surface where the front axle housing meets the ABS sensor, and the tone wheel.

NOTE:

Measure so that the gauge touches the tone wheel teeth top.

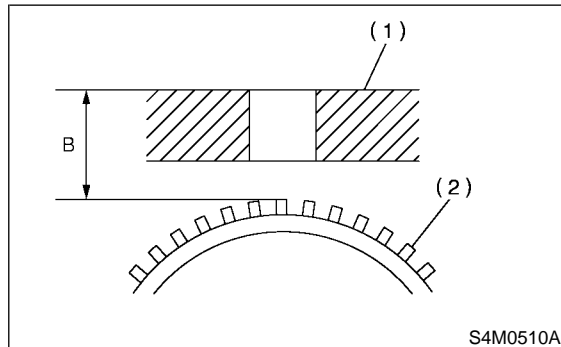

- (1) Axle housing
- (2) Tone wheel

- 3) Find the gap between the ABS sensor pole face and the surface of the tone wheel teeth by putting the measured values in the formula below and calculating.

ABS sensor clearance = B – A

ABS sensor standard clearance:

0.3 — 0.8 mm (0.012 — 0.031 in)

NOTE:

If the clearance is outside specifications, readjust.

3. OUTPUT VOLTAGE S401190A1003


Output voltage can be checked by the following method. Install resistor and condenser, then rotate wheel about 2.75 km/h (2 MPH) or equivalent.

NOTE:

Regarding terminal No., please refer to item 1. ABS SENSOR.

D: ADJUSTMENT S401190A01


Adjust the gap using spacer (Part No. 26755A000).

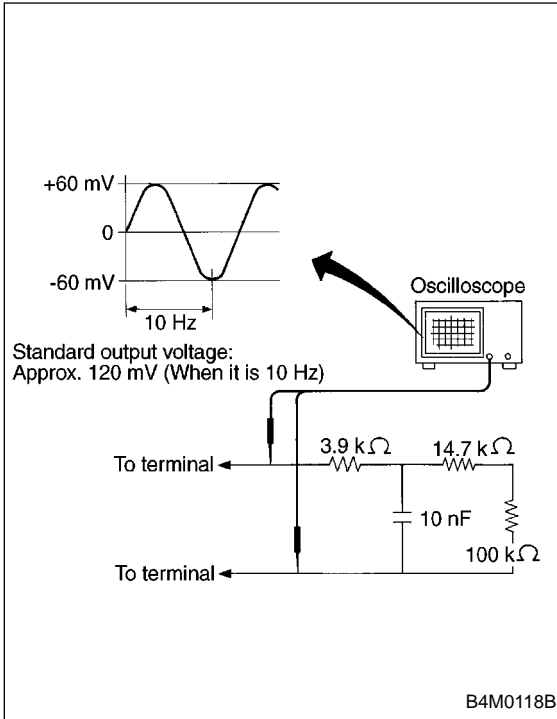

5. Rear ABS Sensor S401185

A: REMOVAL S401185A18

- 1) Set vehicle on a lift.
- 2) Disconnect battery ground terminal.
- 3) Loosen wheel nuts.
- 4) Lift vehicle, and remove wheels.
- 5) Remove rear seat and disconnect rear ABS sensor connector.
- 6) Remove rear sensor harness bracket from rear trailing link and bracket.
- 7) Remove rear ABS sensor from rear back plate.

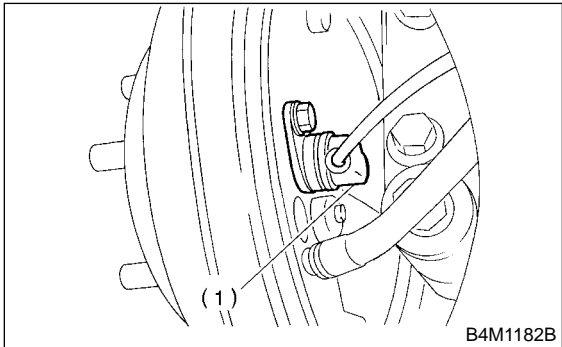


(1) Rear ABS sensor

B: INSTALLATION S401185A11

- 1) Temporarily install rear ABS sensor on back plate.

CAUTION:

Be careful not to strike ABS sensor's pole piece and tone wheel's teeth against adjacent metal parts during installation.

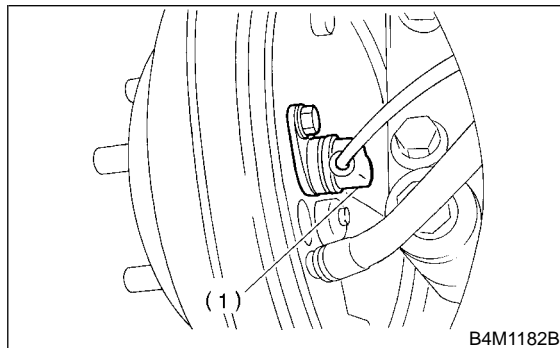


(1) Rear ABS sensor

- 2) Install rear sensor harness on rear trailing link.

Tightening torque:

32 N·m (3.3 kgf·m, 24 ft·lb)

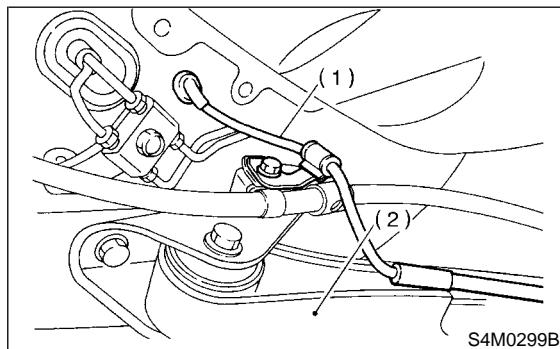

(1) Rear sensor harness
(2) Trailing link

- 3) Place a thickness gauge between ABS sensor's pole piece and tone wheel's tooth face. After standard clearance is obtained over the entire perimeter, tighten ABS sensor on back plate to specified torque.

ABS sensor standard clearance:

0.7 — 1.2 mm (0.028 — 0.047 in)

Tightening torque:

32 N·m (3.3 kgf·m, 24 ft·lb)

CAUTION:

Check the marks on the harness to make sure that no distortion exists.

	LH	RH
Mark	Blue	Pink

NOTE:


If the clearance is outside specifications, readjust.

- 4) Connect rear ABS sensor connector.
- 5) Install rear seat.
- 6) Install wheels.
- 7) Connect battery ground terminal.

C: INSPECTION S401185A10

1. ABS SENSOR S401185A1001

- 1) Check pole piece of ABS sensor for foreign particles or damage. If necessary, clean pole piece or replace ABS sensor.
- 2) Measure ABS sensor resistance.

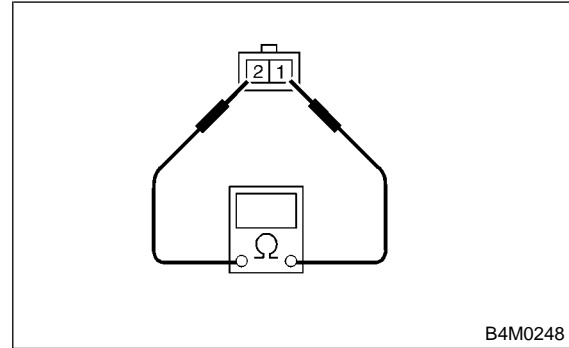

Terminal No.	Standard
1 and 2	1.0±0.2 kΩ

CAUTION:


If resistance is outside the standard value, replace ABS sensor with new one.

NOTE:

Check ABS sensor cable for discontinuity. If necessary, replace with a new one.

2. SENSOR GAP S401185A1002

Clearances (sensor gaps) should be measured one by one to ensure tone wheel and speed sensor are installed correctly.

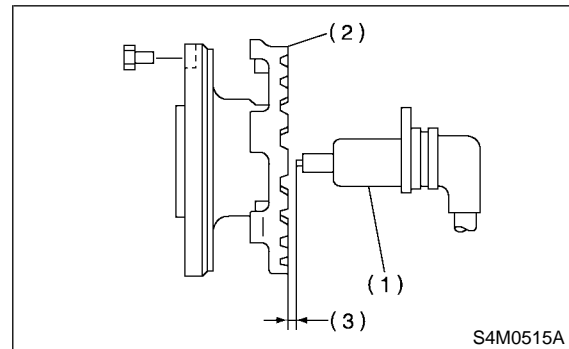

- (1) Rear ABS sensor
- (2) Rear tone wheel
- (3) Sensor gap

ABS sensor clearance:

0.7 — 1.2 mm (0.028 — 0.047 in)

NOTE:

- If clearance is narrow, adjust by using a spacer (Part No. 26755AA000).
- If clearance is wide, check the outputted voltage then replace ABS sensor or tone wheel if the outputted voltage is outside the specification.

REAR ABS SENSOR

ABS

3. OUTPUT VOLTAGE S401185A1003


Output voltage can be checked by the following method. Install resistor and condenser, then rotate wheel about 2.75 km/h (2 MPH) or equivalent.

NOTE:

Regarding terminal No., refer to item 1. ABS SENSOR.

D: ADJUSTMENT S401185A01

Adjust the gap using spacer (Part No. 26755AA000).

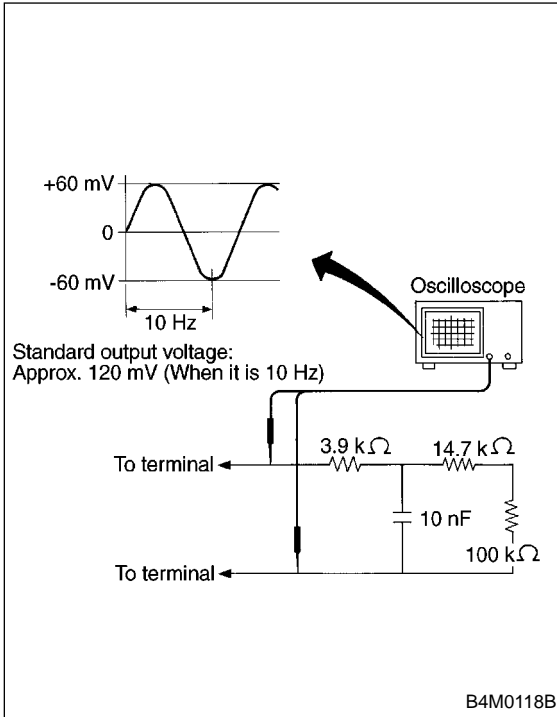

6. Front Tone Wheel S401184

A: REMOVAL S401184A18

Refer to Front Drive Shaft, because front tone wheel is integrated with front drive shaft.
<Ref. to DS-32 REMOVAL, Front Drive Shaft.>

B: INSTALLATION S401184A11

Refer to Front Drive Shaft, because front tone wheel is integrated with front drive shaft.
<Ref. to DS-32 INSTALLATION, Front Drive Shaft.>

C: INSPECTION S401184A10

Visually check tone wheels teeth (44 pieces) for cracks or dents. If necessary, replace tone wheel with a new one.

NOTE:

Replace BJ assembly with new one as a single unit if there are any defects found on tone wheel is unitized with BJ assembly of drive shaft.

7. Rear Tone Wheel S401182

A: REMOVAL S401182A18

For removal procedures of rear tone wheel, refer to "Rear Axle". <Ref. to DS-23, Rear Axle.>

B: INSTALLATION S401182A11

For installation procedures of rear tone wheel, refer to "Rear Axle". <Ref. to DS-23, Rear Axle.>


C: INSPECTION S401182A10

Visually check tone wheels teeth (44 pieces) for cracks or dents. If necessary, replace tone wheel with a new one.

8. G Sensor S401183

A: REMOVAL S401183A18


- 1) Disconnect battery ground terminal.

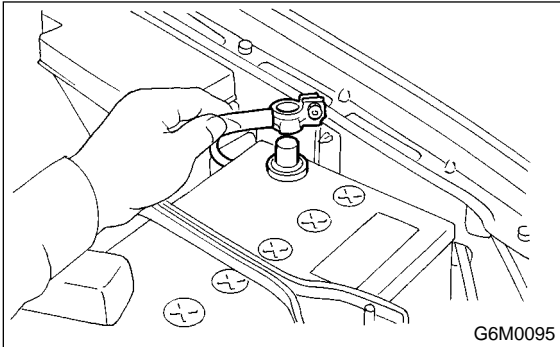

- 2) Remove console cover.
<Ref. to EI-30 Console Box.>
- 3) Disconnect connector from G sensor.
- 4) Remove G sensor from body.

CAUTION:

Do not drop or bump G sensor.

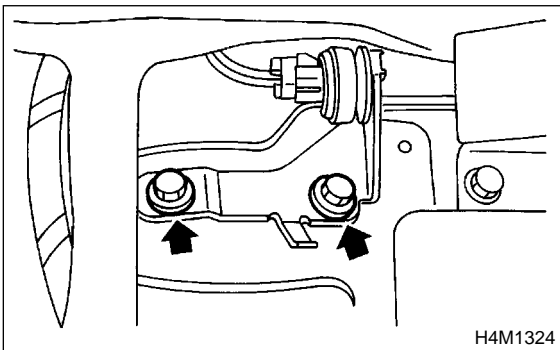

B: INSTALLATION S401183A11

Install in the reverse order of removal.

Tightening torque (G sensor):
18 N·m (1.8 kgf·m, 13.0 ft·lb)

G SENSOR

ABS

C: INSPECTION S401183A10

No.	Step	Check	Yes	No
1	CHECK SUBARU SELECT MONITOR.	Do you have SUBARU SELECT MONITOR?	Go to step 5.	Go to step 2.
2	CHECK G SENSOR. 1) Turn ignition switch to OFF. 2) Remove G sensor from vehicle. 3) Connect connector to G sensor. 4) Turn ignition switch to ON. 5) Measure voltage between G sensor connector terminals. Connector & terminal: (R70) No. 2 (+) — No. 3 (-)	Is the voltage 2.3 ± 0.2 V when G sensor is horizontal?	Go to step 3.	Replace G sensor.
3	CHECK G SENSOR. Measure voltage between G sensor connector terminals. Connector & terminal: (R70) No. 2 (+) — No. 3 (-)	Is the voltage 3.9 ± 0.2 V when G sensor is inclined forwards to 90° ?	Go to step 4.	Replace G sensor.
4	CHECK G SENSOR. Measure voltage between G sensor connector terminals. Connector & terminal: (R70) No. 2 (+) — No. 3 (-)	Is the voltage 0.7 ± 0.2 V when G sensor is inclined backwards to 90° ?	G sensor is normal.	Replace G sensor.
5	CHECK G SENSOR. 1) Turn ignition switch to OFF. 2) Connect select monitor connector to data link connector. 3) Turn select monitor into {BRAKE CONTROL} mode. 4) Set the display in the {Current Data Display & Save} mode. 5) Read the G sensor output voltage.	Is the indicated reading 2.3 ± 0.2 V when the vehicle is in horizontal position?	Go to step 6.	Replace G sensor.
6	CHECK G SENSOR. 1) Remove console box. 2) Remove G sensor from vehicle. (Do not disconnect connector.) 3) Read the select monitor display.	Is the indicated reading 3.9 ± 0.2 V when G sensor is inclined forwards to 90° ?	Go to step 7.	Replace G sensor.
7	CHECK G SENSOR. Read the select monitor display.	Is the indicated reading 0.7 ± 0.2 V when G sensor is inclined backwards to 90° ?	G sensor is normal.	Replace G sensor.