

## FUEL LEVEL SENSOR

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---

### 7. Fuel Level Sensor

#### A: REMOVAL

For removal procedure, refer to “FU(H4DOTC)” section. <Ref. to FU(H4DOTC)-57, REMOVAL, Fuel Level Sensor.>

#### B: INSTALLATION

For installation procedure, refer to “FU(H4DOTC)” section. <Ref. to FU(H4DOTC)-57, INSTALLATION, Fuel Level Sensor.>