

# SHUT VALVE

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---


## 15. Shut Valve

### A: REMOVAL


#### WARNING:

- Place “NO FIRE” signs near the working area.
- Be careful not to spill fuel.

- 1) Remove the fuel filler pipe. <Ref. to FU(H4DOTC)-50, REMOVAL, Fuel Filler Pipe.>
- 2) Disconnect the evaporation hoses from shut valve.

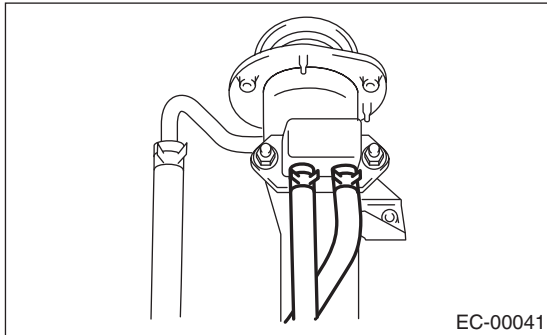

- 3) Remove the shut valve from fuel filler pipe.

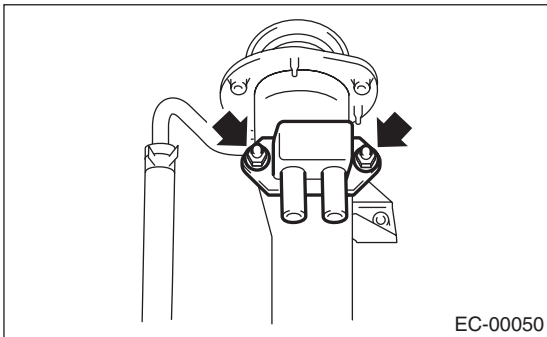


### B: INSTALLATION

Install in the reverse order of removal.

#### Tightening torque:

**4.5 N·m (0.46 kgf·m, 3.3 ft·lb)**

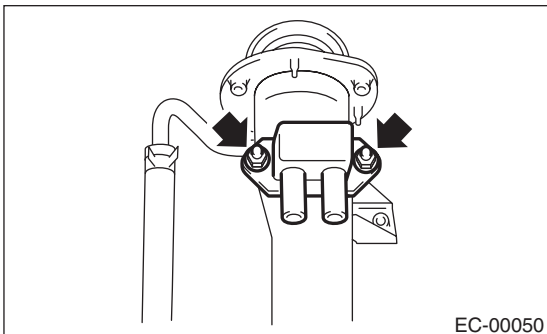

### C: INSPECTION

Make sure the hoses are not cracked or loose.